


Quick Installation Guide

4G LTE Mobile Wi-Fi M7350


Install the SIM Card and Battery •

Connect to the Internet


1 Remove the back cover.

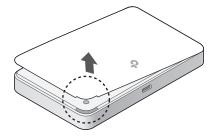

3 Install the provided battery.

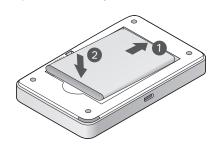

2 Insert the SIM card.

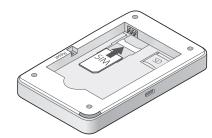

- A micro or nano SIM card must be converted using the SIM card adapter provided.
- The SD card slot can be used for storage and media sharing.
- The SIM card and SD card are not provided.

4 Replace the cover.



1 Press and hold the ψ button until the welcome screen appears.



- ① To power off, press and hold the ψ button until "Power Off" appears.
- 2 You will find the following messages on the screen. Follow the instructions to connect to the Mobile Wi-Fi.



Press the **MENU** button twice and then press the **(b)** button to select **Device Info**. Use the **SSID** and **Password** shown on the screen to connect to your Mobile Wi-Fi.





- ① If other messages display on the screen, refer to FAQ > Q3.
- By default, Power Saving is enabled and the Mobile Wi-Fi will turn off the Wi-Fi connection if no wireless devices are connected to the Mobile Wi-Fi for 10 minutes. Press the ψ or MENU button to resume the Wi-Fi connection.

Home Screen

Press to enter the Menu screen.



Press to turn on/off the screen display.

Signal Strength

Network Type and 4G/3G/2G Internet Connection

Data Roaming

Message

Wi-Fi Status and Connected Wi-Fi Devices

80% Battery Life

560мв Cumulative Data Usage

Download Speed

5.0m/s↓

Menu Screen

Select the icons to view and customize various functions.

Press to switch between icons.



Press to select an icon.

Device Info

Power Saving

Data Roaming

Network Mode

App Download

tpMiFi App

Download the tpMiFi app to conveniently manage your Mobile Wi-Fi.

Modify Wi-Fi settings



Send and receive SMS



Manage power



Share files on the SD card



Block devices

How to start?

- 1. Search for the tpMiFi app from App Store or Google Play, or scan the QR code.
- 2. Connect your wireless device to the Mobile
- 3. Launch tpMiFi and enter admin to log in.




Charging Your Mobile Wi-Fi


Method 1

Via a Wall Outlet (Recommended)

Method 2

  Via a Computer





- When + on the battery icon disappears, the Mobile Wi-Fi is fully charged.
- The power adapter is not provided by TP-Link.

FAQ (Frequently Asked Questions)

Q1. Is there an alternative way to manage the Mobile Wi-Fi besides the tpMiFi app?

- A. You can manage the Mobile Wi-Fi by using its web management page.
- 1. Connect your wireless device to the Mobile Wi-Fi.
- 2. Launch a web browser and visit http://tplinkmifi.net or http://192.168.0.1. Enter admin to log in.

Q2. What should I do if I cannot log in to the web management page?

- Verify that your device is connected to the Mobile Wi-Fi.
- Verify that you have entered http://tplinkmifi.net or http://192.168.0.1 correctly.
- Verify that your computer is set to obtain an IP address automatically.

Q3. What should I do when one of the following messages appears on the screen or I cannot access internet?

A1. PIN Required

• Refer to Q1 to log in to the web management page on your phone. Enter the PIN provided by your mobile carrier.

A2. No SIM Card

• Power off the Mobile Wi-Fi and reinstall the SIM card.

A3. No Service

- Verify that your SIM card is an LTE, WCDMA or GSM SIM card.
- Verify that your SIM card is in your carrier's service area and has sufficient credit.
- Refer to Q1 to log in to the web management page on your phone. Go to Dial-up > View profile details and verify the parameters (i.e. APN, username and password) provided by your mobile carrier are correct. If they are not correct, return to the Dial-up page and create a new profile with the correct information. Then choose the new profile from the profile list.

• From the Menu screen, go to Data Roaming and turn on Data Roaming.

Q4. What should I do if my internet speed is slow?

A. From the Menu screen, go to Network Mode and try a different network.

Q5. How do I restore the Mobile Wi-Fi to its factory default settings?

- A. With the Mobile Wi-Fi powered on, remove the cover, and use a pin to press and hold the RESET button until "Power Off" appears on the screen.
 - Note: Restoring the Mobile Wi-Fi to its factory defaults will clear all previous settings and you will need to reconfigure it.

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use damaged charger or USB cable to charge the device. • Do not use any other chargers than those recommended.
- Do not use the device where wireless devices are not allowed.
- Do not disassemble, crush, puncture, short external contacts, or dispose of the battery in fire or water. CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

