



User Guide

VIGI Security Manager

About This Guide

This User Guide provides information for centrally managing cameras and network video recorders via VIGI Security Manager. Please read this guide carefully before operation.

Conventions

When using this guide, notice that:

- Features available in VIGI Security Manager may vary due to your region, device model, and firmware version. All images, steps, and descriptions in this guide are only examples and may not reflect your actual experience.
- The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind, express or implied. Users must take full responsibility for their application of any products.
- This guide uses the specific formats to highlight special messages. The following table lists the conventions that are used throughout this guide.

<u>Underlined</u>	Indicates hyperlinks. You can click to redirect to a website or a specific section.
Bold	Indicates contents to be emphasized and texts on the web page, including the menus, tabs, buttons and so on.
>	The menu structures to show the path to load the corresponding page.
 Caution	Reminds you to be cautious, and Ignoring this type of note might result in device damage or data loss.
Note	Indicates information that helps you make better use of your device.

More Information

- For technical support, the latest version of the User Guide and other information, please visit <https://www.tp-link.com/support>.
- To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.

Contents

About This Guide

Get Started with VIGI Security Manager 1

- 1.1 Install VIGI Security Manager 2
- 1.2 Determine the Network Topology 3

Add Devices to VIGI Security Manager 5

- 2.1 Add Devices in Local Network 6
 - 2.1.1 Add Devices to VIGI Security Manager When TP-Link ID isn't Logged in 6
 - 2.1.2 Add Devices to VIGI Security Manager When TP-Link ID is Logged in 16
- 2.2 Add Devices Remotely 19

TP-Link ID Management 22

- 3.1 Log In with Your TP-Link ID 23
- 3.2 Manage Your TP-Link ID 25
- 3.3 Change the Password 27
- 3.4 Log Out the TP-Link ID 27

Live View 28

- 4.1 Configure the Screen Layout 29
 - 4.1.1 Enable/Disable Live View 29
 - 4.1.2 Rearrange the Layout 31
- 4.2 Configure Live View Settings 32
 - 4.2.1 Configure Live View Settings via Toolbar 32
 - 4.2.2 Configure Live View Settings for a Single Camera 33
- 4.3 Add and Manage Groups 34
 - 4.3.1 Add Groups 34
 - 4.3.2 Manage Groups 35

Playback 38

- 5.1 Playback the Recordings 39
- 5.2 Playback Operations 40
 - 5.2.1 Basic Playback Operations 41
 - 5.2.2 Edit Recordings 42

Recording and Storage	45
6.1 Arrange Schedules for a Single Camera.....	46
6.1.1 Customize Schedule Template	46
6.1.2 Configure Storage Settings.....	49
6.1.3 Configure Recording Schedule and View Storage Settings	51
6.2 Storage Management	53
6.3 Export Recordings.....	53
6.4 File Settings	57
6.5 Export Format	58
 Configure Your Cameras and NVRs	 59
7.1 View Device Information.....	60
7.1.1 View Device Information.....	61
7.1.2 View System Logs (Only for Cameras)	62
7.2 Configure Basic Information.....	62
7.3 Configure Display Information.....	63
7.3.1 Configure Image Effects.....	63
7.3.2 Configure Privacy Mask	67
7.3.3 Configure OSD.....	67
7.4 Configure Video	68
7.4.1 Configure Stream Settings.....	69
7.4.2 Configure ROI (Only for Cameras).....	70
7.5 Configure Events (Only for Cameras)	70
7.5.1 Configure Basic Events.....	71
7.5.2 Configure Smart Events.....	72
7.5.3 Configure Exception Event	76
7.6 Configure Network Settings.....	77
7.6.1 Basic and Advanced Network Configuration.....	77
7.6.2 Configure Port Number (Only for Cameras).....	78
7.6.3 Configure Port Forwarding (Only for Cameras).....	79
7.6.4 Configure IP Restriction (Only for Cameras).....	80
7.6.5 Configure Multicast (Only for Cameras).....	81
7.7 Cloud Service	82
7.8 Configure System Settings.....	85
7.8.1 Configure Basic Settings.....	86
7.8.2 Configure Time Settings.....	87
7.8.3 Reboot Device	88
7.9 Upgrade the Firmware	90

7. 10 Remove Devices91

System Management.....92



Get Started with VIGI Security Manager

This chapter guides you on how to install VIGI Security Manager and choose the network topology based on your needs. VIGI Security Manager offers easy and efficient management for security cameras and VIGI Network Video Recorder. This chapter includes the following sections:

- [Install VIGI Security Manager](#)
- [Determine the Network Topology](#)

With a reliable network management platform powered by VIGI Security Manager, you can watch the live view and playback, add devices, configure events, set recording and storage schedule for cameras, and export recordings to your computer.

♥ 1.1 Install VIGI Security Manager

VIGI Security Manager is provided only for Windows operating systems. Make sure your PC's system meet the following requirements, then properly install the VIGI Security Manager.

■ System Requirement

Operating System: WinXP/Win7/Win8/Win8.1/Win10. (We recommend that you deploy VIGI Security Manager on a 64-bit operating system to guarantee the software stability.)


■ Install VIGI Security Manager

Download the installation file of VIGI Security Manager from the [website](#). Then follow the instructions to properly install the VIGI Security Manager. After a successful installation, a shortcut icon  of the VIGI Security Manager will be created on your desktop.

♥ 1.2 Determine the Network Topology


The network topology that you create for VIGI Security Manager varies depending on your requirements. The following figures show two typical application scenarios.

■ Use VIGI Security Manager in Local Network

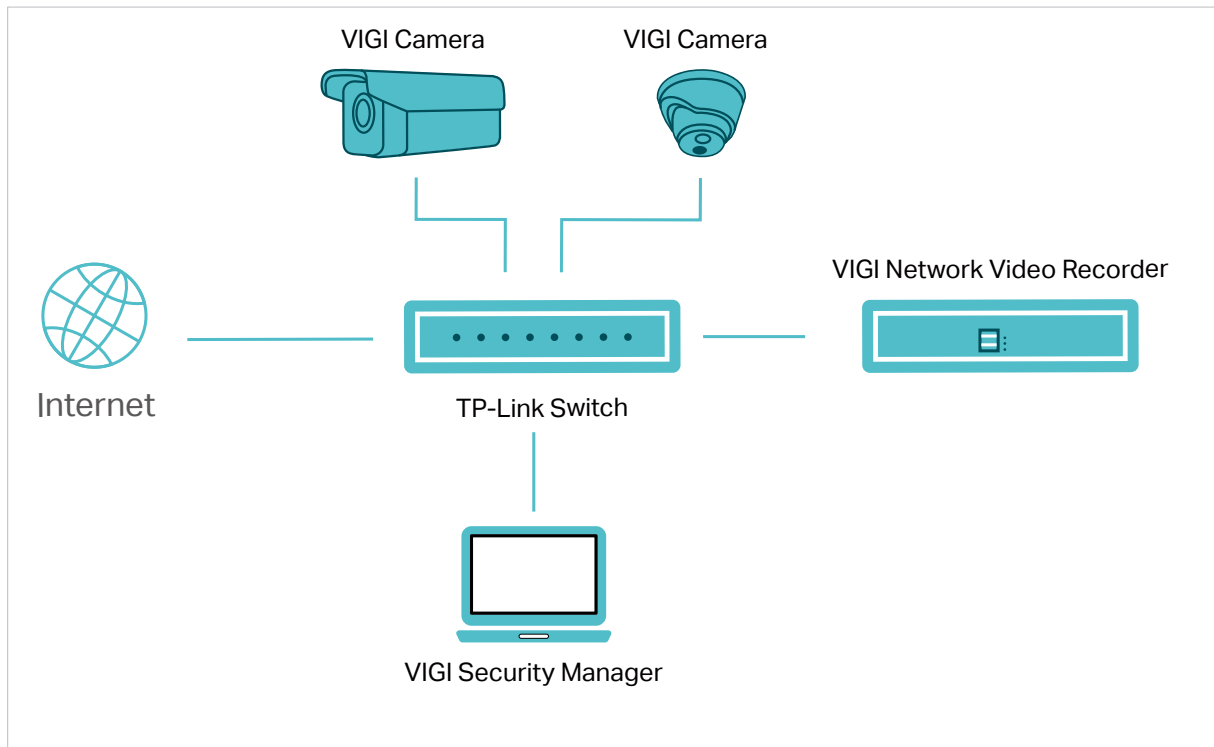

When the computer is in the same subnet as your cameras and VIGI Network Video Recorder, download and install VIGI Security Manager on your computer to watch the live view and playback, add devices from the discovered list, manage devices, set recording and storage schedule for cameras and export recordings to your computer.

■ Use VIGI Security Manager Remotely

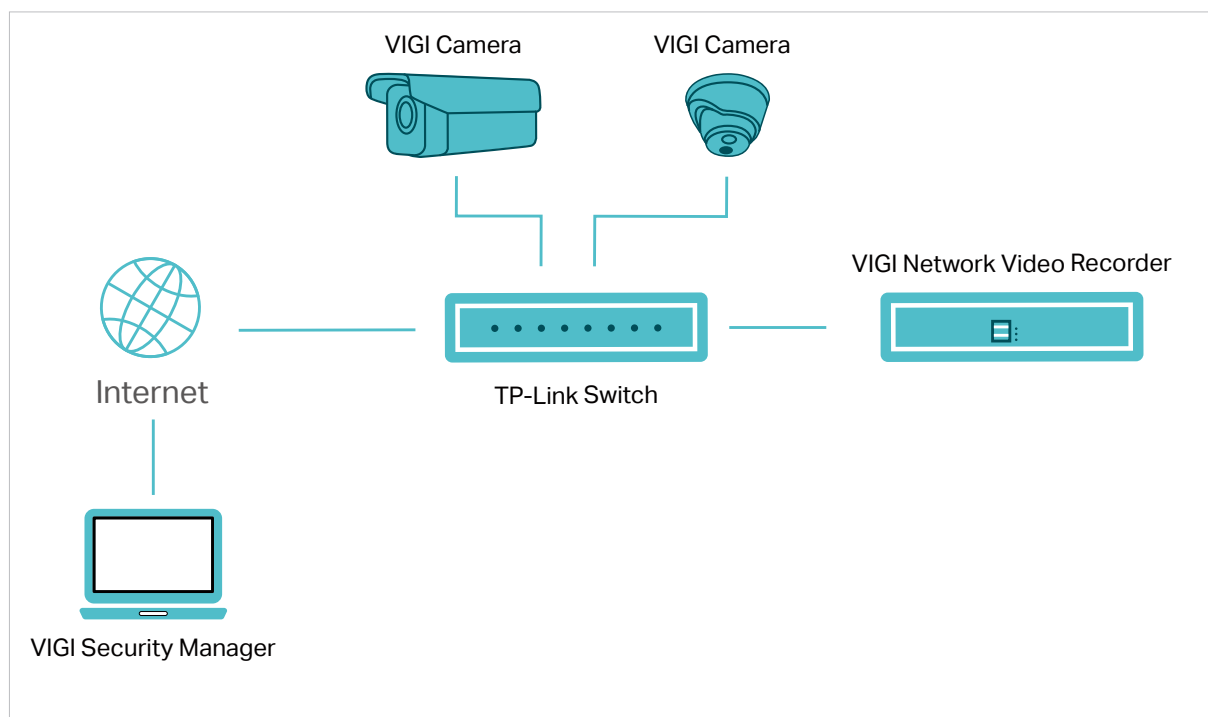

If you want to monitor your home or office while away, you can download and install VIGI Security Manager on a computer connected to the internet, then log in to your TP-Link ID. With the cameras or the VIGI network video recorder bound to your TP-Link ID, you can watch the live view and playback.

2

Add Devices to VIGI Security Manager

This chapter guides you on how to add cameras and VIGI NVRs to VIGI Security Manager. You can add cameras and VIGI NVRs locally and remotely based on your needs. This chapter includes the following sections:

- [Add Devices in Local Network](#)
- [Add Devices Remotely](#)

♥ 2.1 Add Devices in Local Network


To add NVRs and cameras locally, ensure that your devices should be in the same subnet as your computer.

2.1.1 Add Devices to VIGI Security Manager When TP-Link ID isn't Logged in

Choose one of the methods below ([Add Devices Singly](#), [Add Devices in Batches](#), [Add Devices Manually](#)) and follow the steps to add your devices.

■ Add Devices Singly

1. Go to [Settings](#) > [Device List](#) > [Discovered Devices](#) and click [+](#) in the list.

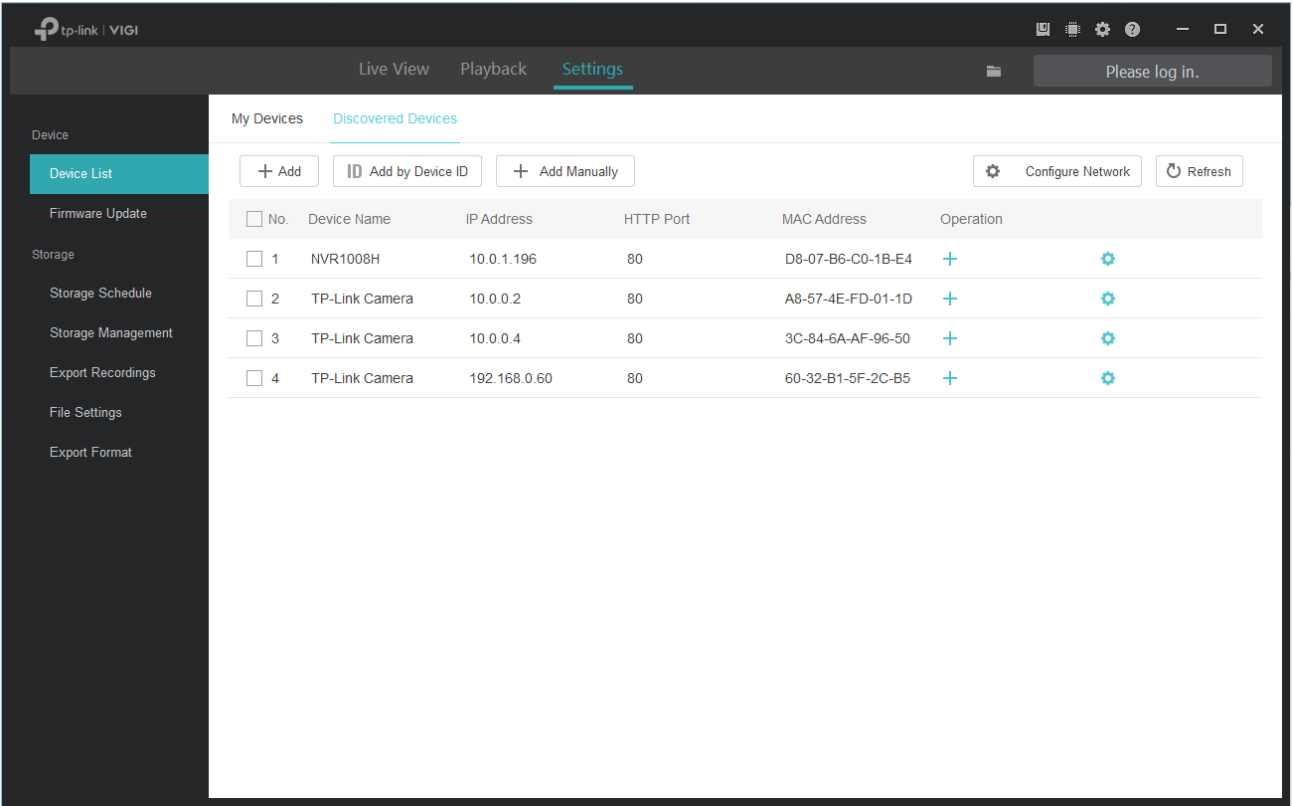

Configure Network

Set the IP address, gateway and subnet mask of your device.

Refresh

Click **Refresh** to refresh the device list.

2. Enter the password of your device. VIGI Security Manager can automatically detect the IP address and port number of the device, and you can keep them as default. Click **Verify**.

Add Device [X]

1 Verify Device 2 Complete

Enter the device password and port number to add your device.

Username: admin

Password: [masked] [Forgot Password]

IP Address: 10.0.0.3

Port Number: 80

Verify

Note:

- For the camera with no password, you need to set a password and a password reset email to enhance the security before adding it.

Add Device [X]

1 Verify Device 2 Complete

1 device(s) has no password. Please set a password to enhance the security.

Username: admin

Password: New Password [Forgot Password]

Confirm Password: Confirm New Password [Forgot Password]

Password Reset Email: Please enter your Email address [Help]

Next

Username	Displays the username of the camera.
Password	Set the password of the camera.
Confirm Password	Confirm the password of the camera.
Password Reset Email	Set the email address for resetting the camera's password.

- For the NVR that has not been used, create a login password on NVR itself and set it up first before adding it.
3. (Only for cameras) If you don't want to save the recordings of your camera to your computer, directly click **Confirm**.

Add Device

1 Verify Device

2 Set Recordings

3 Complete

Enable Record on Computer to save the recordings to the computer.

Record on Computer ☐ Enable

Confirm

If you want to save the recordings of your camera to your computer, you can click the checkbox of **Enable Record on Computer**. Configure the following parameters and click **Confirm**.

Add Device

1 Verify Device

2 Set Recordings

3 Complete

Enable Record on Computer to save the recordings to the computer.

Record on Computer ☒ Enable

Schedule 24/7 Recording

Change

Storage Location Computer C:\Users\admin\AppData\Roaming\TP-Link

Browse

Free Space: 31 GB

Storage 2 GB

Loop Recording ☒ Enable

Resolution ☒ HQ ☐ LQ

Confirm

Schedule

Click

Change

 to customize the recording schedule of the camera on computer. It determines the time period for camera recording.

Storage Location

Click

Browse

 to select the storage location of files.

Storage

Set the storage space for storing the recordings on your computer. The storage space you set should be less than the free space on your computer.


Loop Recording

Click the checkbox to enable loop recording. It allows your camera to overwrite old files with new files.


Resolution


Select the recording resolution. HQ and LQ refers to the high and low recording resolution respectively.

- Wait for the device to be added, then click **OK**.

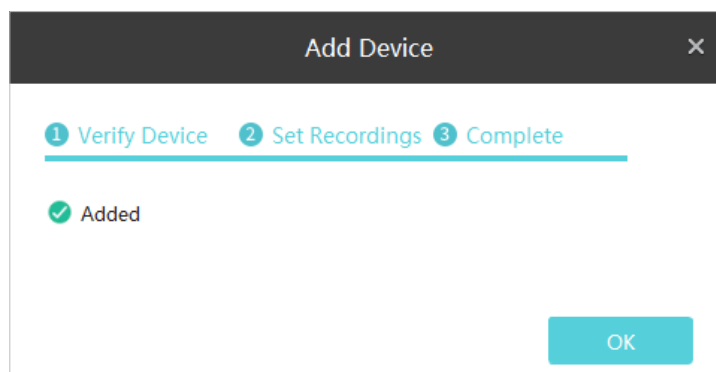


■ Add Devices in Batches

 - Go to **Settings > Device List > Discovered Devices**, select the devices you want and click  **Add**.

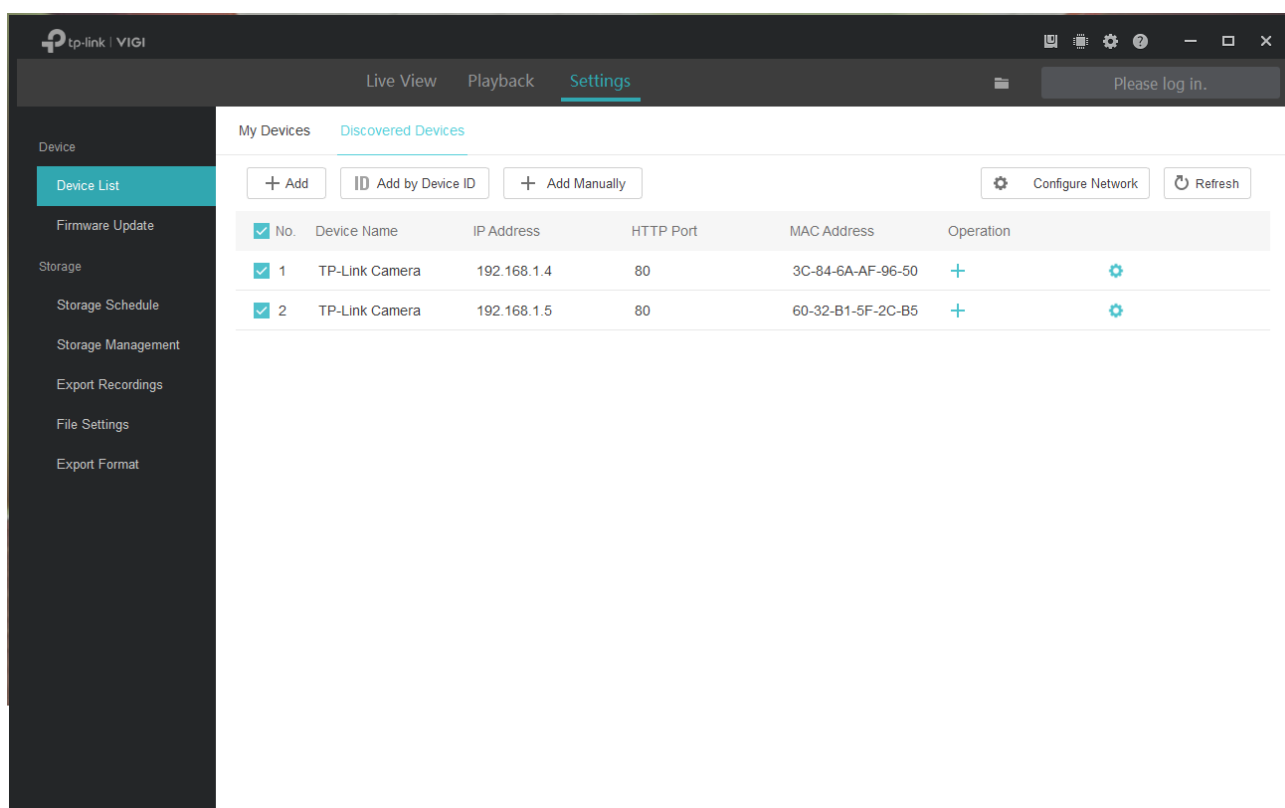

2. Enter the password of your devices. Click **Continue**.

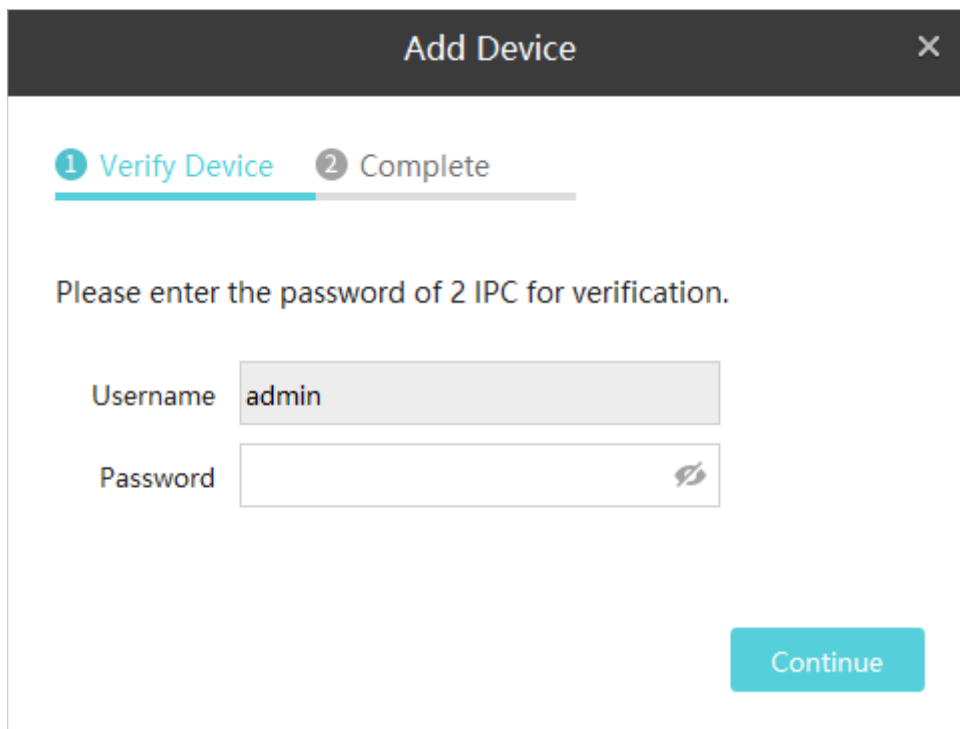


The screenshot shows a modal window titled "Add Device" with a close button (X) in the top right corner. Below the title bar, there is a progress bar with two steps: "1 Verify Device" (highlighted in blue) and "2 Complete". Below the progress bar, the text reads "Please enter the password of 2 IPC for verification." There are two input fields: "Username" with the value "admin" and "Password" which is empty. A small icon of a key and a lock is visible next to the password field. A blue "Continue" button is located at the bottom right of the dialog.

Note:


- If you can't add devices in batches, try adding your devices separately instead.
- For the camera with no password, you need to set a password and a password reset email to enhance the security before adding it.
- For the NVR that has not been used, create a login password on NVR itself and set it up first before adding it.

3. Click **Next** after the devices are verified.

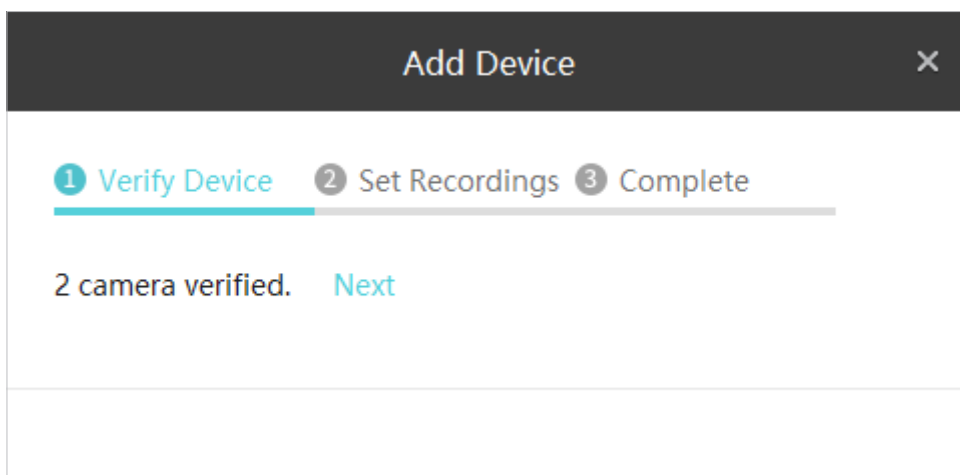

The screenshot shows the same "Add Device" modal window. The progress bar now has three steps: "1 Verify Device" (highlighted in blue), "2 Set Recordings", and "3 Complete". Below the progress bar, the text reads "2 camera verified." followed by a blue "Next" button.

4. (Only for cameras) If you don't want to save the recordings of your camera to your computer, directly click **Confirm**.

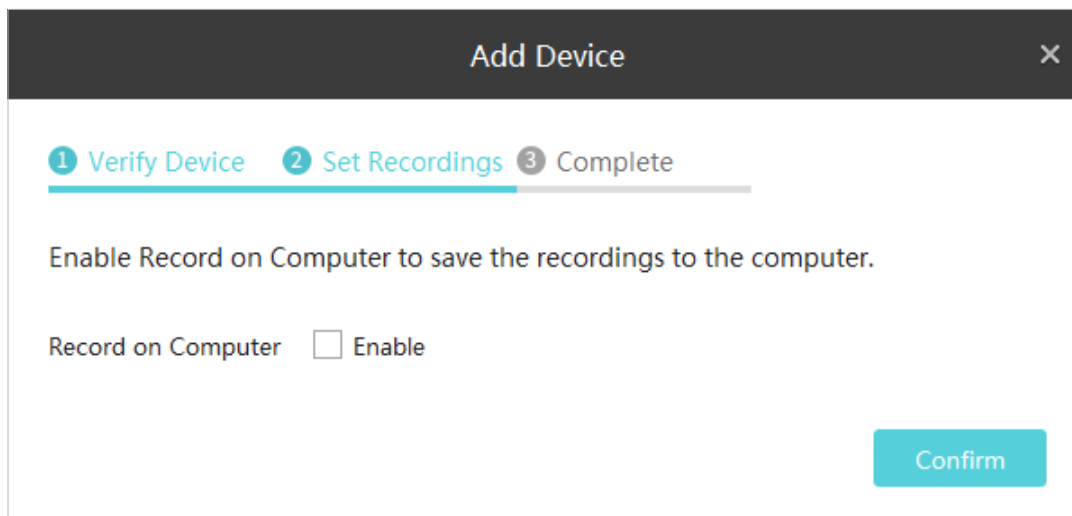

Add Device [X]


1 Verify Device 2 Set Recordings 3 Complete

Enable Record on Computer to save the recordings to the computer.

Record on Computer ☐ Enable

Confirm

If you want to save the recordings of your camera to your computer, you can click the checkbox of **Enable Record on Computer**. Configure the following parameters and click **Confirm**.

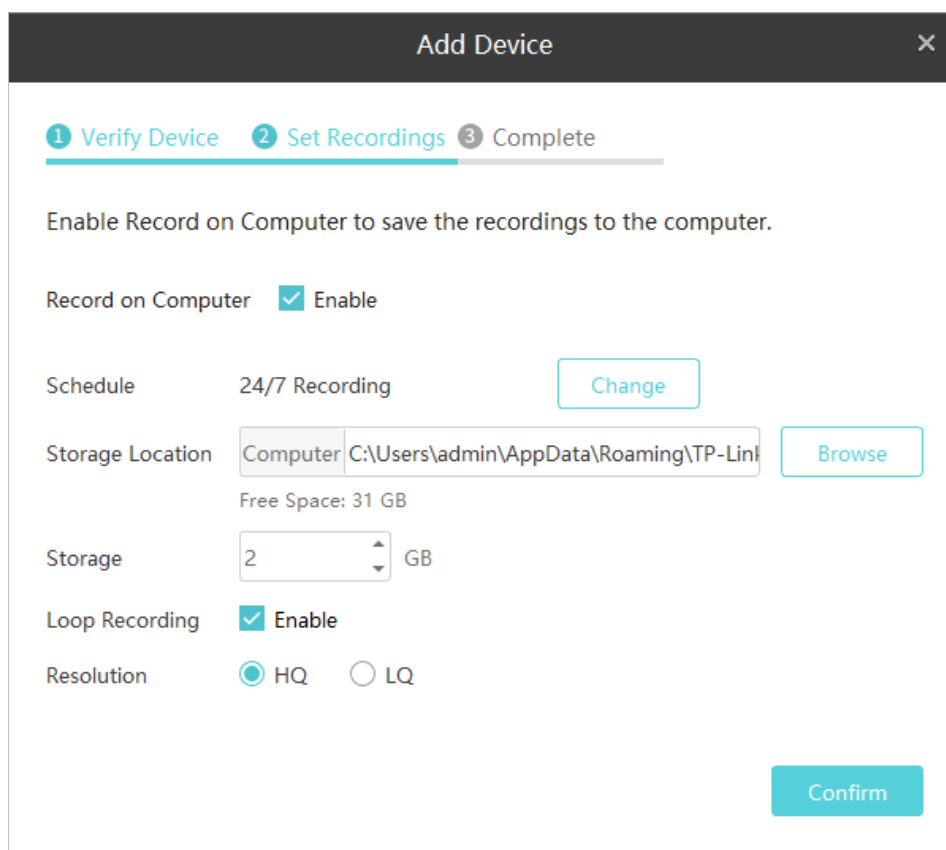

Add Device [X]

1 Verify Device 2 Set Recordings 3 Complete

Enable Record on Computer to save the recordings to the computer.

Record on Computer ☒ Enable

Schedule 24/7 Recording [Change]

Storage Location Computer C:\Users\admin\AppData\Roaming\TP-Lin... [Browse]

Free Space: 31 GB

Storage 2 GB

Loop Recording ☒ Enable

Resolution ☒ HQ ☐ LQ

Confirm

Schedule


Click [Change] to customize the recording schedule of the camera on computer. It determines the time period for camera recording.

Storage Location

Click [Browse] to select the storage location of files.


Storage	Set the storage space for storing the recordings on your computer. The storage space you set should be less than the free space on your computer.
Loop Recording	Click the checkbox to enable loop recording. It allows your camera to overwrite old files with new files.
Resolution	Select the recording resolution. HQ and LQ refers to the high and low recording resolution respectively.

- Wait for the device to be added, then click **OK**.

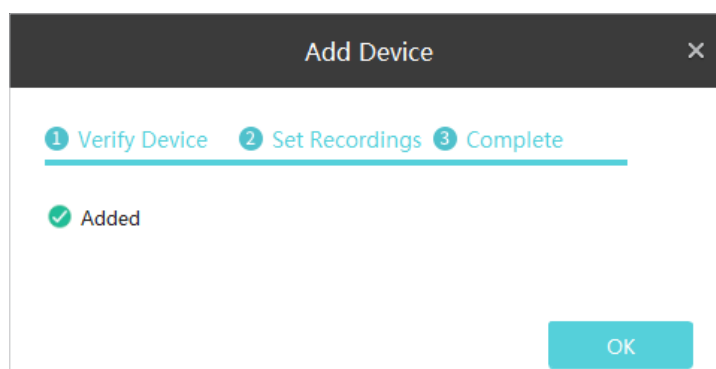


■ Add Devices Manually

- Go to **Settings > Device List > Discovered Devices** and click **+ Add Manually**.
- Select the device type, and enter the IP address/Domain name and port number of your device. By default, the port number is 80. Then click **Add**.

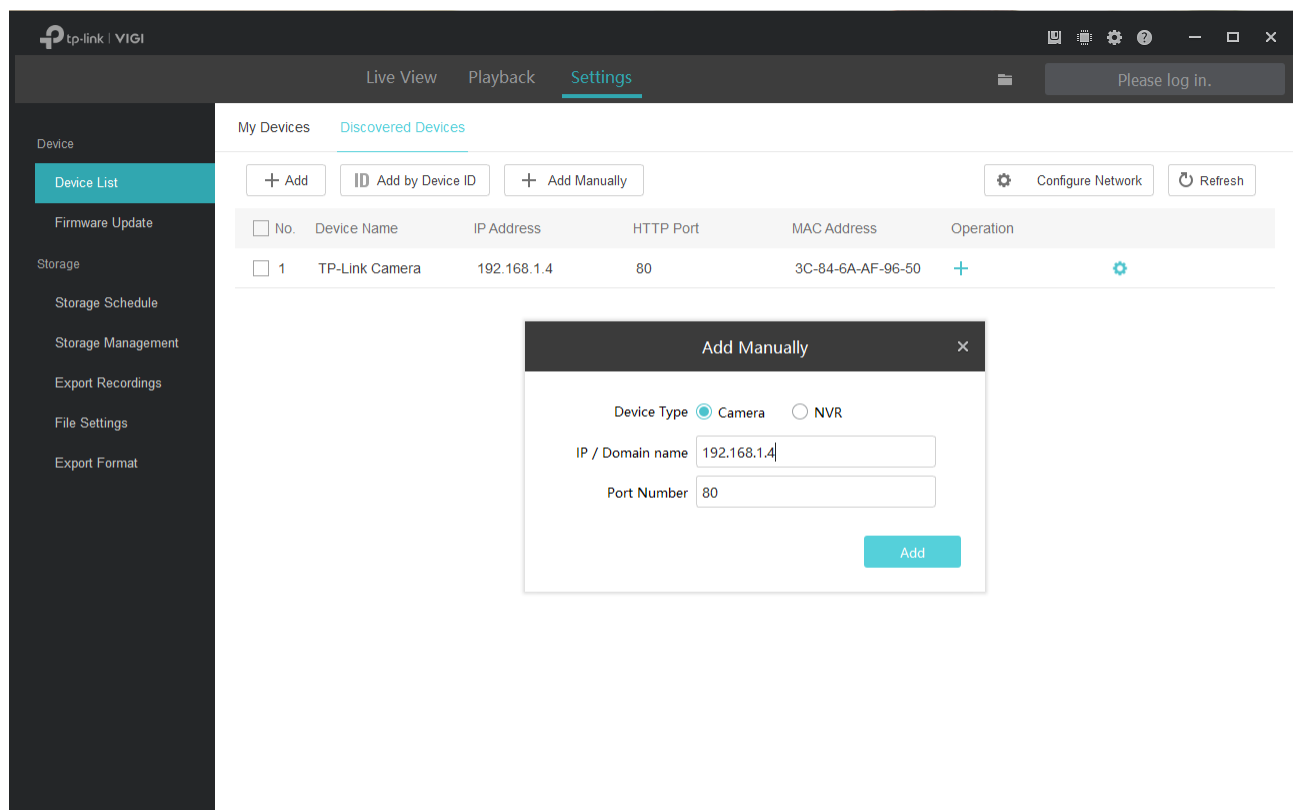


3. Enter the password of your device. VIGI Security Manager can automatically detect the IP address and port number of the device, and you can keep them as default. Click [Verify](#).

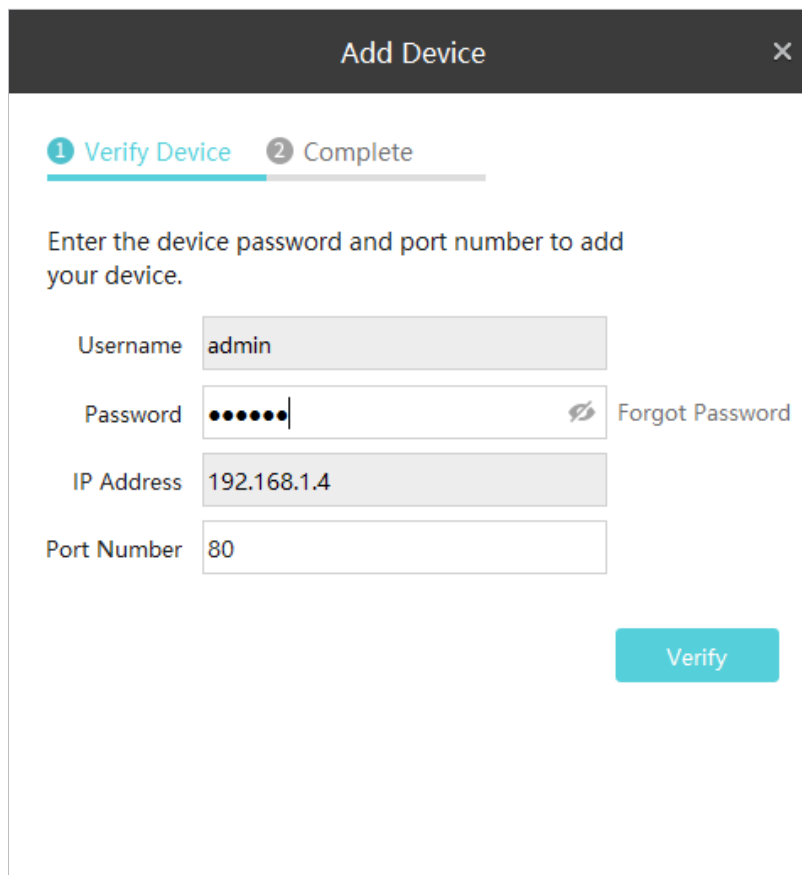

The screenshot shows a modal window titled "Add Device" with a close button (X) in the top right corner. Below the title bar is a progress indicator with two steps: "1 Verify Device" (highlighted in blue) and "2 Complete". The main text reads: "Enter the device password and port number to add your device." Below this are four input fields: "Username" with the value "admin", "Password" with masked characters "•••••" and a "Forgot Password" link, "IP Address" with the value "192.168.1.4", and "Port Number" with the value "80". A blue "Verify" button is located at the bottom right of the form.

Note:

- For the camera with no password, you need to set a password and a password reset email to enhance the security before adding it.
 - For the NVR that has not been used, create a login password on NVR itself and set it up first before adding it.
4. (Only for cameras) If you don't want to save the recordings of your camera to your computer, directly click [Confirm](#).

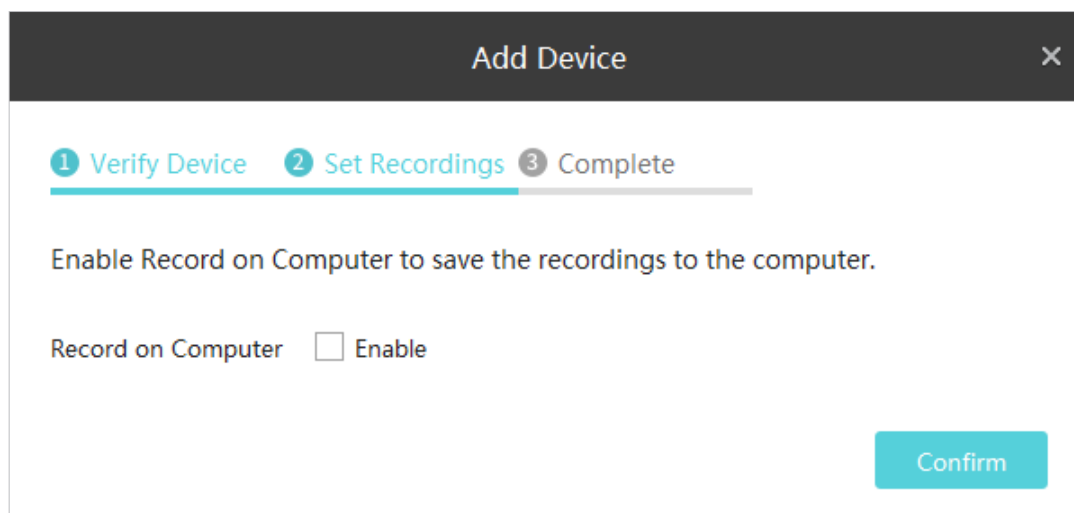

The screenshot shows the same "Add Device" modal window, now at Step 2: "Set Recordings". The progress indicator shows "1 Verify Device" (completed), "2 Set Recordings" (highlighted in blue), and "3 Complete". The main text reads: "Enable Record on Computer to save the recordings to the computer." Below this is a checkbox labeled "Record on Computer" which is currently unchecked, followed by the word "Enable". A blue "Confirm" button is located at the bottom right of the form.

If you want to save the recordings of your camera to your computer, you can click the checkbox of **Enable Record on Computer**. Configure the following parameters and click **Confirm**.

Add Device

1 Verify Device

2 Set Recordings

3 Complete

Enable Record on Computer to save the recordings to the computer.

Record on Computer

☒ Enable

Schedule

24/7 Recording

Change

Storage Location

ComputerC:\Users\admin\AppData\Roaming\TP-Lin

Browse

Free Space: 31 GB

Storage

2

GB

Loop Recording

☒ Enable

Resolution


☒ HQ

☐ LQ

Confirm

Schedule	Click Change to customize the recording schedule of the camera on computer. It determines the time period for camera recording.
Storage Location	Click Browse to select the storage location of files.
Storage	Set the storage space for storing the recordings on your computer. The storage space you set should be less than the free space on your computer.
Loop Recording	Click the checkbox to enable loop recording. It allows your camera to overwrite old files with new files.
Resolution	Select the recording resolution. HQ and LQ refers to the high and low recording resolution respectively.



- Wait for the device to be added, then click **OK**.

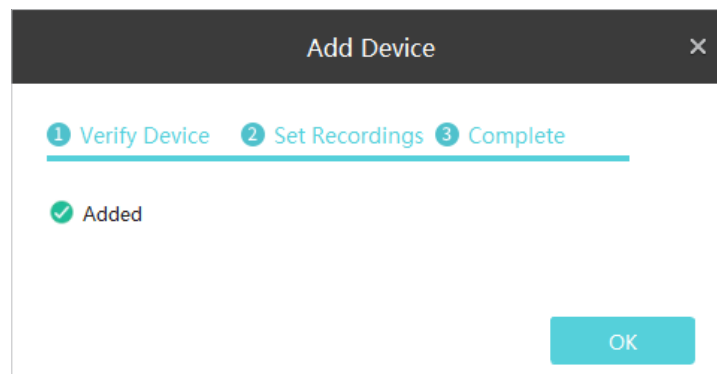


2. 1. 2 Add Devices to VIGI Security Manager When TP-Link ID is Logged in


Follow the steps below to add a device.

 - Go to **Settings > Device List > Discovered Devices** and click **+** in the list.

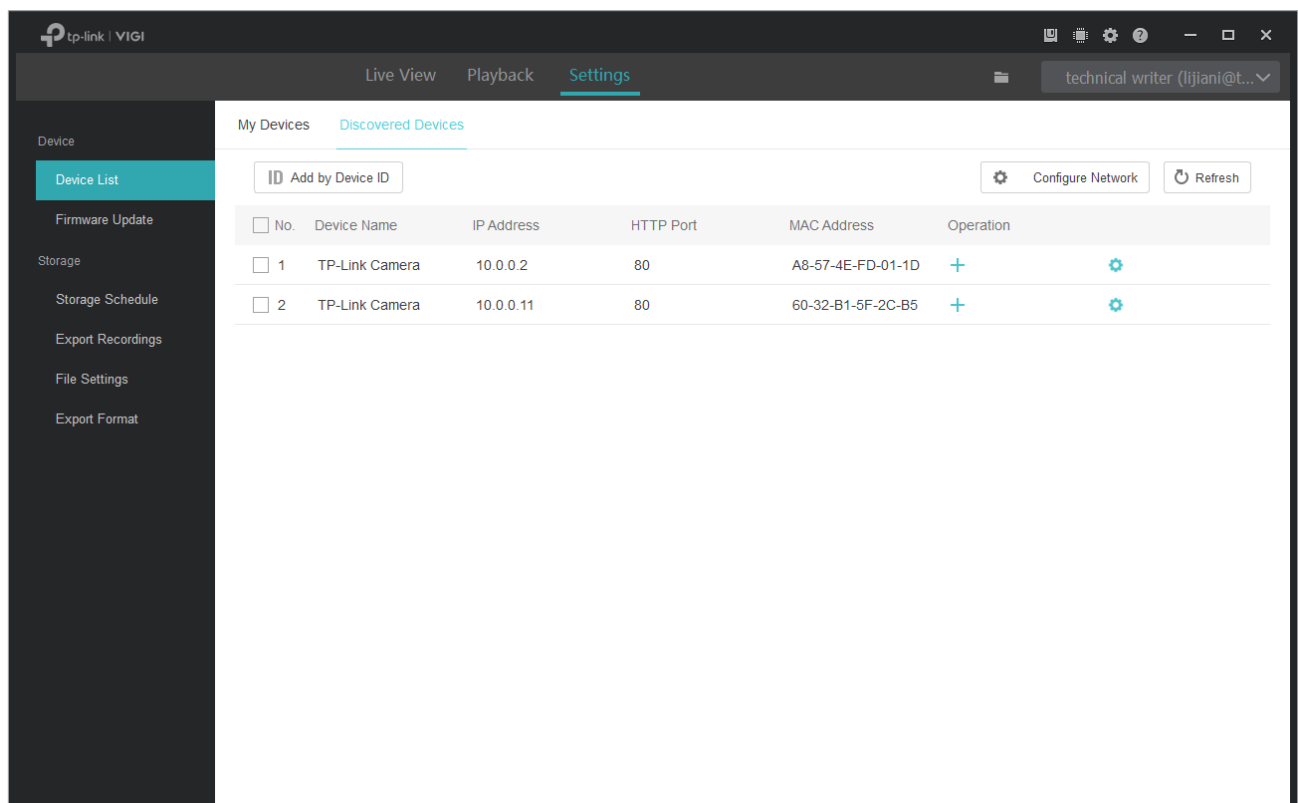


  Set the IP address, gateway and subnet mask of your device.



Click  to refresh the device list.

2. Enter the password of your device. VIGI Security Manager can automatically detect the IP address and port number of the device, and you can keep them as default. Click **Verify**.

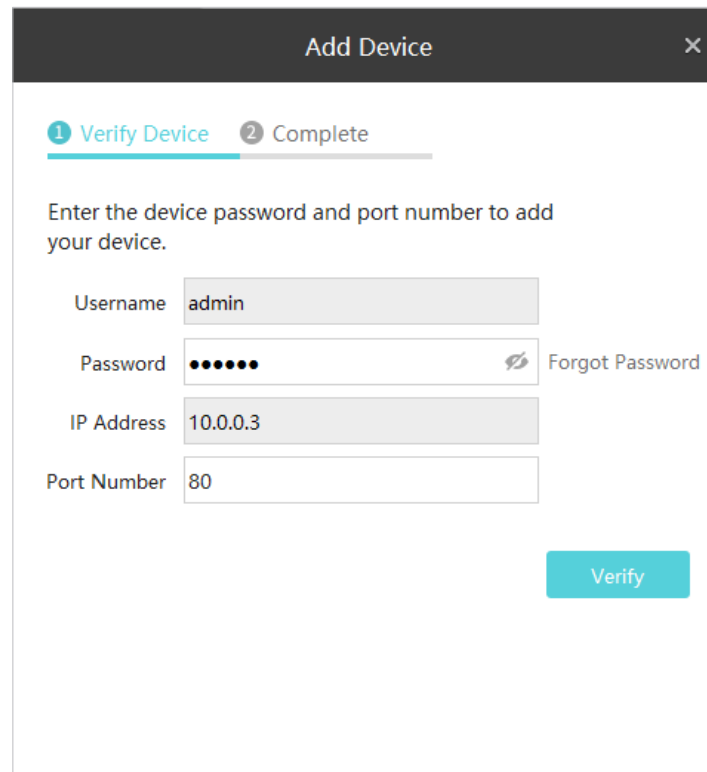

Add Device [X]

1 Verify Device 2 Complete

Enter the device password and port number to add your device.

Username

Password [Forgot Password](#)


IP Address

Port Number

Verify

Note:

- For the camera with no password, you need to set a password and a password reset email to enhance the security before adding it.

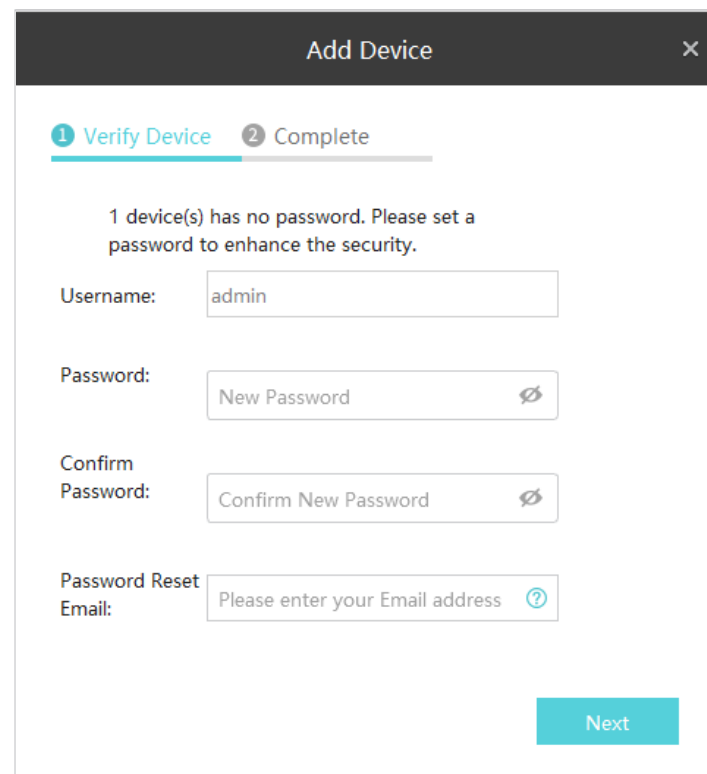

Add Device [X]

1 Verify Device 2 Complete

1 device(s) has no password. Please set a password to enhance the security.

Username:

Password: [Forgot Password](#)


Confirm Password: [Forgot Password](#)

Password Reset Email: [?](#)

Next

Username	Displays the username of the camera.
Password	Set the password of the camera.
Confirm Password	Confirm the password of the camera.
Password Reset Email	Set the email address for resetting the camera's password.


- For the NVR that has not been used, create a login password on NVR itself and set it up first before adding it.
3. Wait for the device to be added, then click **OK**. The device is now bound to your TP-Link ID. Note that you need to add the device again if you log out of your TP-Link ID.

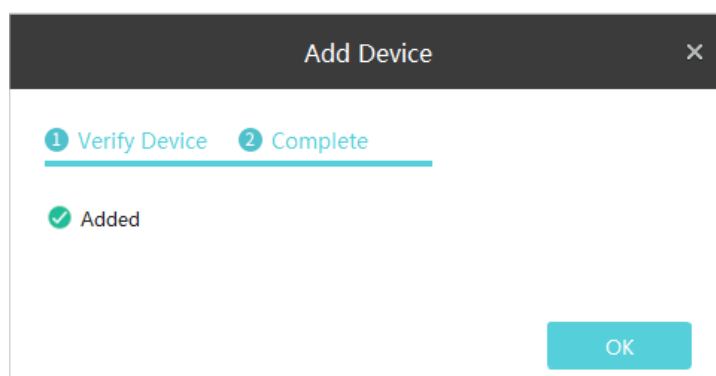

♥ 2.2 Add Devices Remotely

Every VIGI NVR and VIGI Security Camera has a device ID printed on its label. When your devices are not in the same subnet as your computer, you can add them remotely by verifying its device ID. Make sure your computer and devices all have access to the internet before adding your devices. Follow the steps below to finish the configuration.

1. Go to **Settings > Device List > Discovered Devices** and click **ID Add by Device ID**. If you have not logged in to your TP-Link account, use your TP-Link ID and password to log in first.

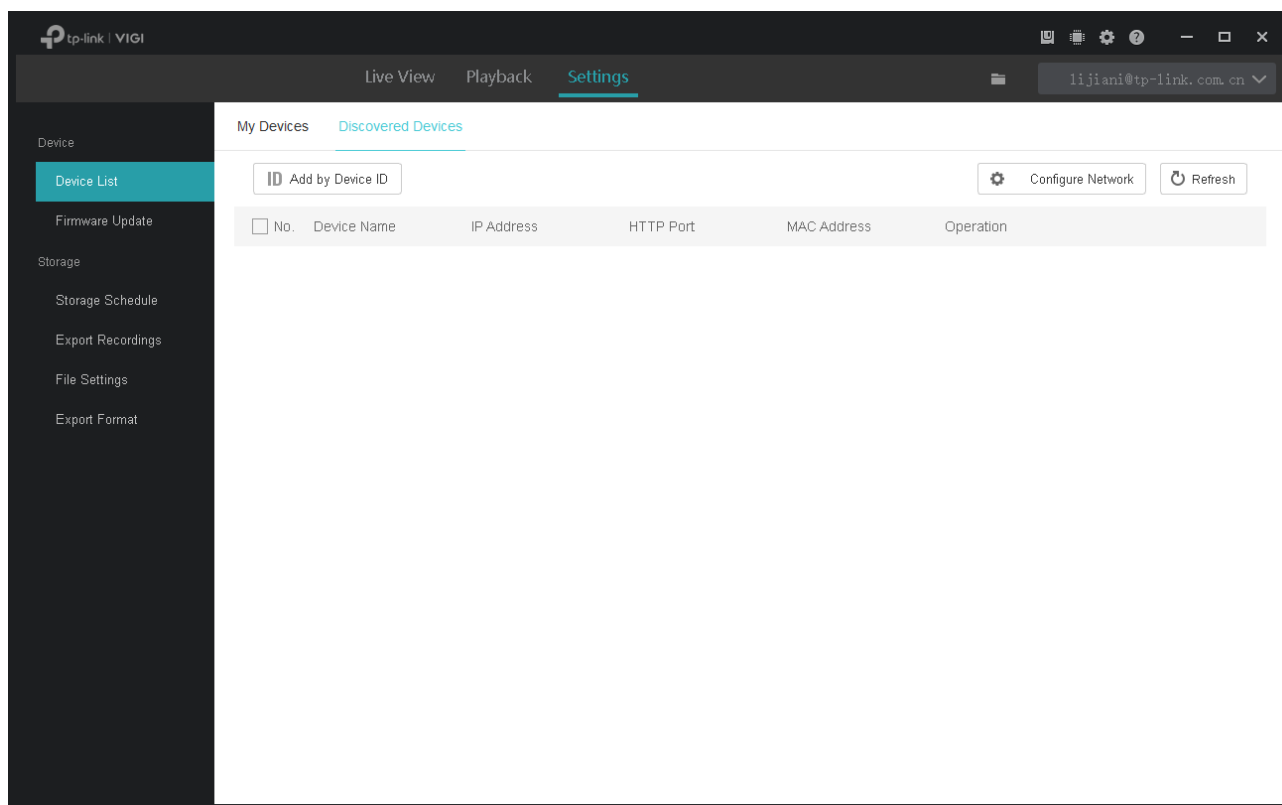

- Find the device ID on the product label and enter it into the blank, then click [Add](#).

Add by Device ID

Please find the device ID on the device.



Device ID:XXXXX-XXXX-XXXX-XXXX

Device ID

Add

- Enter the password of your device and click [Verify](#).

Add Device

1 Verify Device

2 Complete

Please enter the password of the device for verification.

Username

Password

Port Number

Verify

Note:

- For the camera with no password, you need to set a password and a password reset email to enhance the security before adding it.

Add Device

1 Verify Device

2 Complete

1 device(s) has no password. Please set a password to enhance the security.

Username:

admin

Password:

New Password

Confirm Password:

Confirm New Password

Password Reset Email:

Please enter your Email address

Next

Username	Displays the username of the camera.
Password	Set the password of the camera.
Confirm Password	Confirm the password of the camera.
Password Reset Email	Set the email address for resetting the camera’s password.

- For the NVR that has not been used, create a login password on NVR itself and set it up first before adding it.

4. Click **OK**. The device is now bound to your TP-Link ID.

Add Device

1 Verify Device

2 Complete

Added

OK

3

TP-Link ID Management

TP-Link ID can be used to view the Live View video and manage the devices remotely in multiple platforms. In VIGI Security Manager, you can log in with your TP-Link IDs and manage the devices bound to them. This chapter contains the following sections:

- [Log In with Your TP-Link ID](#)
- [Manage Your TP-Link ID](#)
- [Change the Password](#)
- [Log Out the TP-Link ID](#)

♥ 3.1 Log In with Your TP-Link ID

You can log in to VIGI Security Manager with multiple TP-Link IDs and switch the login account whenever you want. After you logging in, the NVR can manage the devices bound with the logged TP-Link ID only.


Note:

- If you have added local devices to the manager, a window will pop up after login. If you want to manage them via cloud services, click **Bind** to bind them with the logged TP-Link ID in batch; if not, click **Cancel**.
- After login, the recording, storage and playback are not available for the cameras managed by VIGI Security Manager.

Log In

When no account is logged in, follow the steps below.

1. Click **Please log in.** on the top-right corner and enter your TP-Link ID and password. You can enable **Auto Login** to allow the utility to remember your account and log in automatically when switching it as the logged account. Click **Log In**.

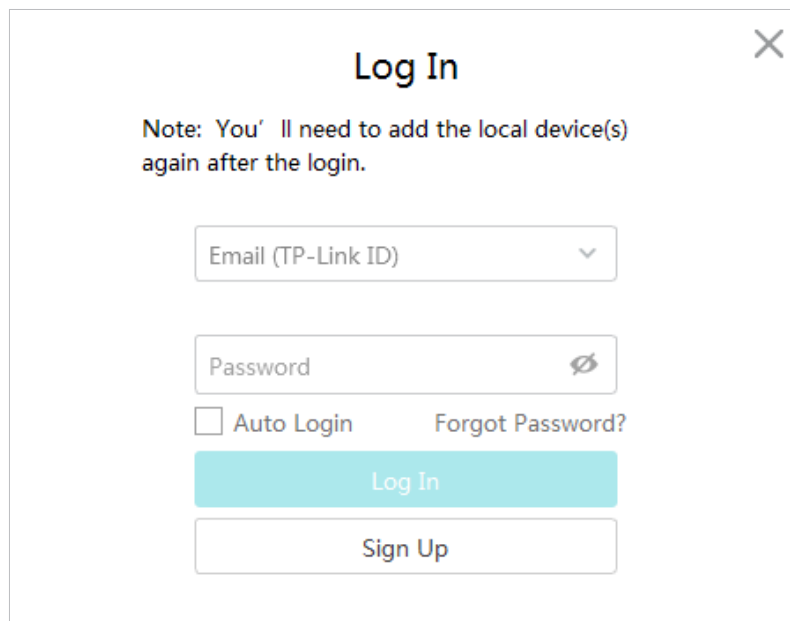A screenshot of a 'Log In' dialog box. At the top, the title 'Log In' is centered, with a close button (X) in the top right corner. Below the title, a note reads: 'Note: You' ll need to add the local device(s) again after the login.' The form contains two input fields: 'Email (TP-Link ID)' with a dropdown arrow, and 'Password' with a toggle icon. Below these fields are two links: 'Auto Login' (preceded by an unchecked checkbox) and 'Forgot Password?'. At the bottom, there are two buttons: a teal 'Log In' button and a white 'Sign Up' button with a grey border.

Log In

Note: You' ll need to add the local device(s) again after the login.

Email (TP-Link ID) ▼

Password 🔑

☐ Auto Login [Forgot Password?](#)

Log In

Sign Up

2. (Optional) Specify the description for the account. Click **Save**.

Add Description

TP-Link ID

techwriter@tp-link.com.cn

Description


TP-Link TechWriter Team

When there are many TP-Link IDs, the description can help you distinguish TP-Link ID. Descriptions are only saved locally.

Skip


Save

To log in with a new TP-Link ID, click the TP-Link ID on the top-right corner, click **Add TP-Link ID**, and then repeat the above steps.

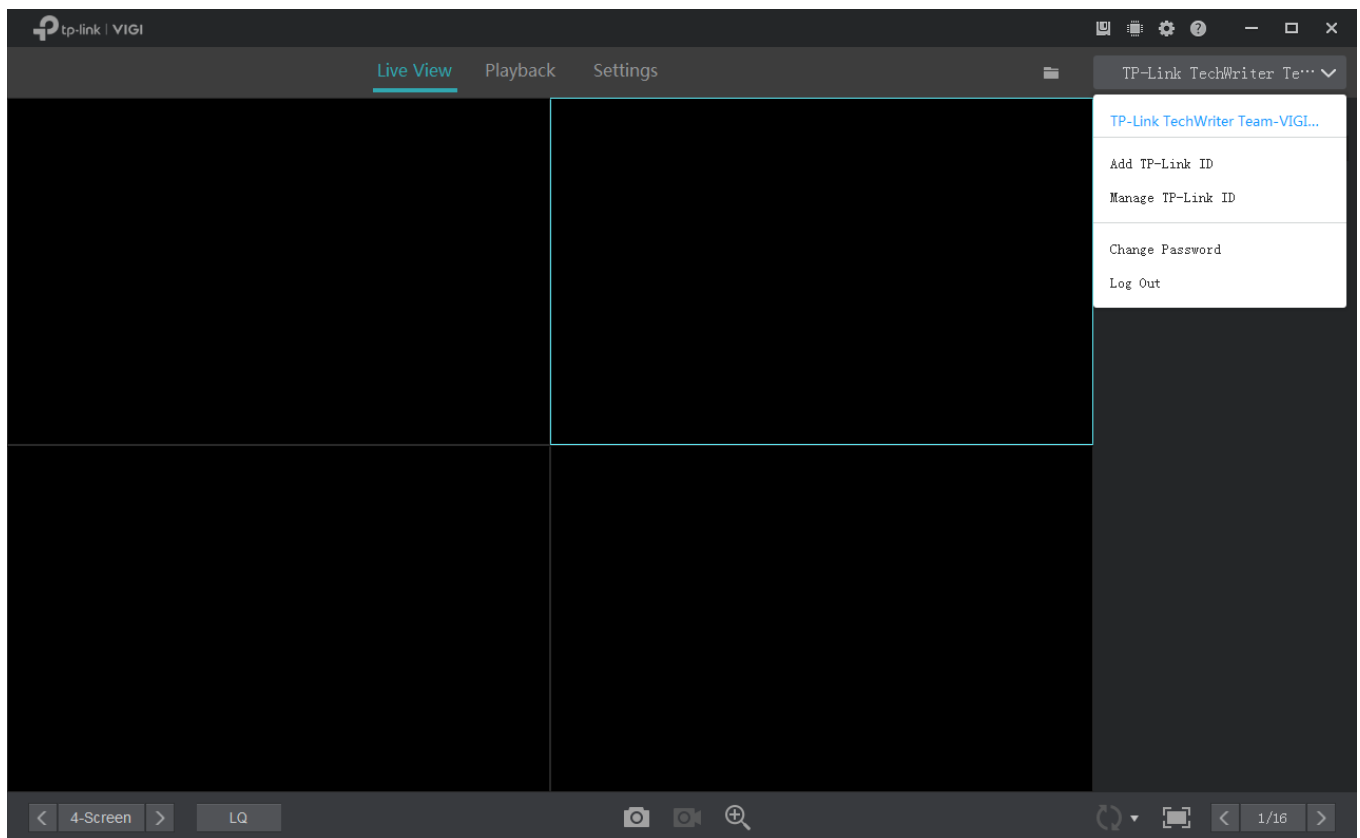

Switch the Logged TP-Link Account

To switch the logged TP-Link account, click the TP-Link ID on the top-right corner and select an account from the drop-down list. If you have enabled Auto Login for this account, wait for switching. If not, enter the password to log in.

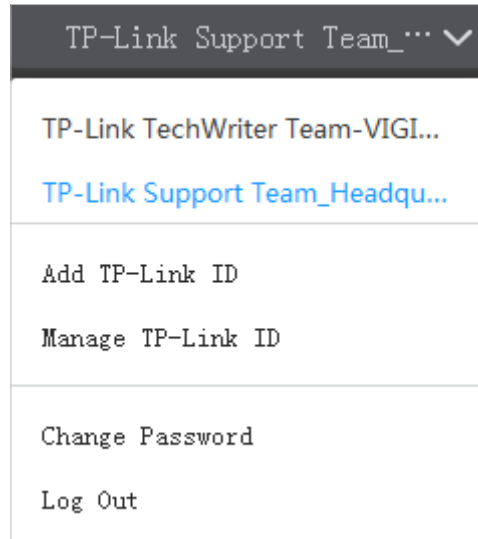

♥ 3.2 Manage Your TP-Link ID

On the Account Management panel, you can update the account information, change the order displayed on the top-right corner, and delete the account.

Note: The account that you log in with right now cannot be deleted. To delete it, switch the logged account first.

Follow the steps to manage your TP-Link ID.

1. Click the TP-Link ID on the top-right corner and click [Manage TP-Link ID](#).

2. In the pop-up window, select an account, enter the new account information, and click **Save**. Use the icons to adjust the displayed order and delete the account.

Manage TP-Link ID

Total 2

↑

↓

TP-Link TechWriter Team-VIGI...

TP-Link Support Team_Headqu...

TP-Link ID

12345678 @tp-link.com.cn

Password

●●●●●●●●●●

The password is used for automatic login. If you changed your password on another device, please enter the new password.

Description

TP-Link TechWriter Team-VIGI

When there are many TP-Link IDs, the description can help you distinguish TP-Link ID. Descriptions are only saved locally.


Save

Password	If you changed your password on another device, enter the new password here to pass the authentication and log in automatically.
Description	Specify the description of this account. The description is only saved locally.
↑ ↓	Click to adjust the displayed order of the account.
	Click to delete the account.

26

♥ 3.3 Change the Password


To change the password of a TP-Link ID, log in with the TP-Link ID first. Click the TP-Link ID on the top-right corner and click **Change Password**. Enter the current password and specify a new password. Click **Save**.

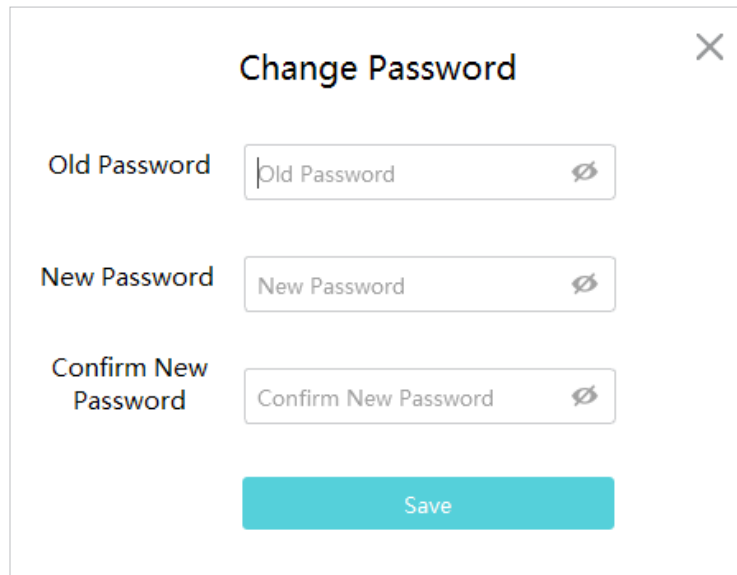

A modal dialog box titled "Change Password" with a close button (X) in the top right corner. It contains three input fields: "Old Password", "New Password", and "Confirm New Password". Each field has a placeholder text and a toggle icon (an eye with a slash) to the right. Below the input fields is a teal "Save" button.

♥ 3.4 Log Out the TP-Link ID

To log out the current account, click the TP-Link ID on the top-right corner and click **Log Out**.

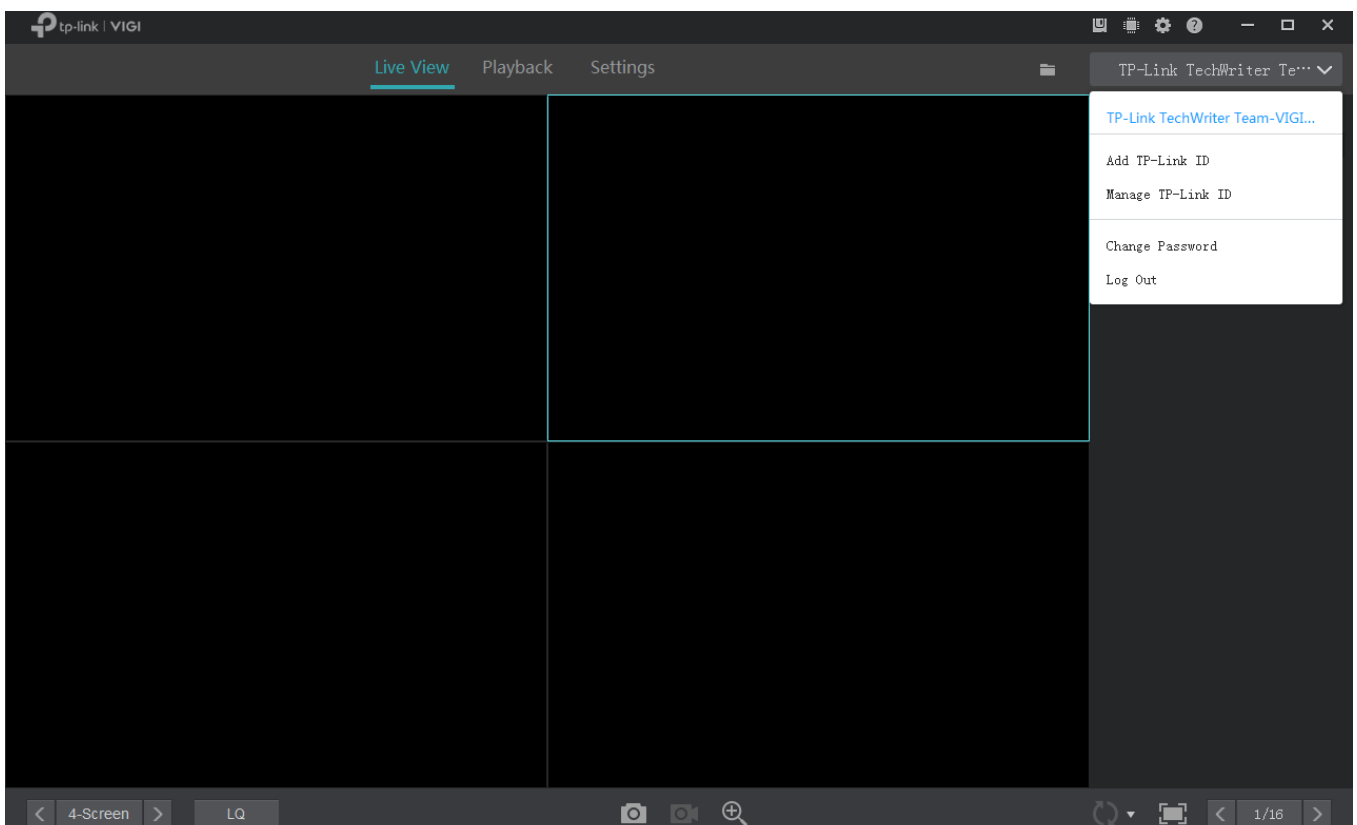

4

Live View

In Live View, you can monitor the channels in real time and respond to abnormal conditions with quick operations, such as starting recording and zooming in the image. This chapter contains the following sections:

- [Configure the Screen Layout](#)
- [Configure Live View Settings](#)
- [Add and Manage Groups](#)


♥ 4.1 Configure the Screen Layout

4.1.1 Enable/Disable Live View

VIGI Security Manager displays the videos of each channel via several screens. Follow the steps below to flexibly enable or disable Live View function on channels to play the real-time video.

Enable/Disable Live View for a Channel

To enable Live View for a single channel, click a screen in Live View and click the channel on the right panel.

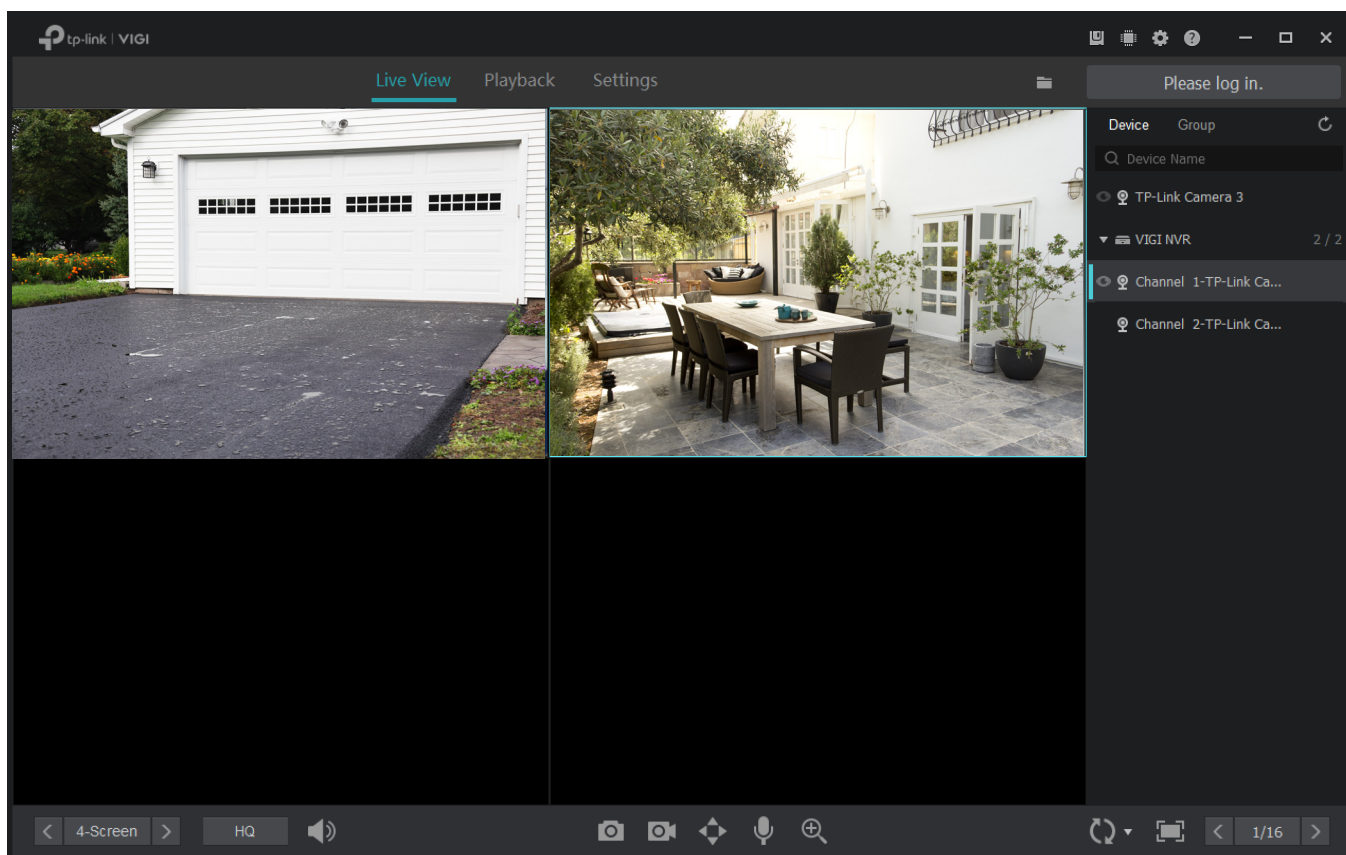


To disable Live View for a single channel, click a screen in Live View and click .

Enable/Disable Live View for Channels in Batch

For the cameras managed by the NVR or added to a group, you can enable or disable Live View for channels in batches. To create groups, refer to [4.3 Add and Manage Groups](#).


Right click an NVR or group on the right panel and click **Enable Live View for All Channels**. Then, Live View will be enabled on all channels that are managed by the NVR or added to the group.

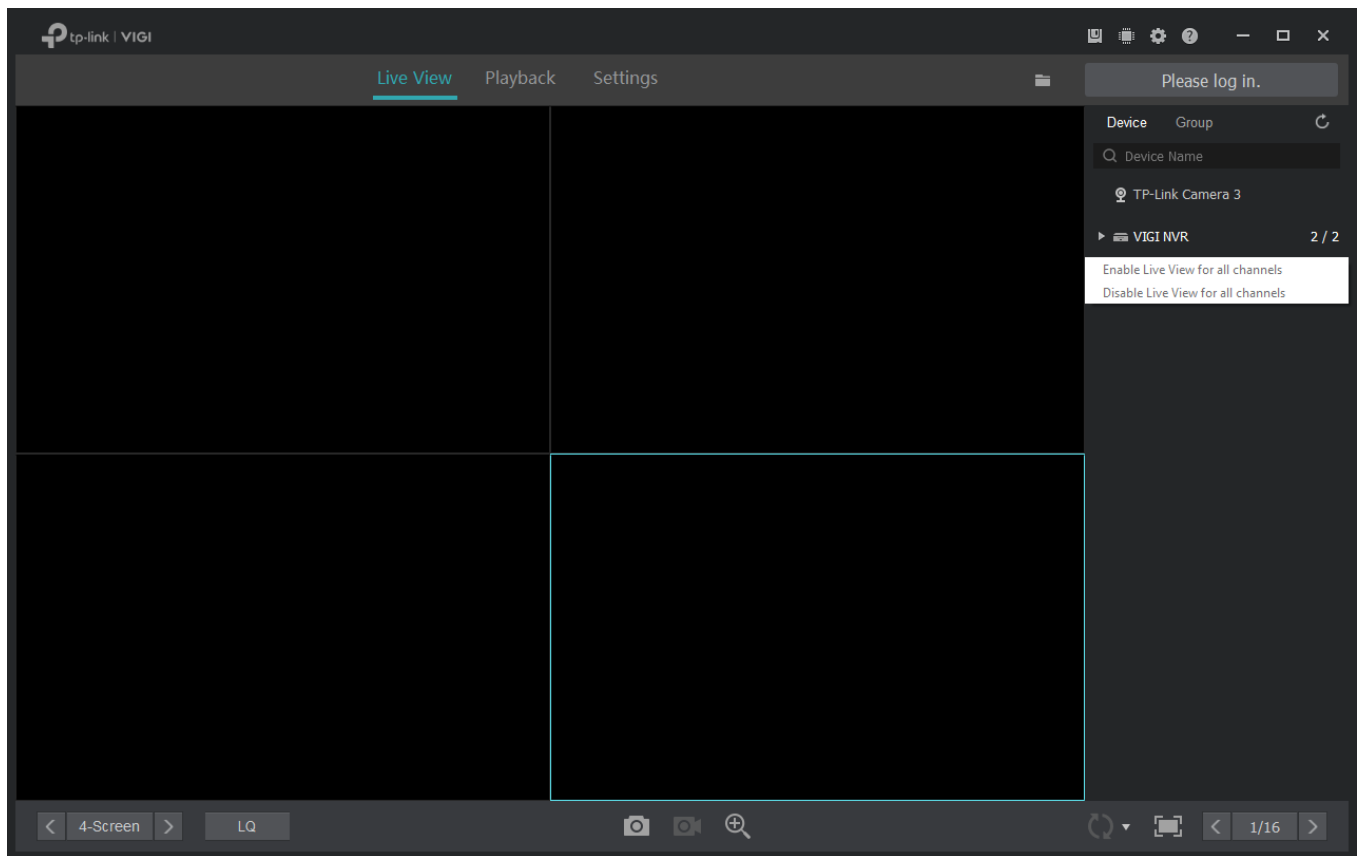

To disable Live View in batches, right click an NVR or group on the right panel and click **Disable Live View for All Channels**.

4.1.2 Rearrange the Layout

The manager supports ten layout modes, and each mode displays different numbers of screens. Click **< 4-Screen >** to select a layout mode and click **< 1/16 >** to change the page.

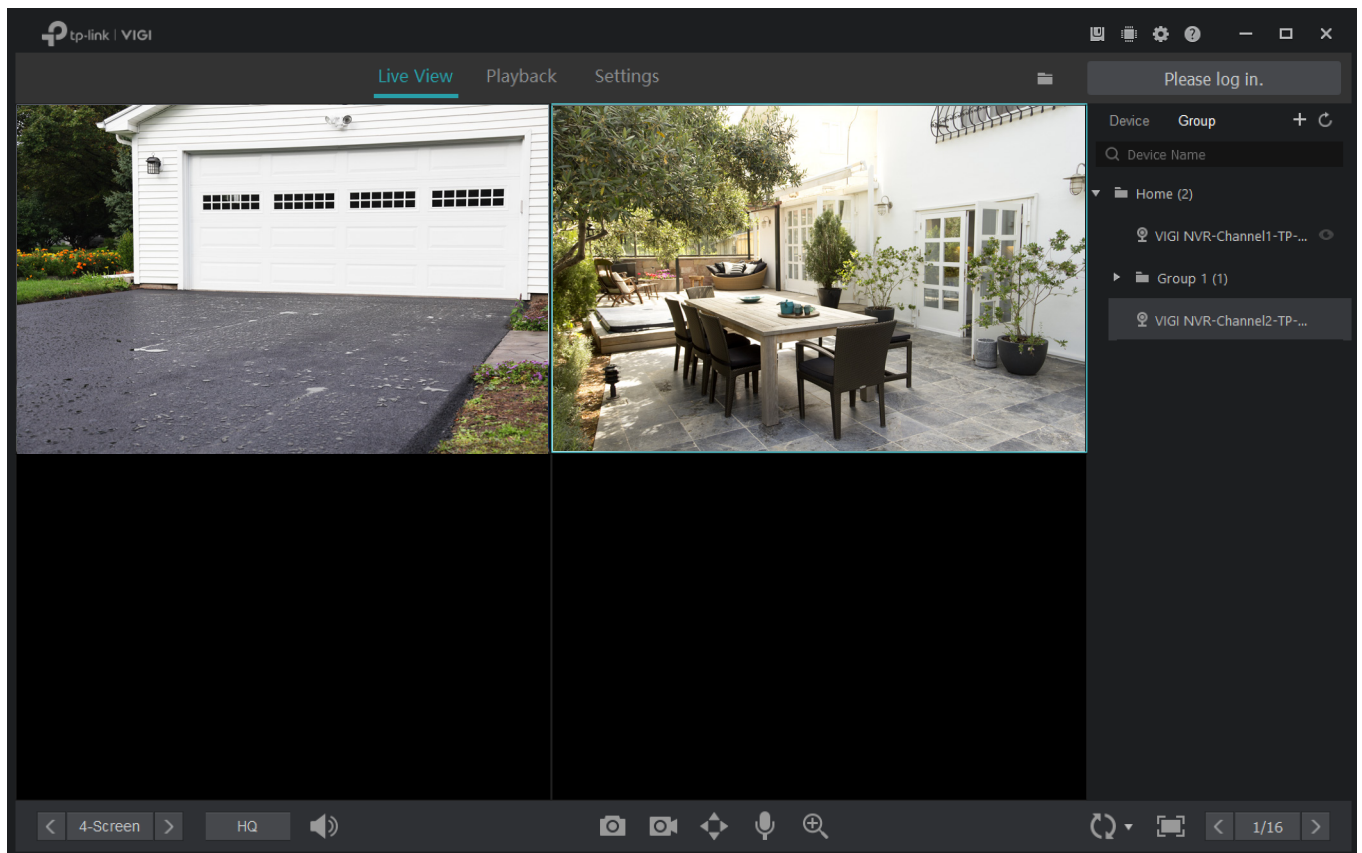



For the layout mode with multiple screens, you can change the location of a channel by clicking and dragging it to another location. To view a channel in the full screen, double click it. Double click it again to go back to multi-screen layout mode.

♥ 4.2 Configure Live View Settings

4.2.1 Configure Live View Settings via Toolbar

 Click a screen in Live View and click the following icons to configure Live View settings, such as screenshot, digital zoom, and switching.

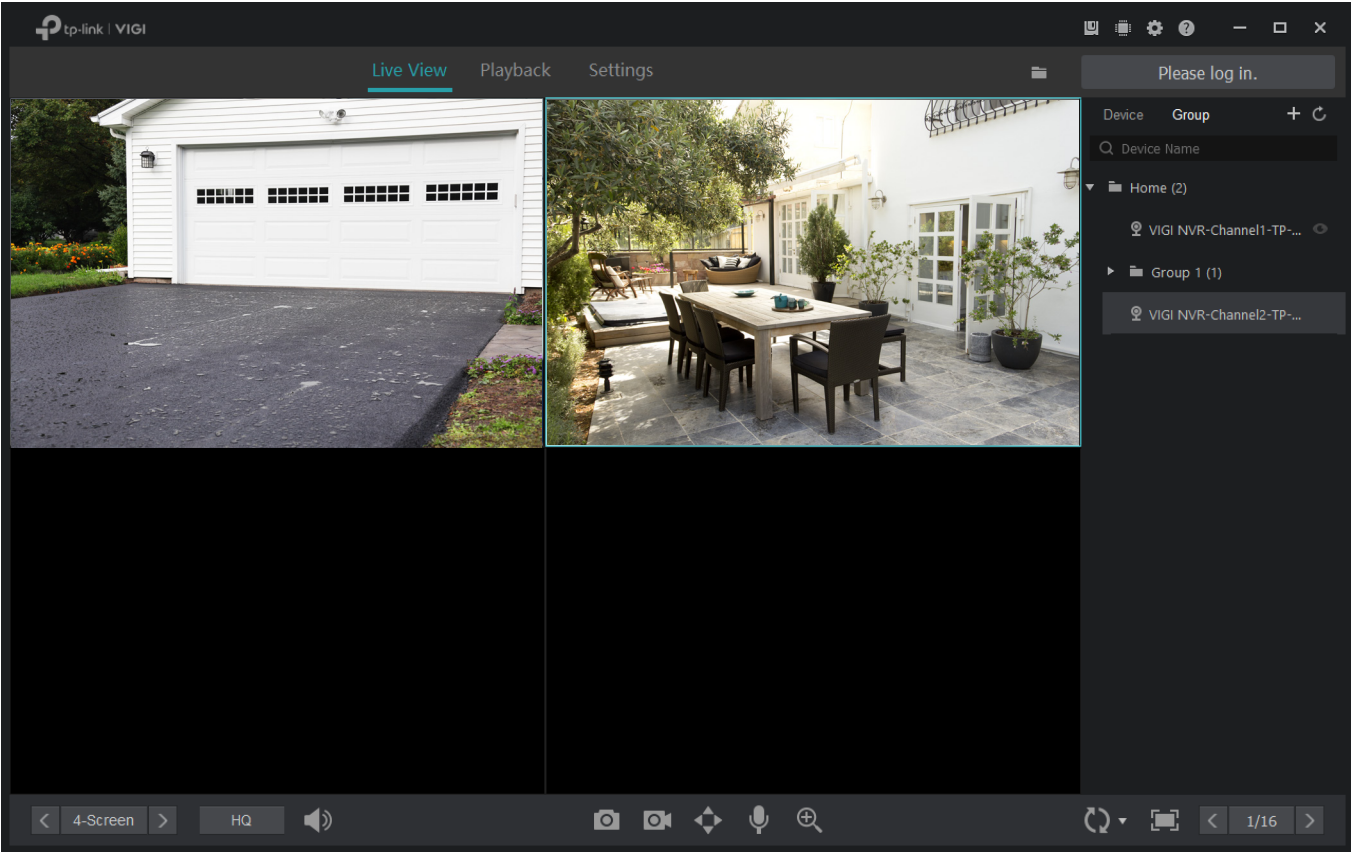

	Click to switch between high quality (HQ) and low quality (LQ) for Live View.
	(Only for certain cameras) Click to turn on or off the volume.
	Click to take a screenshot. To show the screenshot in the folder, click  at the top right corner. To change the path where the screenshots are stored, refer to 6. 4 File Settings .
	Click to start/end the recording manually. To show the recording in the folder, click  at the top right corner. To change the path where the recordings are stored, refer to 6. 4 File Settings .
	(Only for the camera with Pan&Tilt) Click to enter the Preview of Pan&Tilt. You can adjust the camera location and call the presets.



(Only for cameras with microphone) Click the icon and then hold  to talk. With this function, your can talk to people in the monitor area in real time.



Click the icon to turn your cursor into a magnifying glass. To zoom in, scroll up the mouse wheel or left click on the screen. To zoom out, scroll down the mouse wheel or right click on the screen.



Click  to start Switching, whereby the manager turns pages in Live View regularly if the channels are displayed in more than one page.

Click  to end Switching.


If you want to change the switching interval, click the triangle and then enter the value or drag the pointer.



Click to view the video in full screen,

4. 2. 2 Configure Live View Settings for a Single Camera

Right click a single camera on the right panel to configure the aspect ratio, delivery, stream and quality of its channel.

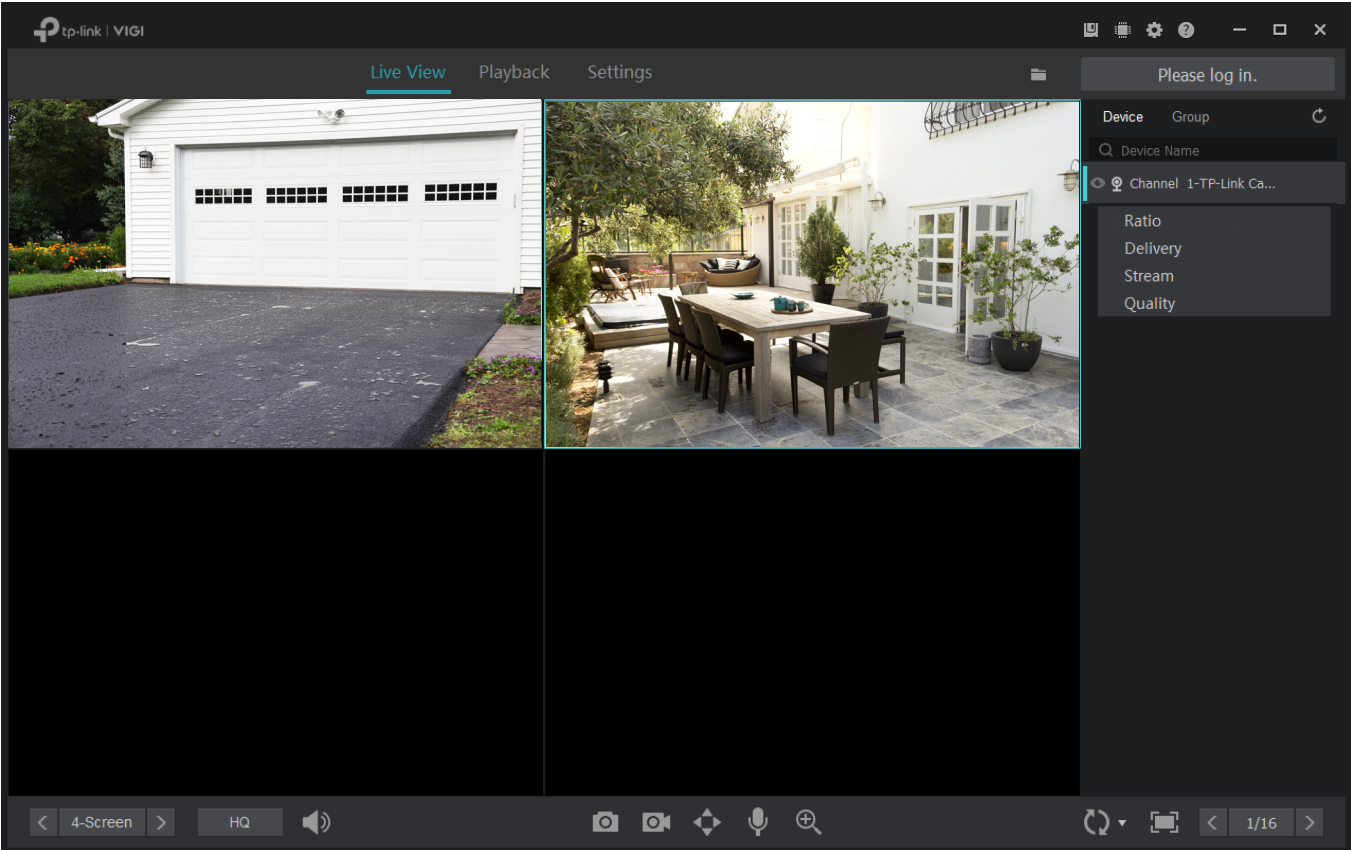

Ratio

Click to adjust aspect ratio. If you select **100%**, the screen will automatically adjust the ratio to fit the size of VIGI NVR Manager.

Delivery	Click to specify the channel as a unicast or multicast channel. For detailed configurations, refer to 7. 6. 5 Configure Multicast (Only for Cameras) .
Stream	Click to apply mainstream or substream to this channel, which may influence the video quality and fluency in Live View. To view and configure Stream settings, refer to 7. 4. 1 Configure Stream Settings .
Quality	Click to change the video quality of Live View into high quality (HQ) or low quality (LQ).

♥ 4. 3 Add and Manage Groups

4. 3. 1 Add Groups


Main groups and subgroups are used to classify the channels for easier management. You can enable or disable Live View for channels in the group simultaneously.

Note: When enabling or disabling Live View based on groups, this operation is not applied to the subgroups.

Follow the steps below to add groups.


Add a Main Group

To add a group, click **Group** and then click **+** on the right panel. Enter the group name, select channels listed in Available Channels, and click **Add**. Click **Up** or **Down** to adjust the display order, or click **Remove** to remove the channel from the group. Click **Confirm** to add the main group.

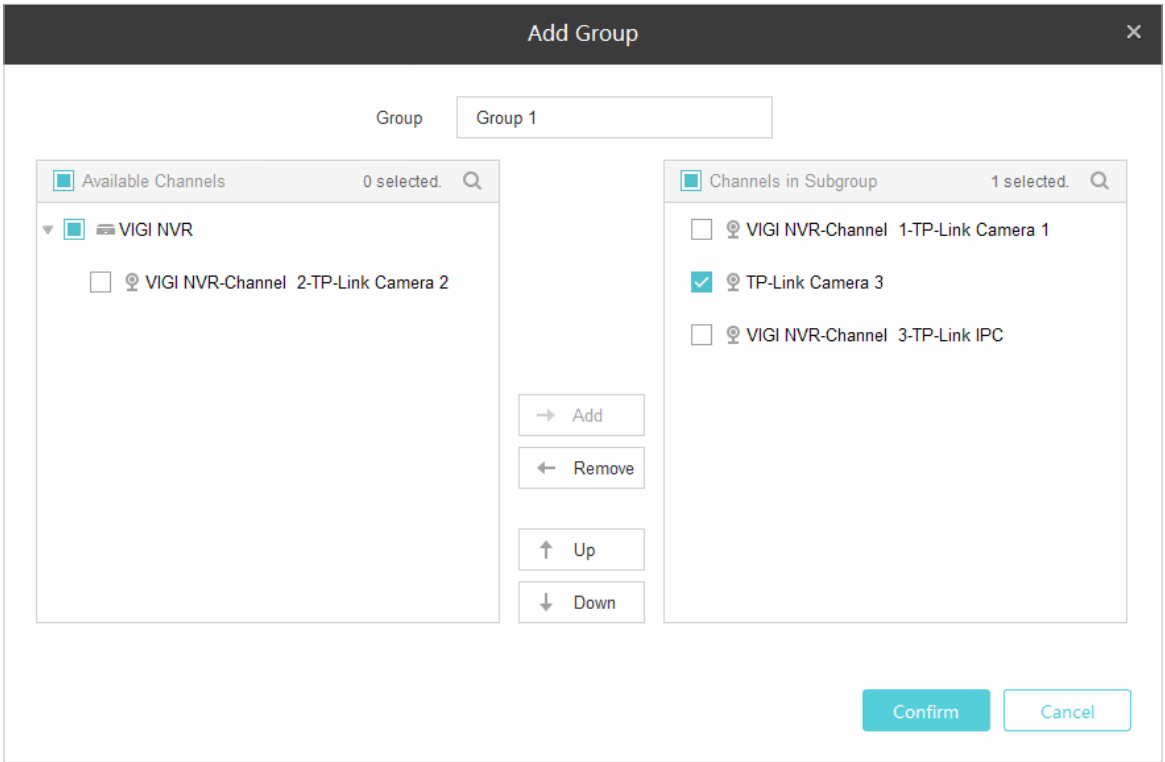

Add a Subgroup

To add a subgroup, click **Group** and right click a group on the right panel. Click **Add Subgroup** and enter the name. Then, you can drag the channel in the main group to the subgroup.

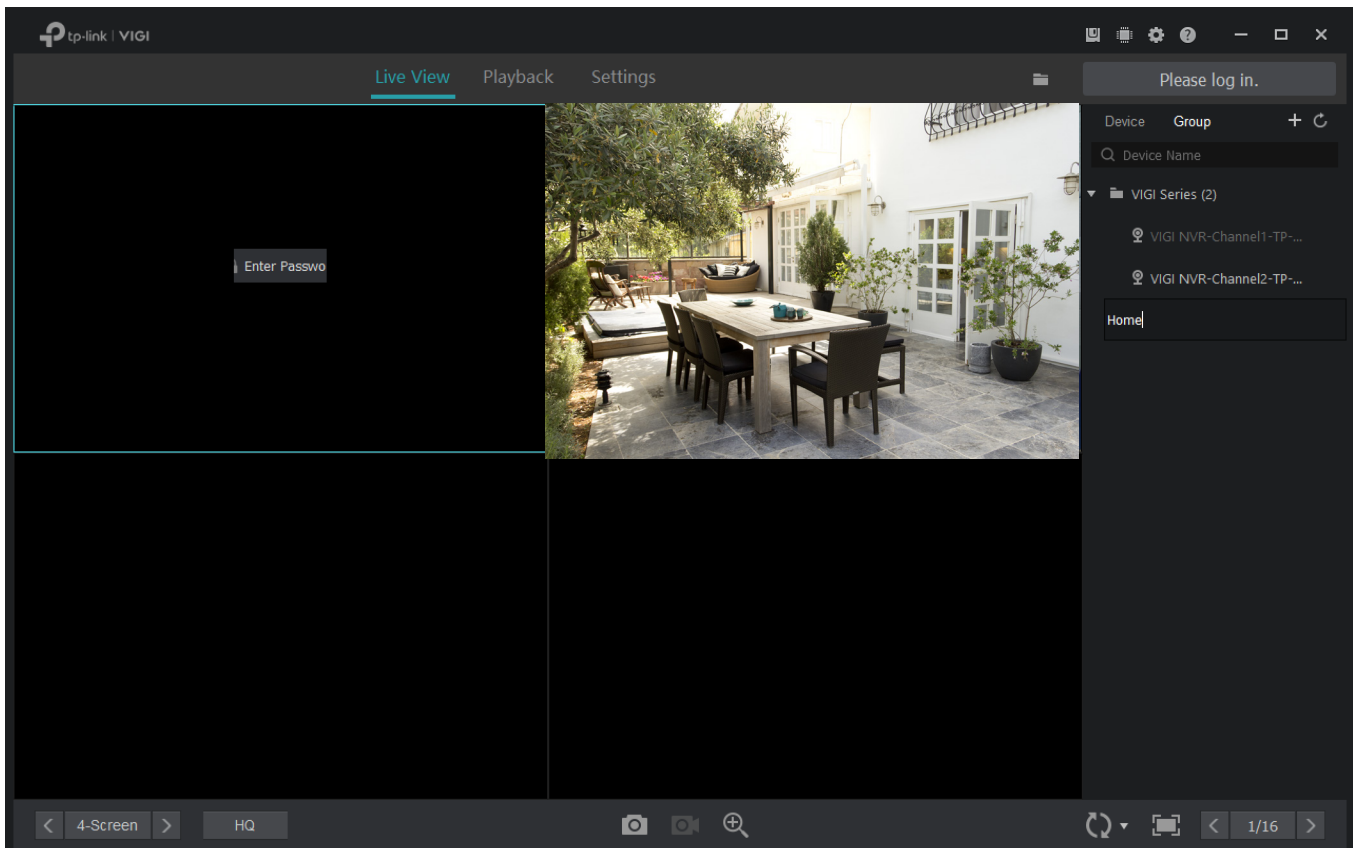


4.3.2 Manage Groups

Manage Channels in the Group


To move a single channel to other groups or change its order in the list, drag the channel and move it.

To manage the channels, click **Group** and right click a group on the right panel. Click **Manage Group Channels**. Select the channels to add, remove or reorder them in the group. Click **Confirm**.

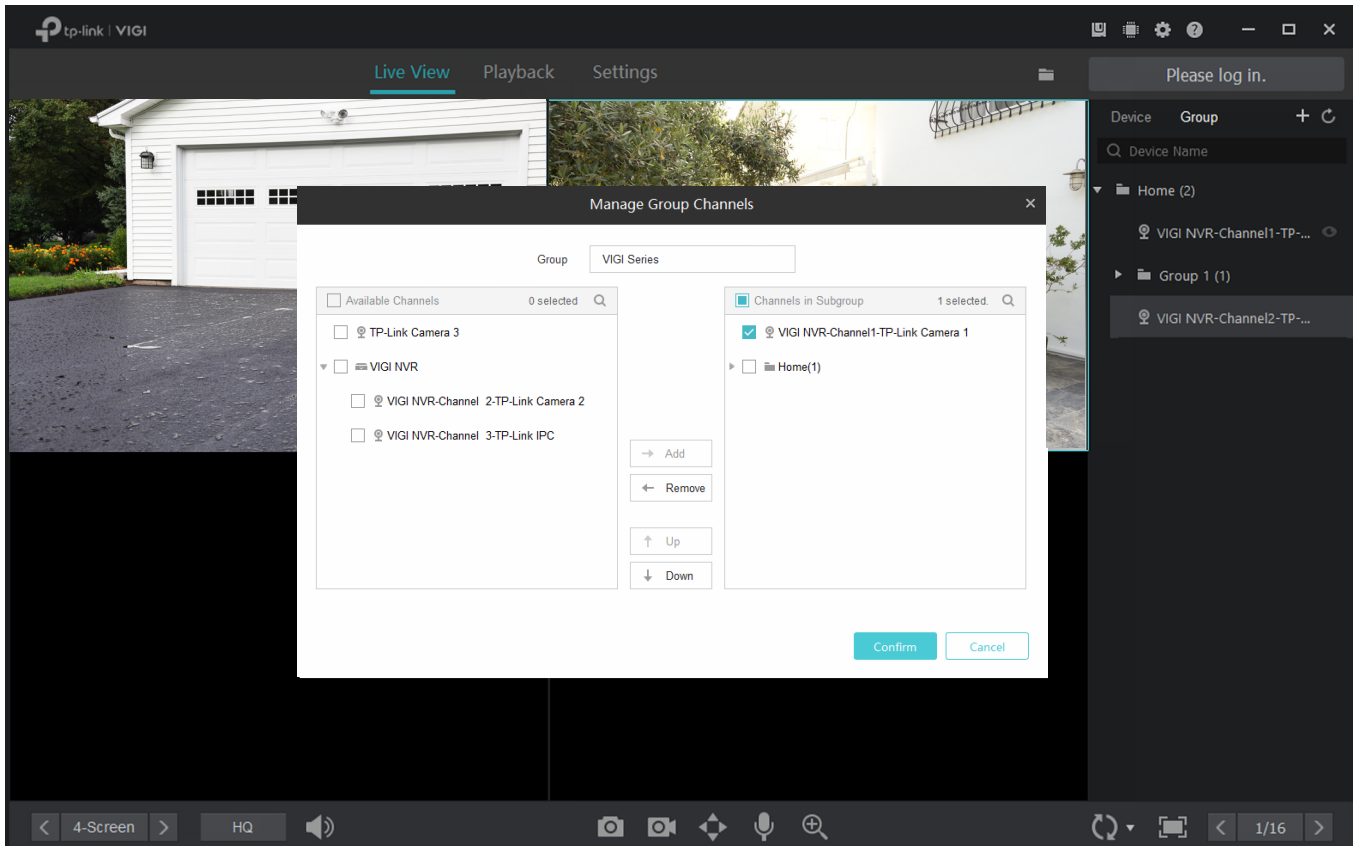

Rename the Group

To rename a group, click **Group** and right click the group on the right panel. Click **Rename** and enter the name.

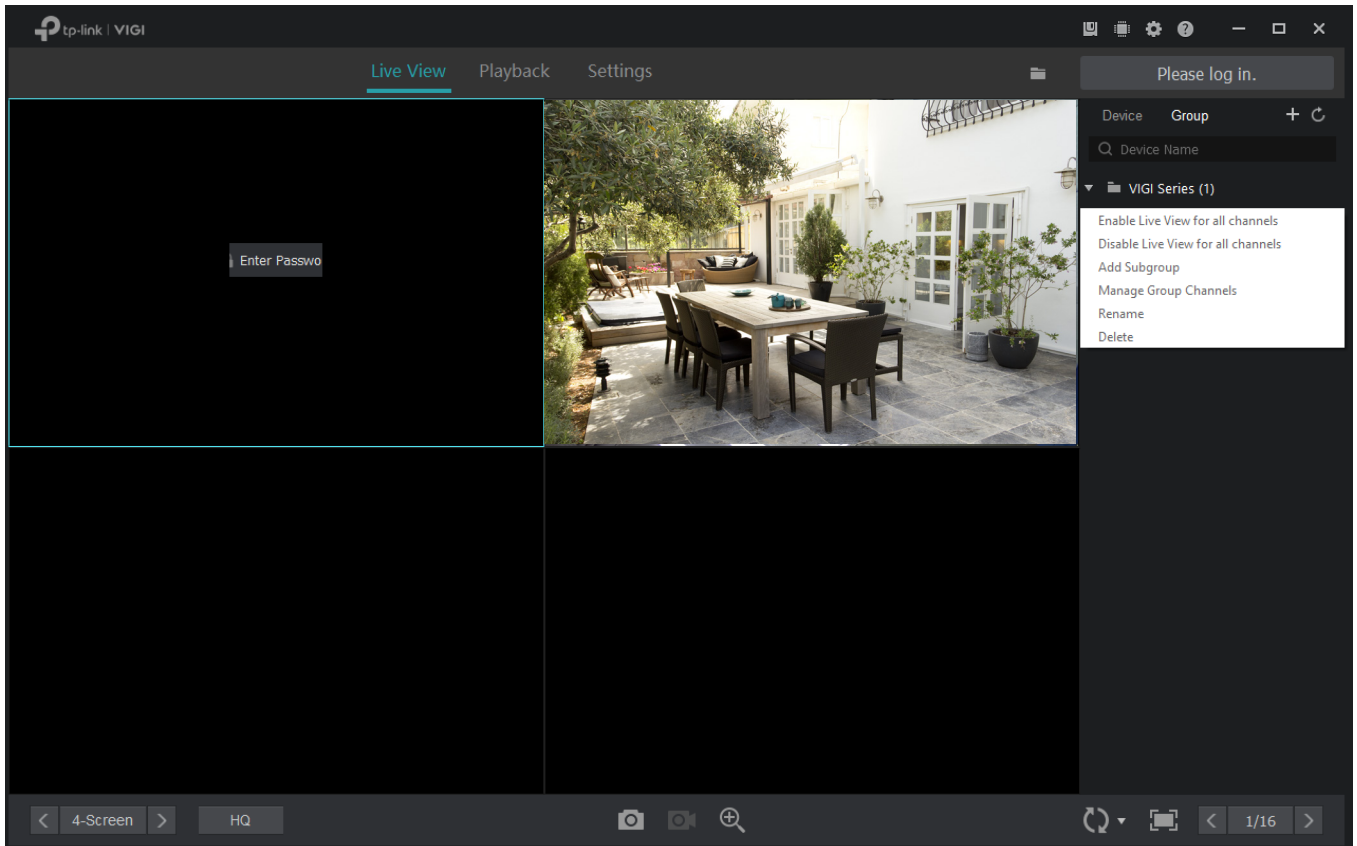

Delete the Group

To delete a group, click **Group** and right click the group on the right panel. Click **Delete**.

5

Playback

This function allows you to play the history recordings and edit them, such as taking screenshots and exporting clips. You can easily find the recordings based on the channel, date, and recording types. This chapter contains the following sections:


- [Playback the Recordings](#)
- [Playback Operations](#)

♥ 5.1 Playback the Recordings


Follow the steps below to start playback.

1. Click Playback on the top, and then click an NVR to select the channels from the right panel. Click **Apply**.

Note: All the cameras managed by VIGI Security Manager directly are listed under the virtual NVR, and you can play the recordings of them only when the host manages them locally.

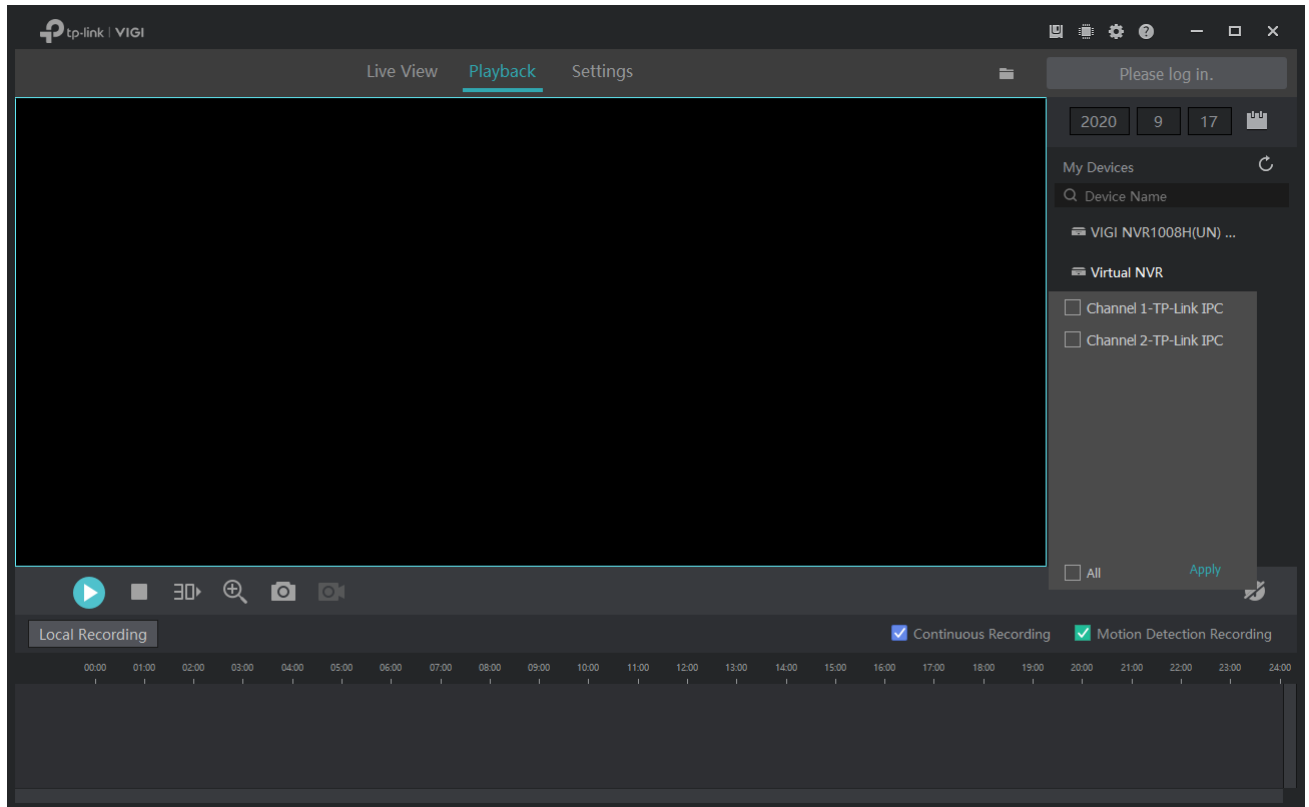

2. Select the date from the calendar. The blue points on the calendar mean that the channels have recordings on that day.

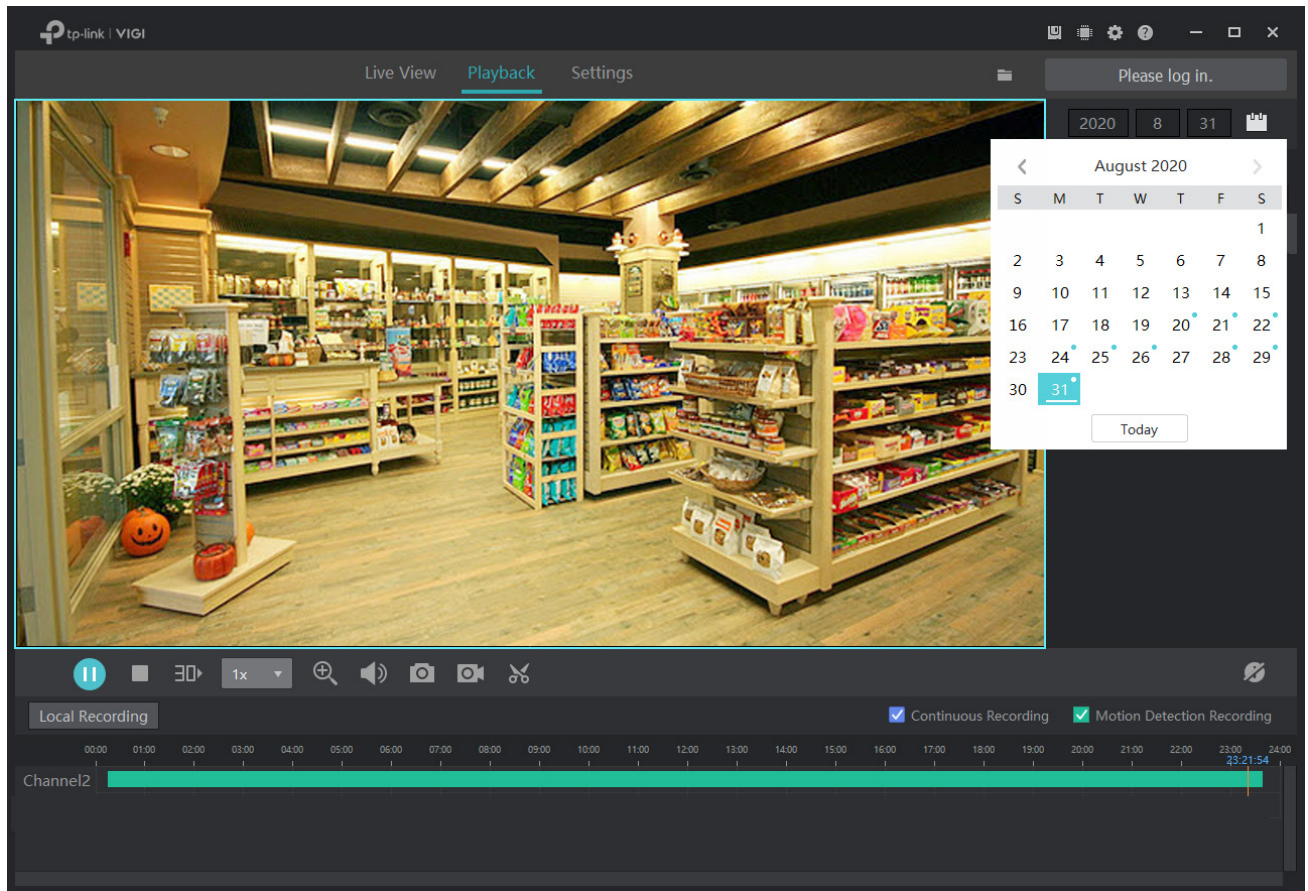


3. (Optional) Select the recording types by clicking the checkboxes of **Continuous Recording** and **Motion Detection Recordings**.

♥ 5.2 Playback Operations

In Playback, you can use the toolbar and time bar at the bottom to adjust the display, edit and export the recordings.

5.2.1 Basic Playback Operations

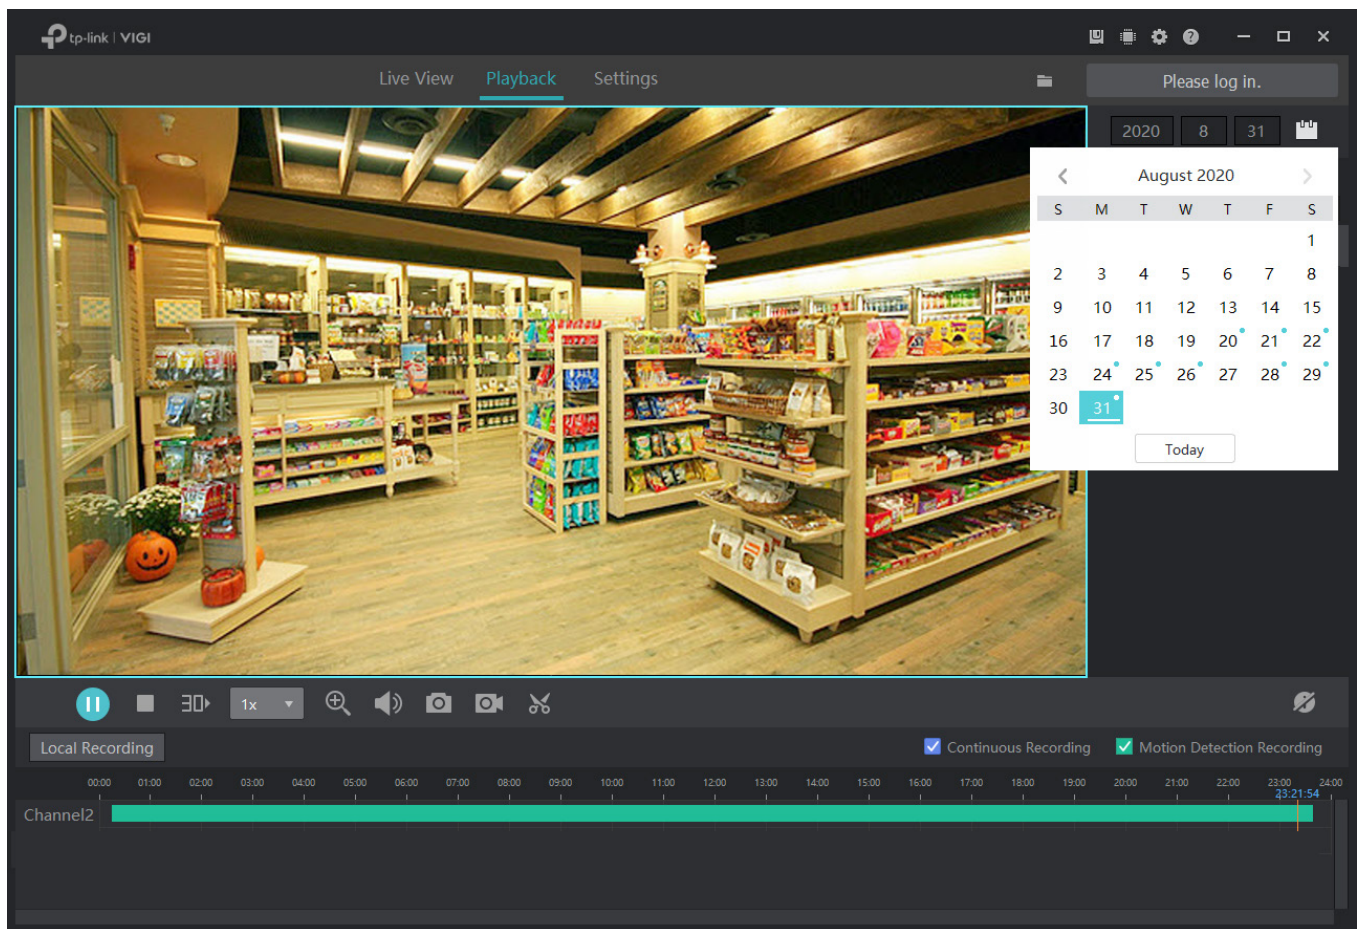

Click to rewind the recording. Click again to stop.



Click to fast forward the recordings. Click again to stop.



Jump forward by 30 seconds.



Select from the drop-down list to change the playing speed.



Click the icon to turn your cursor into a magnifying glass. Scroll up/down the mouse wheel on the screen to zoom in/out.



Click to turn on or off the volume.



Click to take a screenshot. To open the saved path, click  at the top right corner. To change the saved path, refer to [6.4 File Settings](#).



Click to start/end the recording manually. To open the saved path, click  at the top right corner. To change the saved path, refer to [6.4 File Settings](#).




Click to display/hide the channel number in Playback.


5.2.2 Edit Recordings

Follow the steps below to clip video files.


1. In Playback, specify a channel and date to list the recordings in the time bar. Click

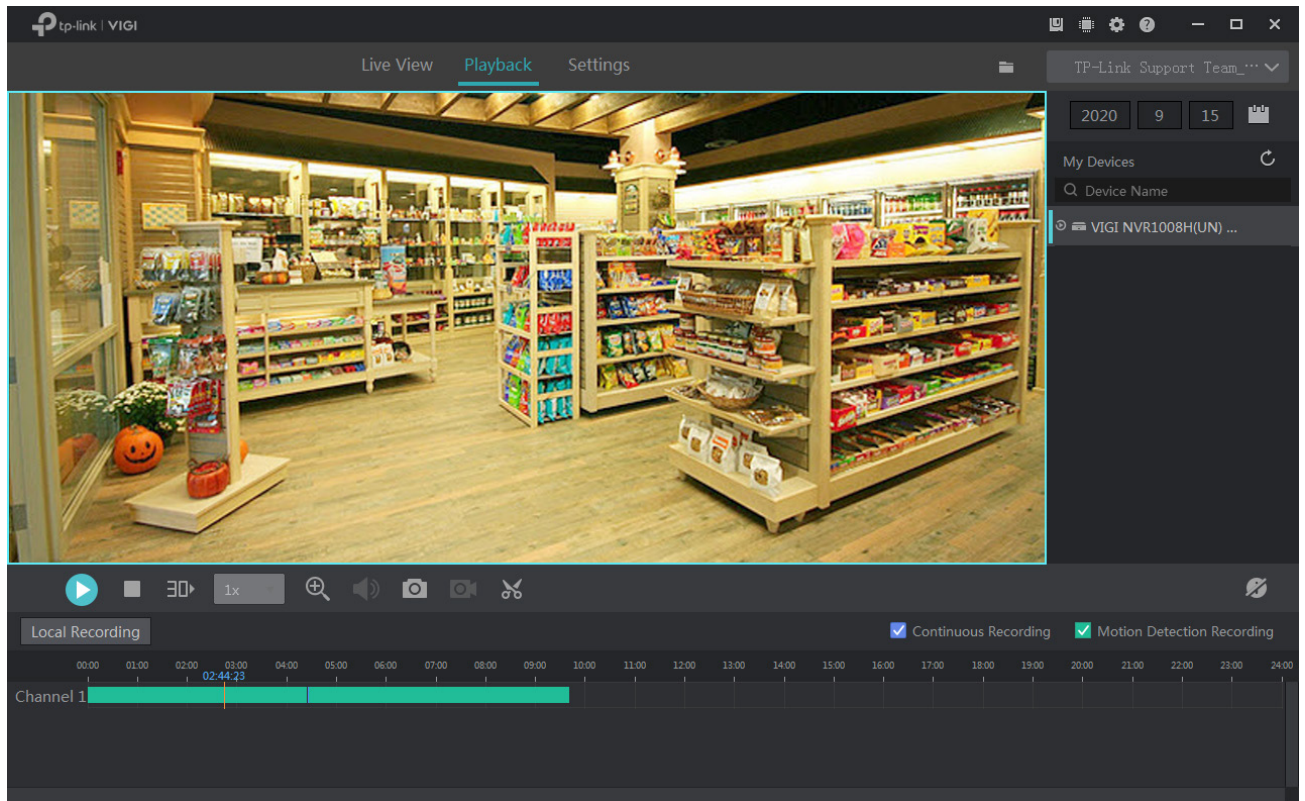

2. Move  on the time bar, or enter the start time and end time below to adjust the recording length. On the time bar, scroll up or down the mouse wheel to expand or contract the time line. Click [Export](#).

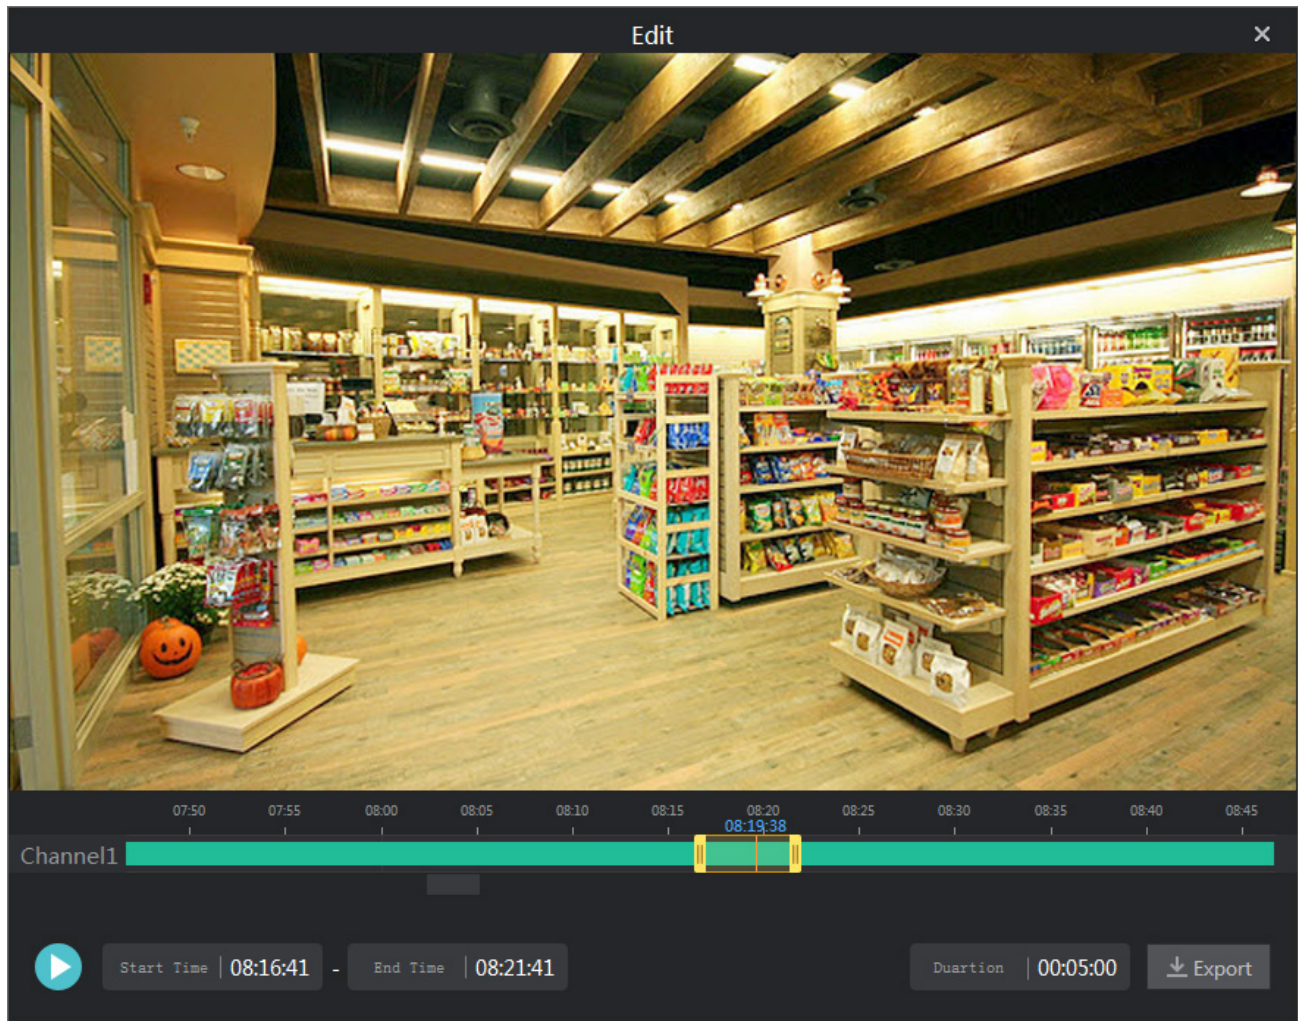

3. Select an export format and click **Export**.

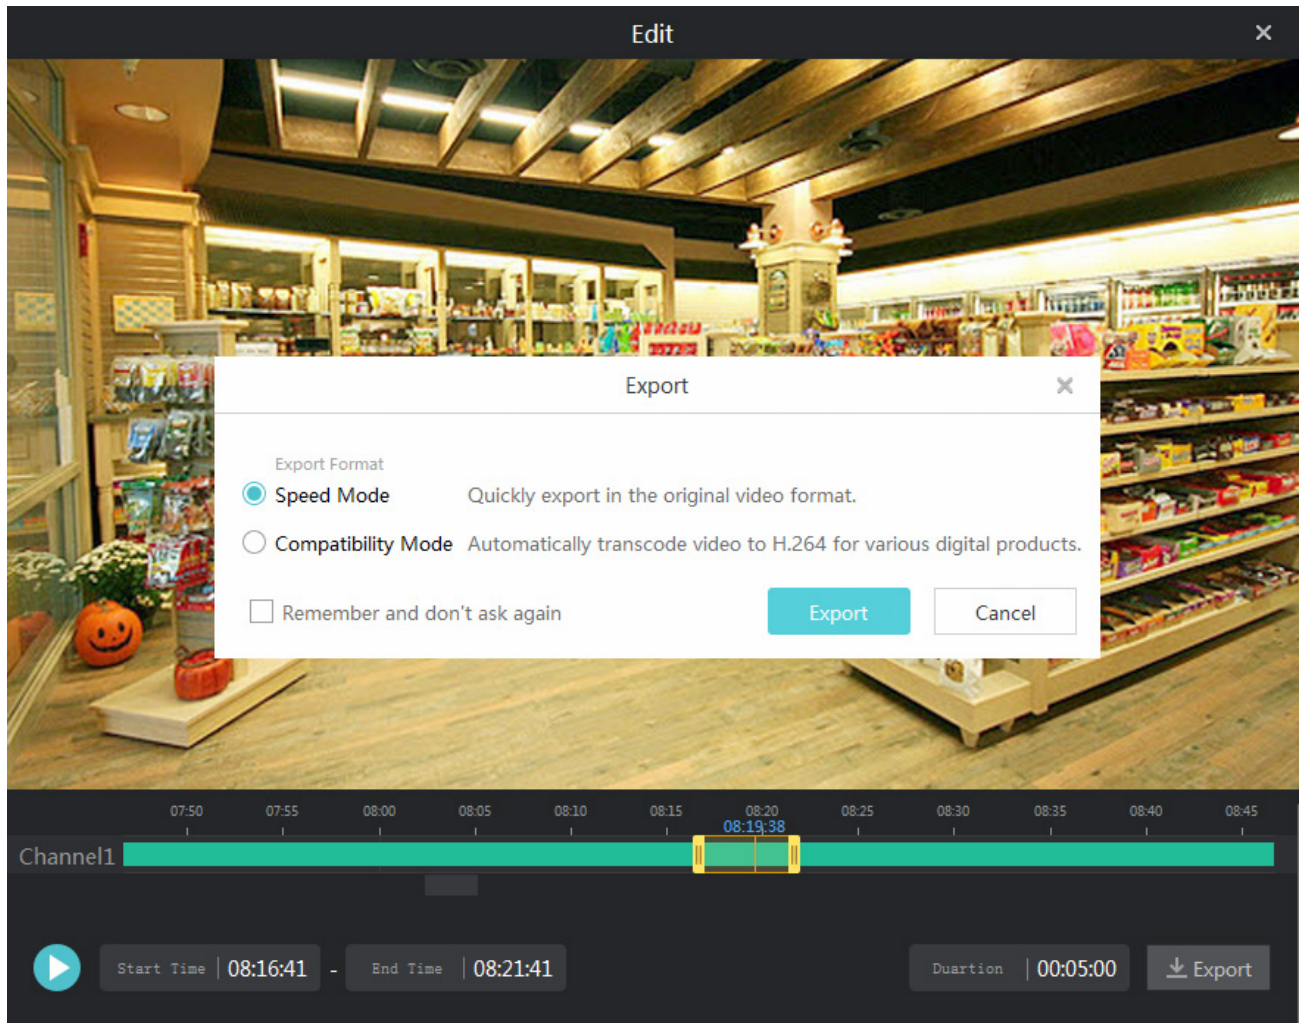

Note: This window will not pop up if you click **Remember and don't ask again** or set the export format in Settings. For details, refer to [6. 5 Export Format](#).

6

Recording and Storage


This chapter guides you on how to export recordings and configure recording and storage settings for your cameras. VIGI Security Manager allows you to set recording schedule templates and apply these templates to different cameras. You can also check and configure the storage settings for recordings and exported files. This chapter includes the following sections:

- [Arrange Schedules for a Single Camera](#)
- [Storage Management](#)
- [Export Recordings](#)
- [File Settings](#)
- [Export Format](#)

♥ 6.1 Arrange Schedules for a Single Camera

Storage schedule section provides convenience and flexibility for the daily monitoring of your devices. You can enable and customize the recording schedule and storage settings for a single camera. Go to **Settings > Storage Schedule** to modify these settings.

Note: If you have logged in to your TP-Link ID, you can not arrange schedules for cameras. To modify these settings, log out of your TP-Link ID and manage devices locally.

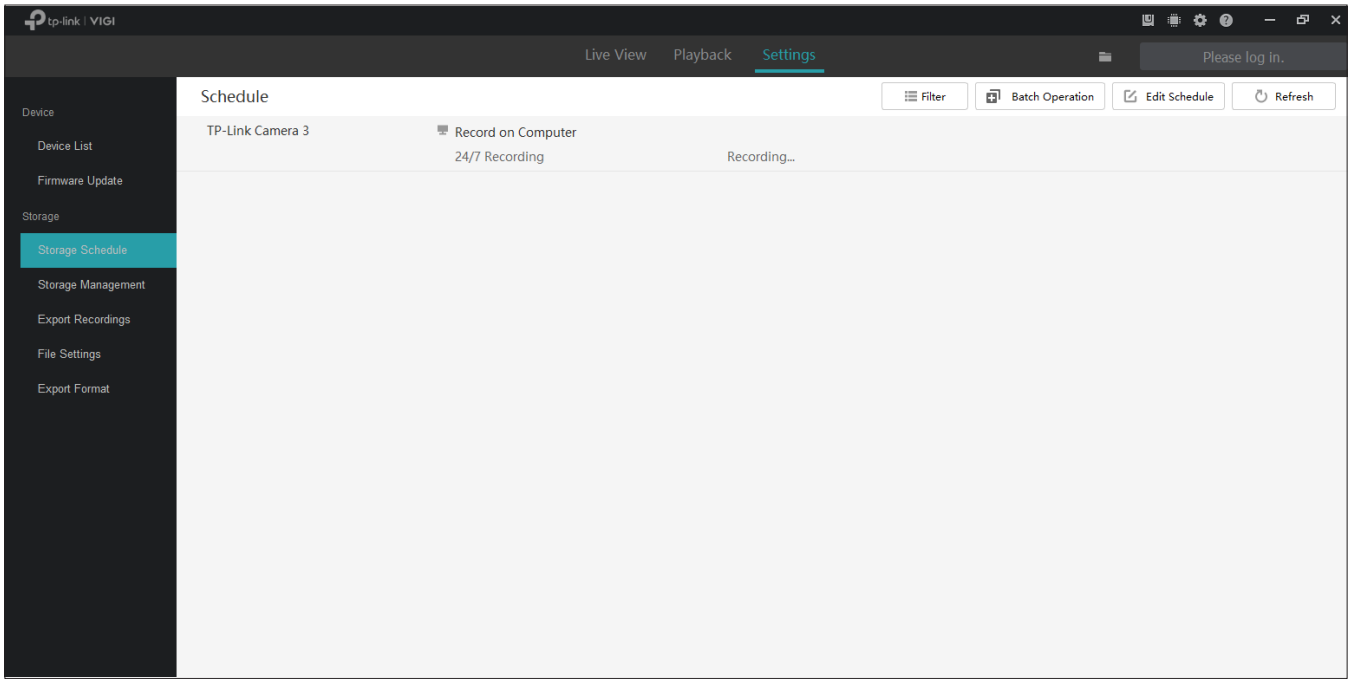

 **Filter**

Record on Computer: Displays the cameras whose recordings are stored in the computer.

Record on SD Card: Displays the cameras whose recordings are stored in the SD card.

 **Batch Operation**

Enable/Disable record on your computer for all cameras.

 **Edit Schedule**

Click to edit schedule templates for recording.

 **Refresh**


Click to refresh the camera list.

6.1.1 Customize Schedule Template

Recording schedules include 4 fixed templates and 4 custom templates. In **Storage Schedule**, click  **Edit Schedule** on the top right to enter **Edit Schedule Template**.


■ 24/7 Recording

24/7 Recording allows your camera to record continuously all the time.

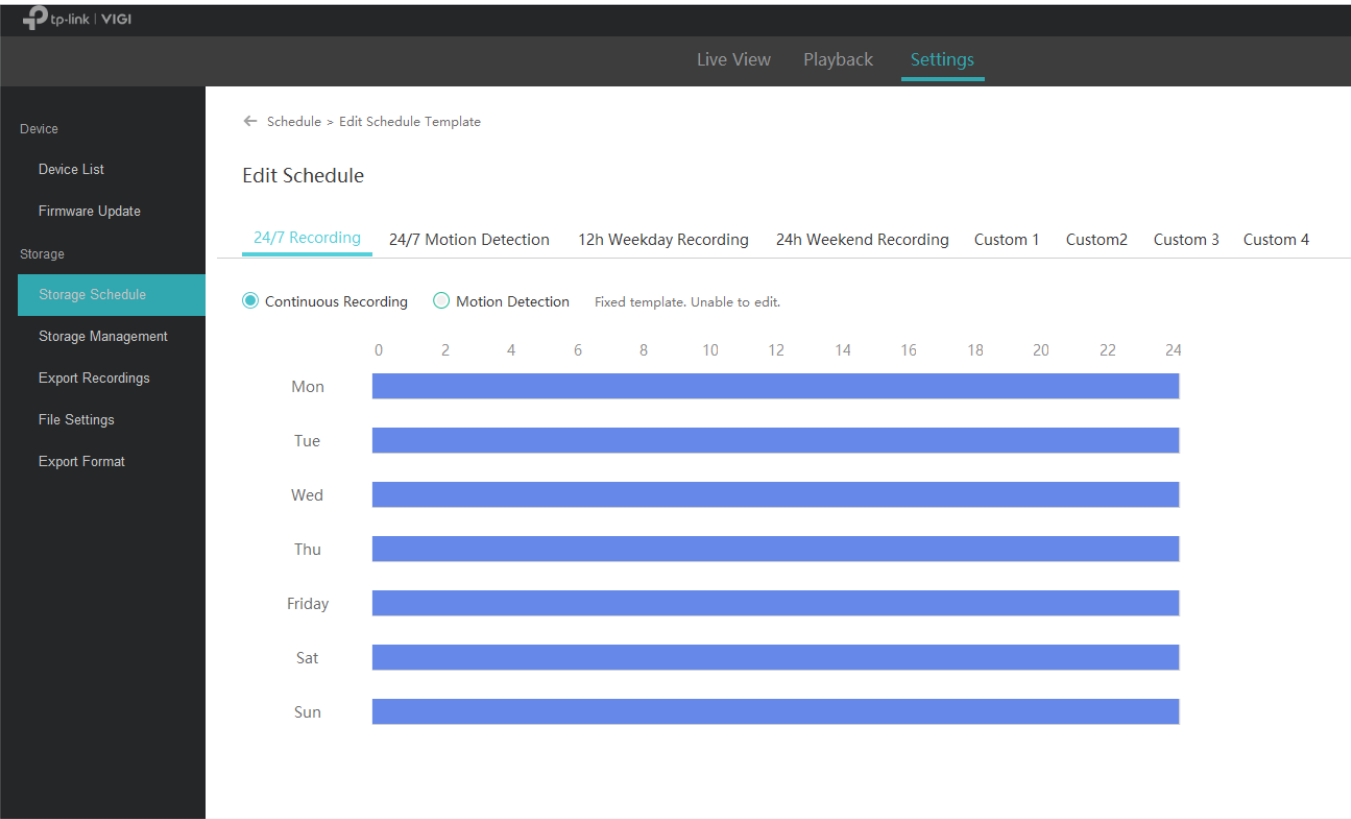


■ 24/7 Motion Detection

24/7 Motion Detection allows your camera to record when motion detection is triggered.

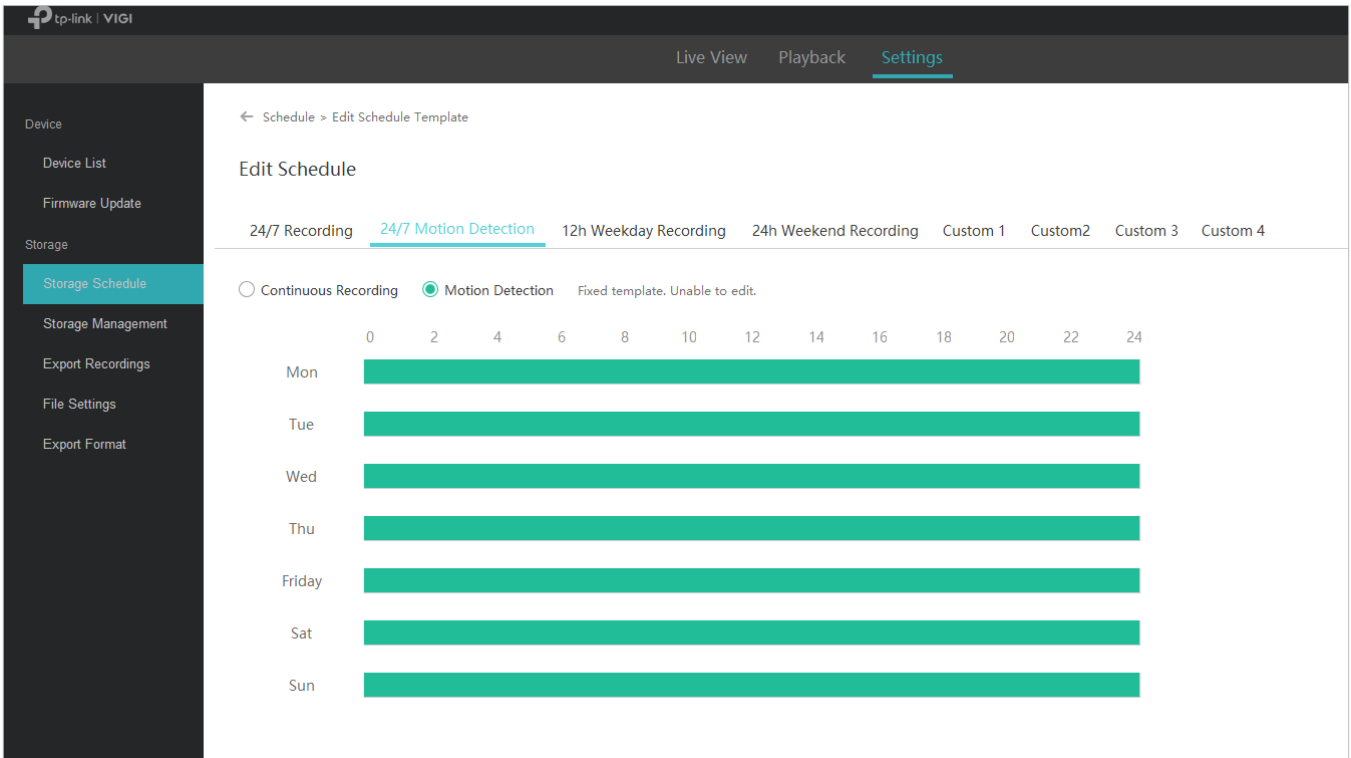


■ 12h Weekday Recording

12h Weekday Recording allows your camera to record continuously from 8:00 to 20:00 on weekdays.

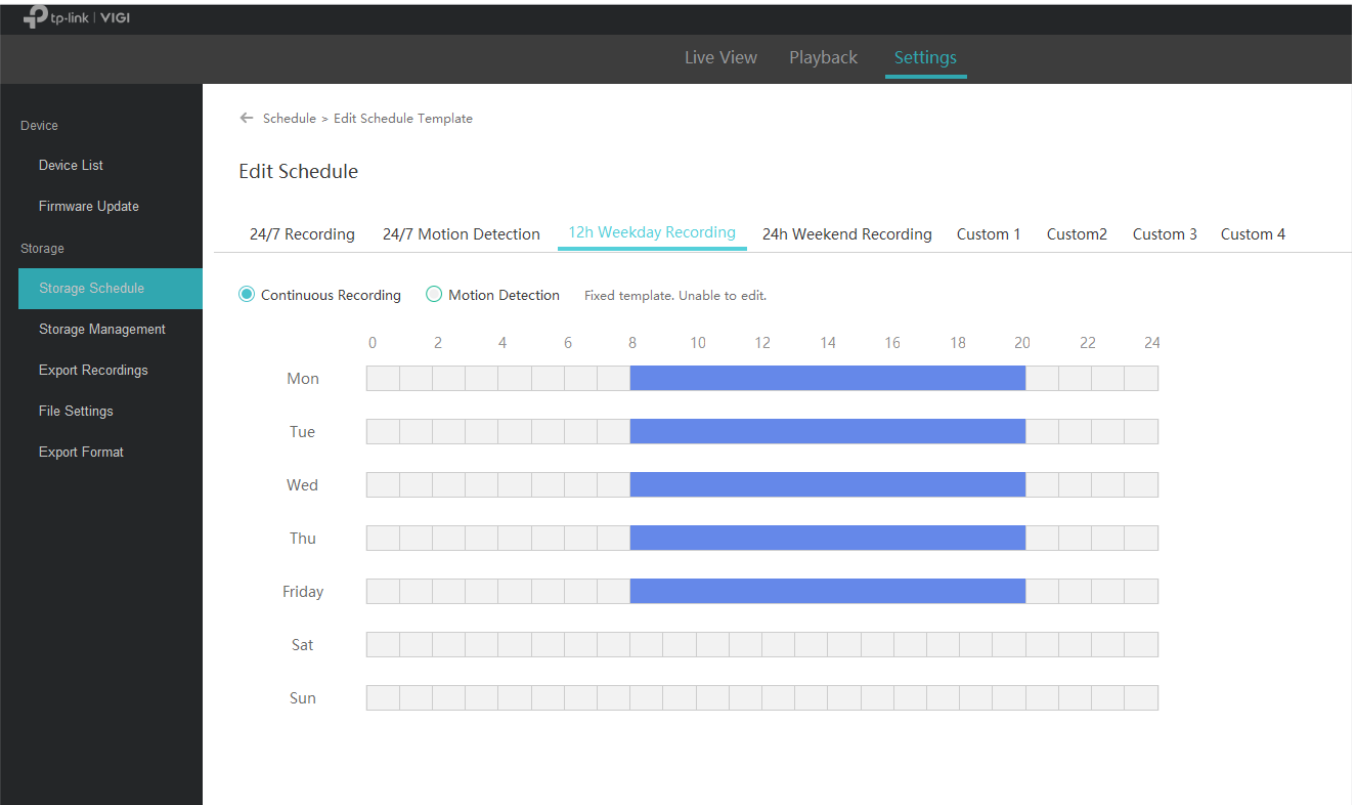

■ 24h Weekend Recording


24h Weekend Recording allows your camera to record continuously all day on weekends.

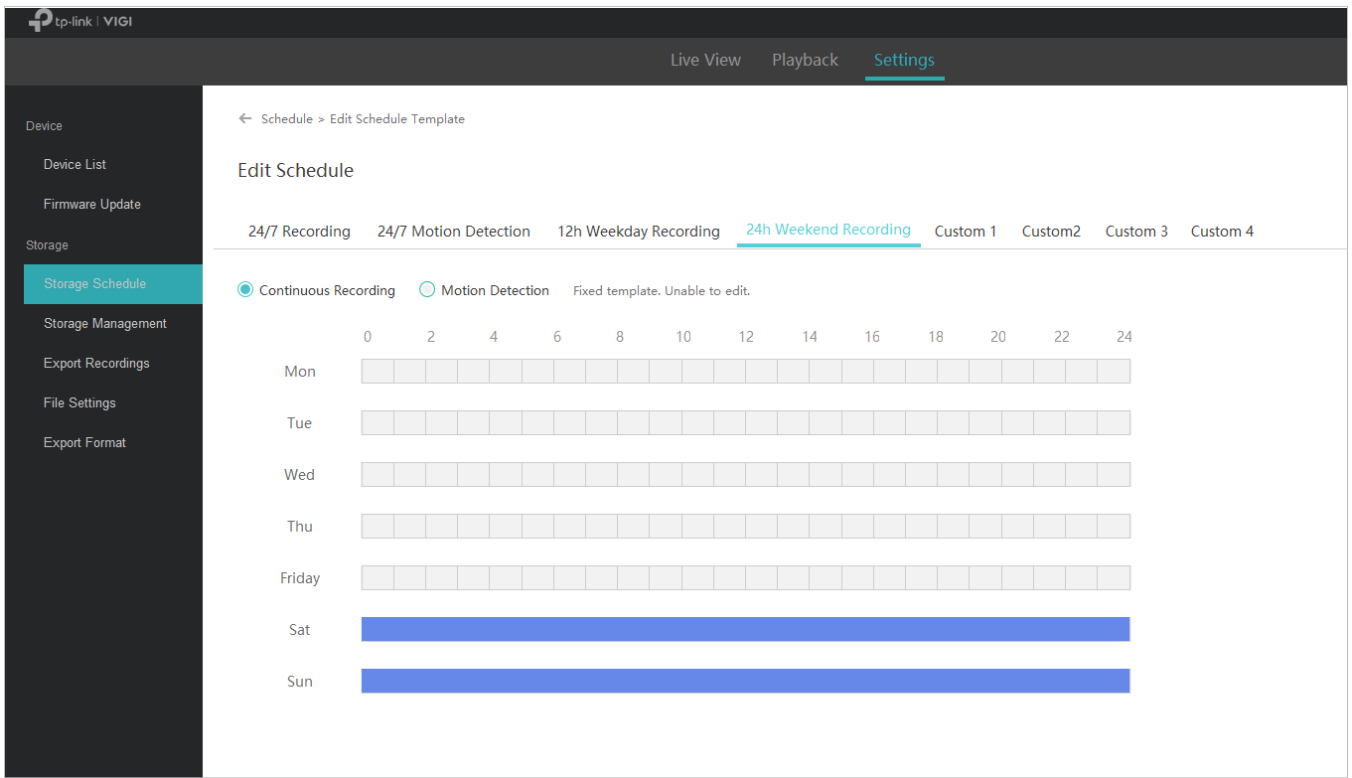

■ Custom Schedule

You can customize the recording schedule according to your needs. For example, the camera will record based on a schedule of motion detection from 5:00-16:00 on weekdays; On weekends, the camera will record continuously from 1:30-23:00. Follow the steps below to finish the configuration.


1. Select a custom template (custom 1).
2. Click **Motion Detection** and drag the cursor on time bar to set 5:00 to 16:00 for continuous recording from Monday to Friday. The color of these rectangles will be changed to green.
3. Select **Continuous Recording** and drag the cursor to set 1:30 to 23:00 for motion detection recording on Saturday and Sunday. The color of these rectangles will be changed to blue. To enter the start and end time manually, click the time bar to select a rectangle first, then click the rectangle again.
4. Click **Save**.

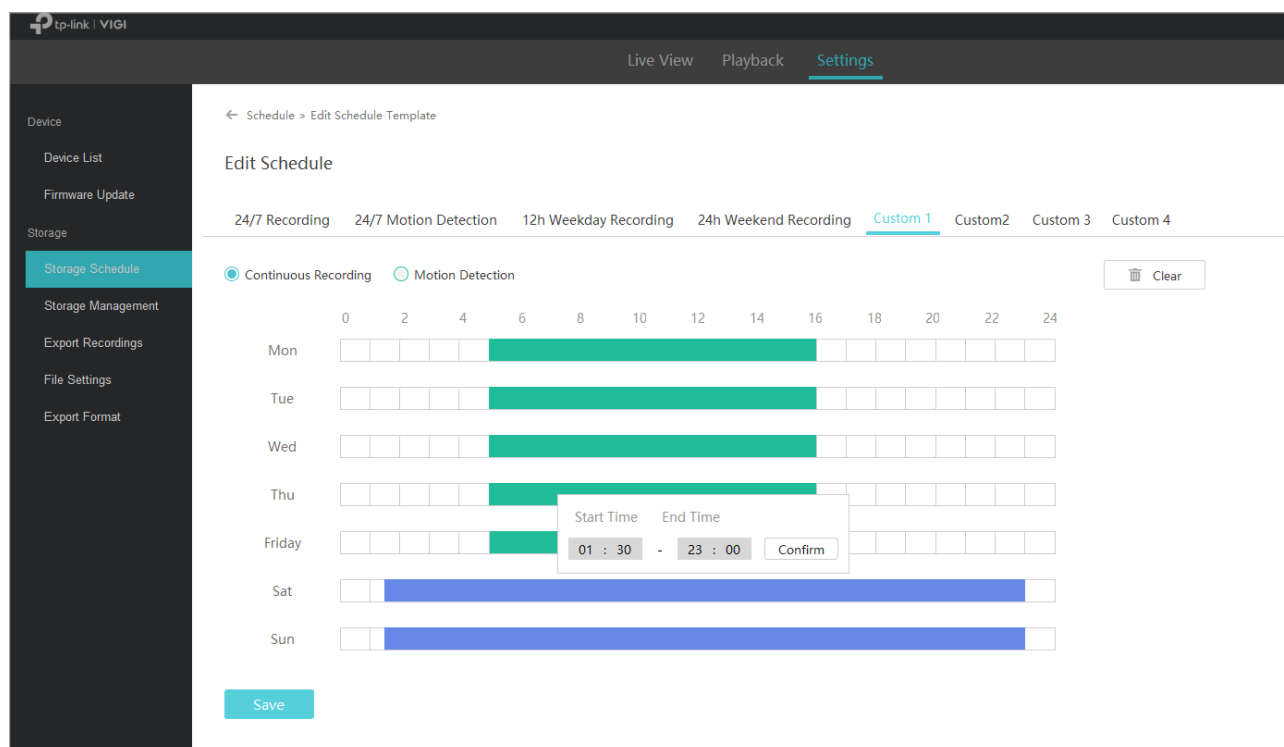


6. 1. 2 Configure Storage Settings

If you have not enabled recording function when adding the camera to VIGI Security Manager, follow the steps below to configure the storage settings. If you have already enabled this function, you can skip this section.


1. Click the camera you want from the list.

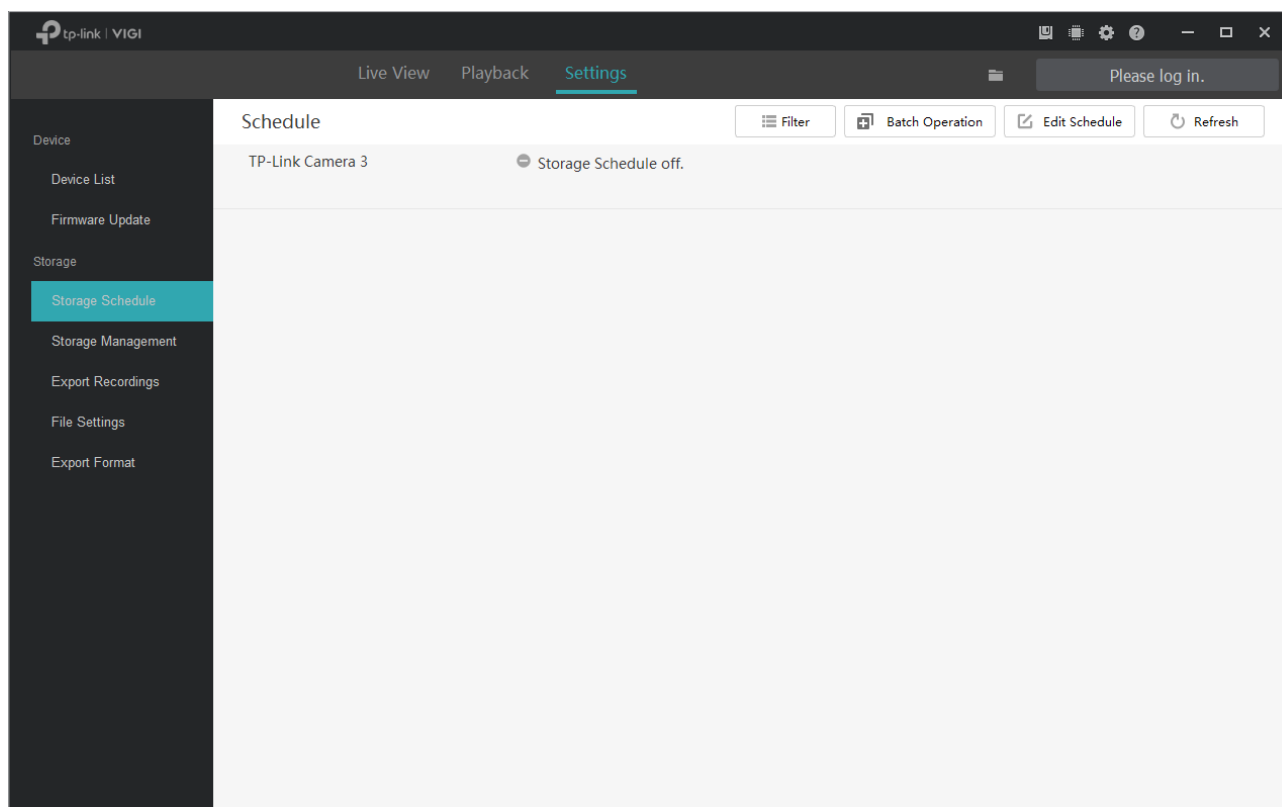

2. Click [Enable Record on Computer](#) to configure storage settings.

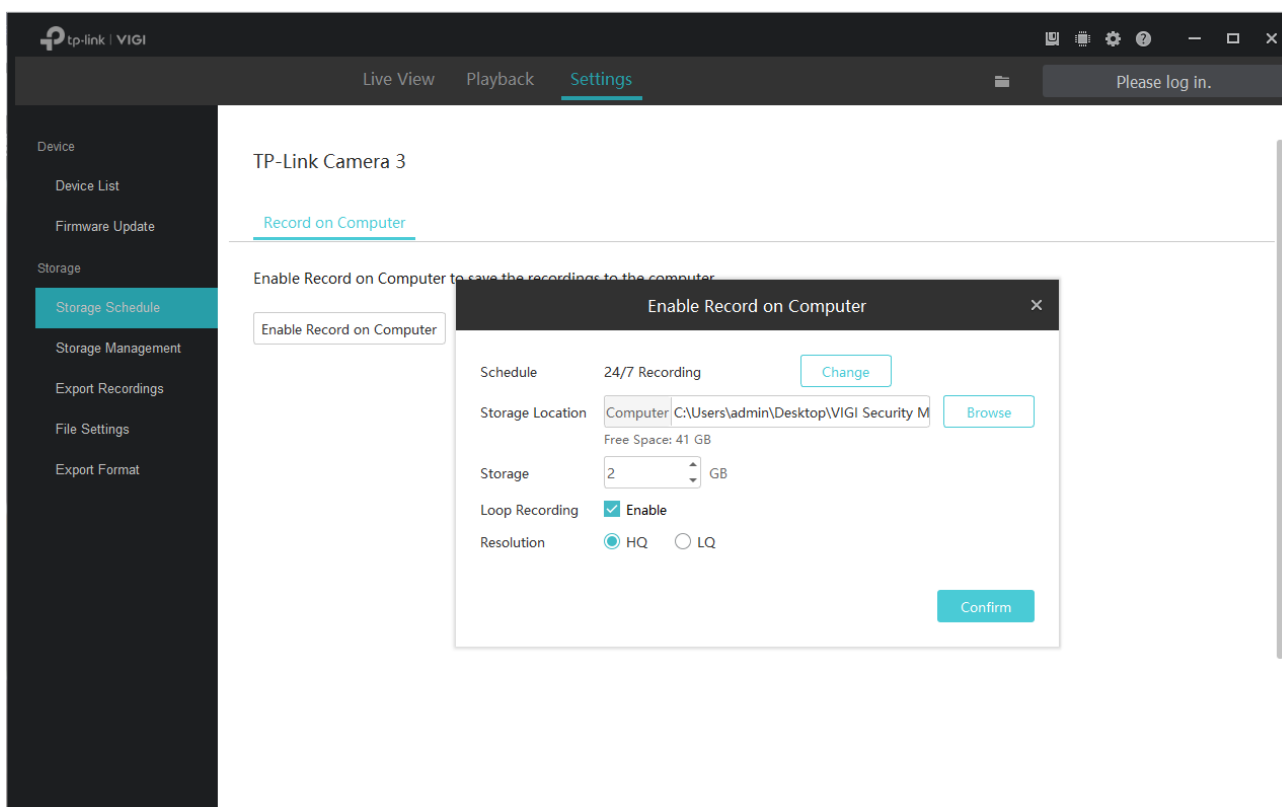

 3. Set the storage and recording settings.

Schedule	Click  to customize the recording schedule of the camera on computer.
Storage Location	Click  to select the storage location of files.
Storage	Set the storage space for storing the recordings on your computer.
Enable Loop Recording	Click the checkbox to enable loop recording.
Resolution	Select the recording resolution. HQ and LQ refers to the high and low recording resolution respectively.

 
4. Click **Confirm**.

6. 1. 3 Configure Recording Schedule and View Storage Settings

You can check storage settings and apply the schedule templates to the cameras directly added to VIGI Security Manager.

Note: The recording schedule of camera set on VIGI Security Manager will not be synchronized if you add this camera to your NVR later.


To apply the recording schedule to the camera, follow the steps below:

1. Go to **Settings > Storage Schedule**, and click the camera you want to configure.
2. Enable **Record on Computer**.
3. Click  to select the schedule template according to your needs.

Note: Only the cameras supporting motion detection function can apply the schedule of motion detection.

4. Set the storage and recording settings.


Storage Location	Displays the location where recordings are stored. Click Browse to check the storage location of files.
Storage	Displays the assigned capacity for storing camera recordings. Click Clear Recordings to delete all the recordings stored on your computer.
Enable Loop Recording	Displays the status of loop recording.
Resolution	Select the recording resolution. HQ and LQ refers to the high and low recording resolution respectively.

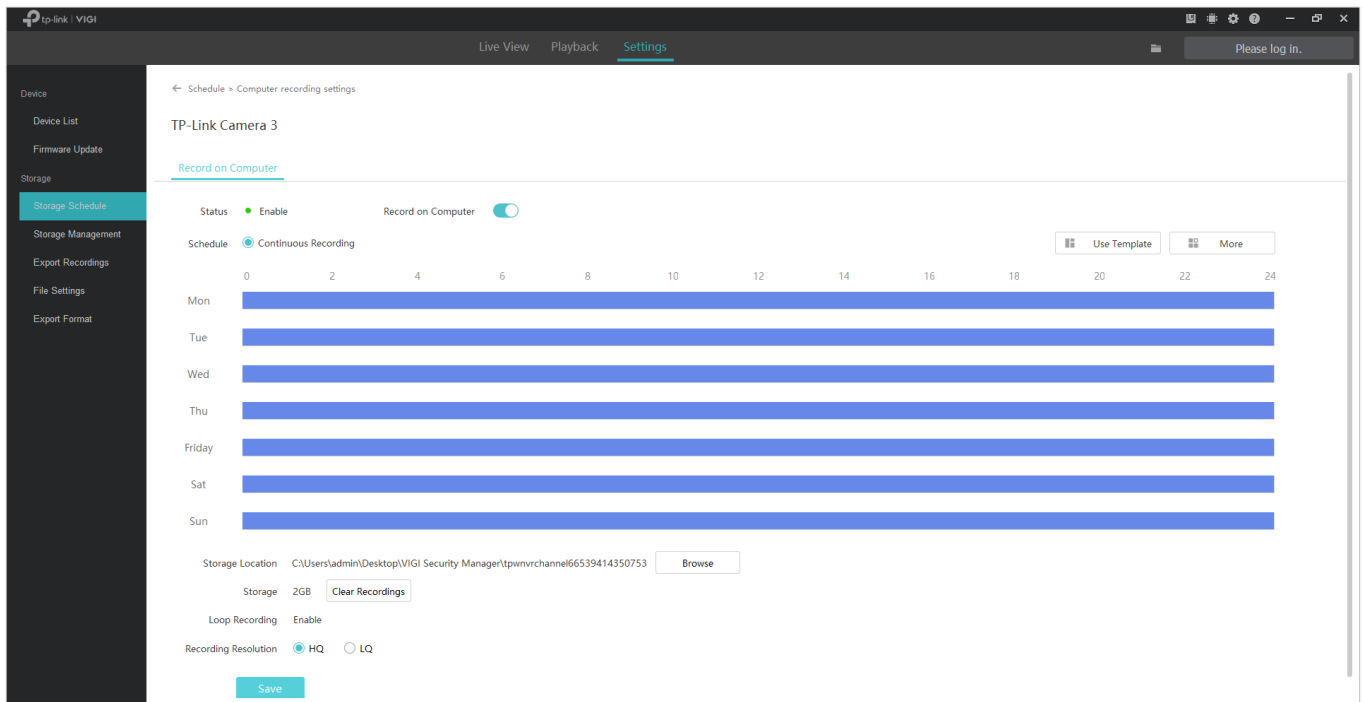5. Click **Save**.

♥ 6.2 Storage Management

To check the storage settings of your cameras directly added to VIGI Security Manager, go to **Settings** > **Storage Management**.

Note: If you have logged in to your TP-Link ID, you can not modify storage settings. To modify these settings, log out of your TP-Link ID and manage devices locally.

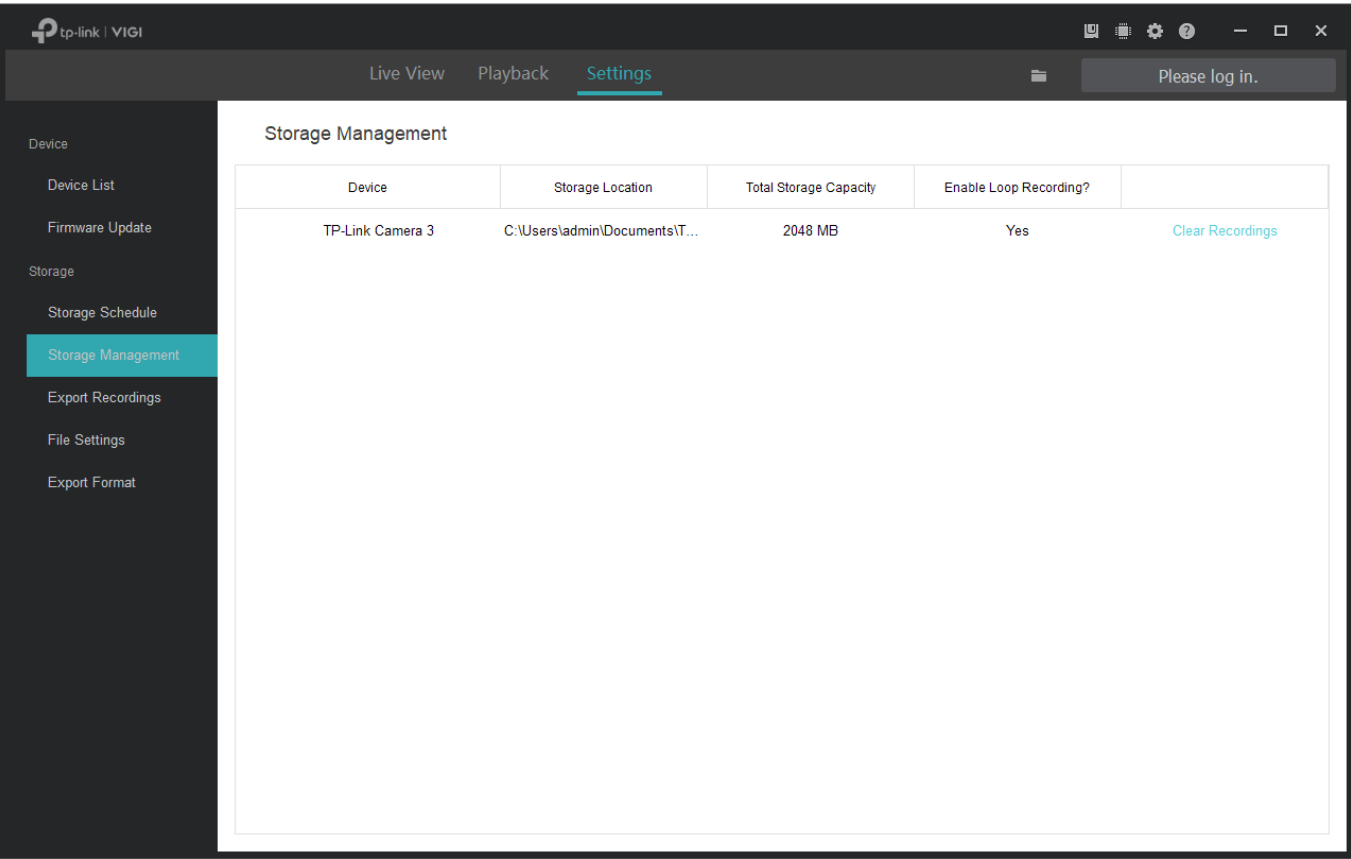

Device	Displays the name of camera.
Storage Location	Displays the location where recordings are stored.
Total Storage Capacity	Displays the capacity for storing recordings.
Enable Loop Recording	Displays the status of loop recording.
Clear Recording	Click to delete all the recordings stored on your computer.


♥ 6.3 Export Recordings

To export the recordings of the NVR and cameras according to your needs, go to **Settings** > **Storage** > **Export Recordings** and follow the steps below.

Note: If you have logged in to your TP-Link ID, you can not export recordings. To export recordings, log out of your TP-Link ID and manage devices locally.

■ Export Recordings From NVR


1. Select the NVR you want and specify the channel from the drop-down list, select date and recording type, then click **Search** to filter files.

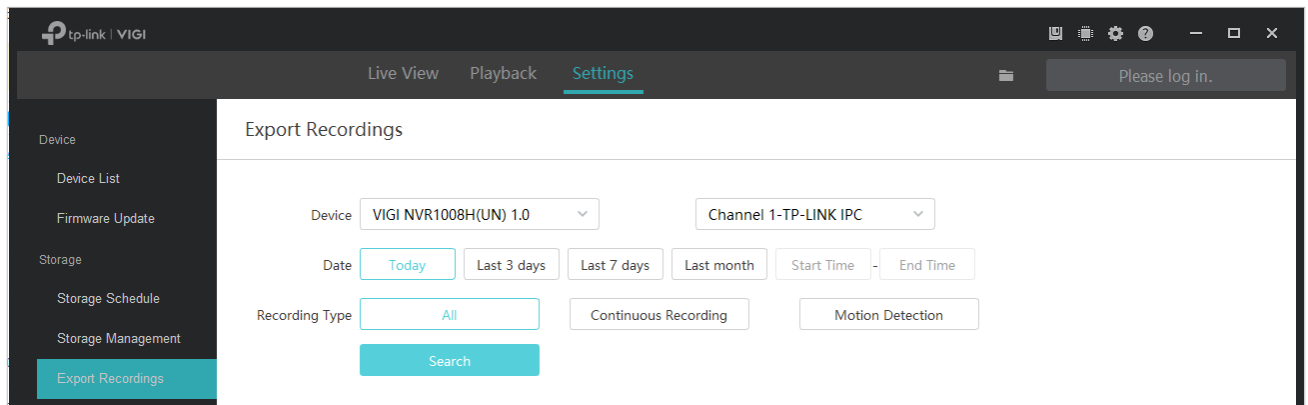

2. Select the recording files you want to export and click **Export**.

							0 file(s) selected	Export	Export All
☐	No.	Device	Channel	Start Time	End Time	Recording Type	File Size		
☐	1	VIGI NVR	Channel2	2020-08-26 23:50:33	2020-08-26 23:50:37	Continuous Recording	228.18KB		
☐	2	VIGI NVR	Channel2	2020-08-26 23:50:37	2020-08-27 08:58:32	Motion Detection	885.65MB		
☐	3	VIGI NVR	Channel2	2020-08-27 08:58:32	2020-08-27 08:59:56	Motion Detection	2.95MB		
☐	4	VIGI NVR	Channel2	2020-08-27 08:59:56	2020-08-27 16:58:46	Motion Detection	1004.44MB		
☐	5	VIGI NVR	Channel2	2020-08-27 16:58:46	2020-08-27 21:22:49	Motion Detection	546.51MB		
☐	6	VIGI NVR	Channel2	2020-08-27 23:14:25	2020-08-27 23:23:35	Motion Detection	16.26MB		

3. Click **Browse** to select the folder on your computer to store the exported files.

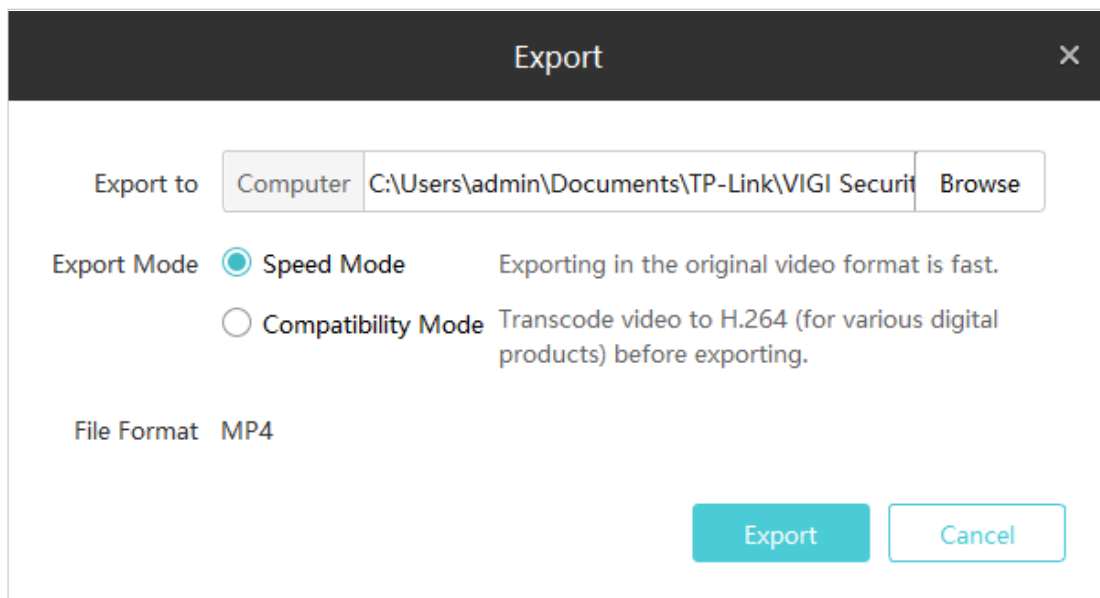


4. Select the export mode.

Speed Mode: The export process is faster than that of compatibility mode.


Compatibility Mode: The exported recordings will be transcoded to H.264 which is compatible with various digital products.

5. Click **Export** and the files will be successfully exported.

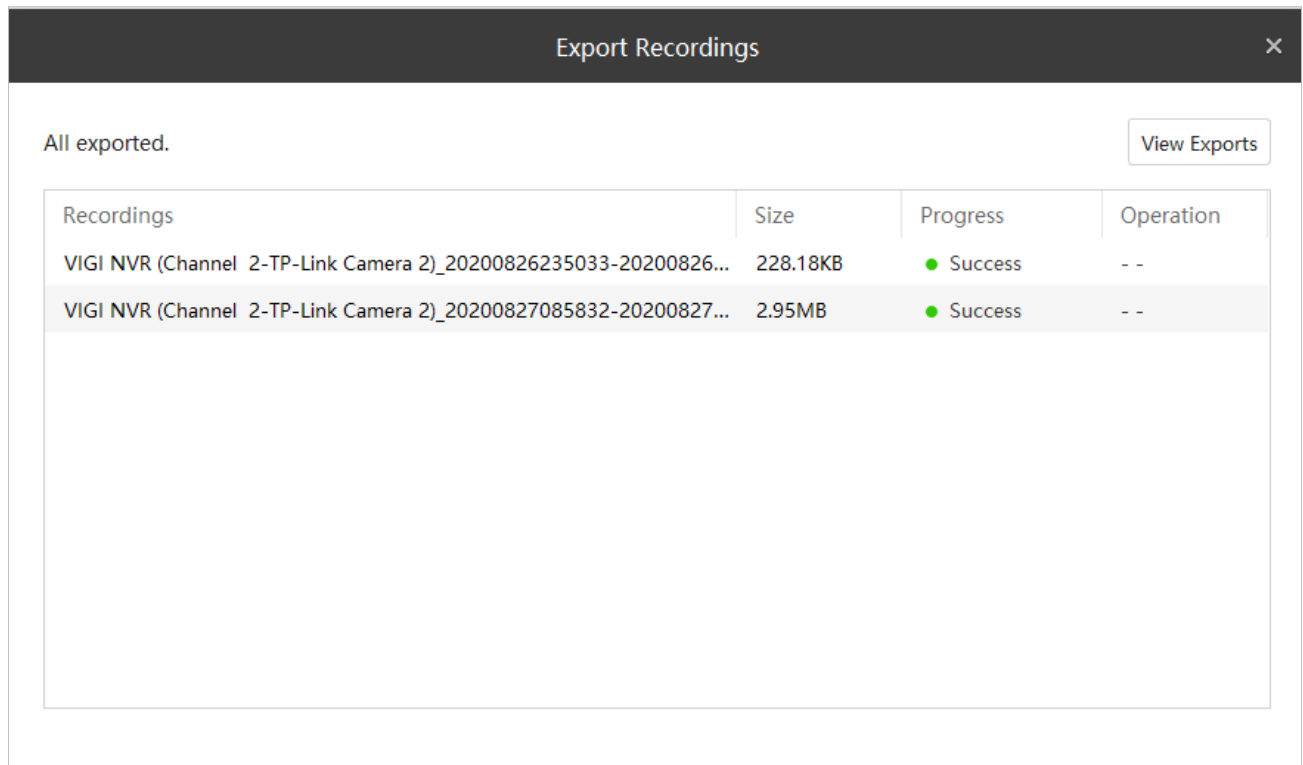

■ Export Recordings From Camera

1. Select the camera you want and the recording source from the drop-down list, select date and recording type, then click **Search** to filter files.

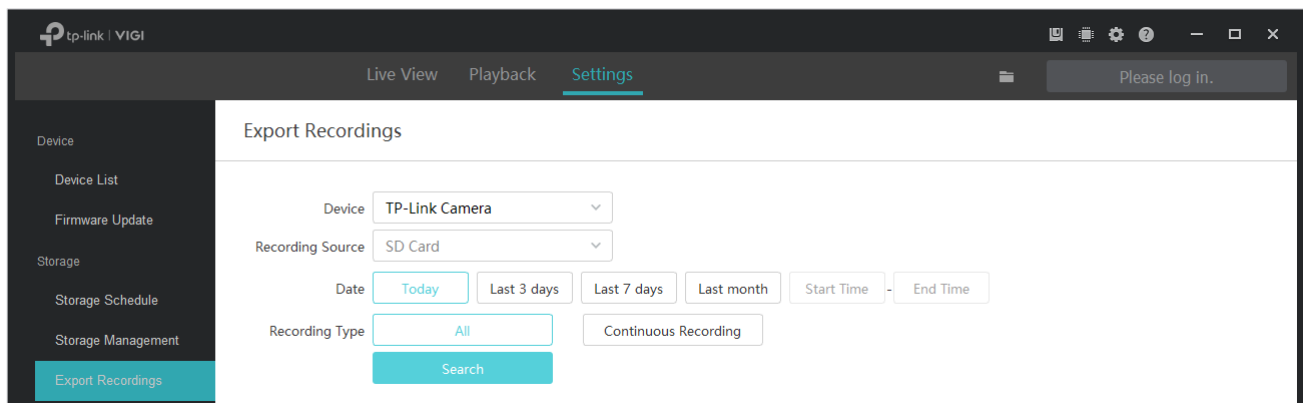

2. Select the recording files you want to export and click  **Export** .

2 file(s) selected, total 0B ⓘ							 Export	 Export All
☒	No.	Device	Channel	Start Time	End Time	Recording Type	File Size	
☒	1	TP-Link Camera 3	-	2020-08-28 00:13:38	2020-08-28 00:13:38	Continuous Recording	1MB	
☒	2	TP-Link Camera 3	-	2020-08-28 00:14:21	2020-08-28 00:14:37	Continuous Recording	2MB	

3. Click **Browse** to select the folder on your computer to store the exported files.

Export

Export to

Computer

C:\Users\admin\Documents\TP-Link\VIGI Security

Browse

Export Mode

☒ **Speed Mode**

Exporting in the original video format is fast.

☐ **Compatibility Mode**

Transcode video to H.264 (for various digital products) before exporting.

File Format

MP4

Export


Cancel

4. Select the export mode.

Speed Mode: The export process is faster than that of compatibility mode.


Compatibility Mode: Transcode the exported recordings to H.264 which is compatible with various digital products.

5. Click **Export**, and the files will be successfully exported.

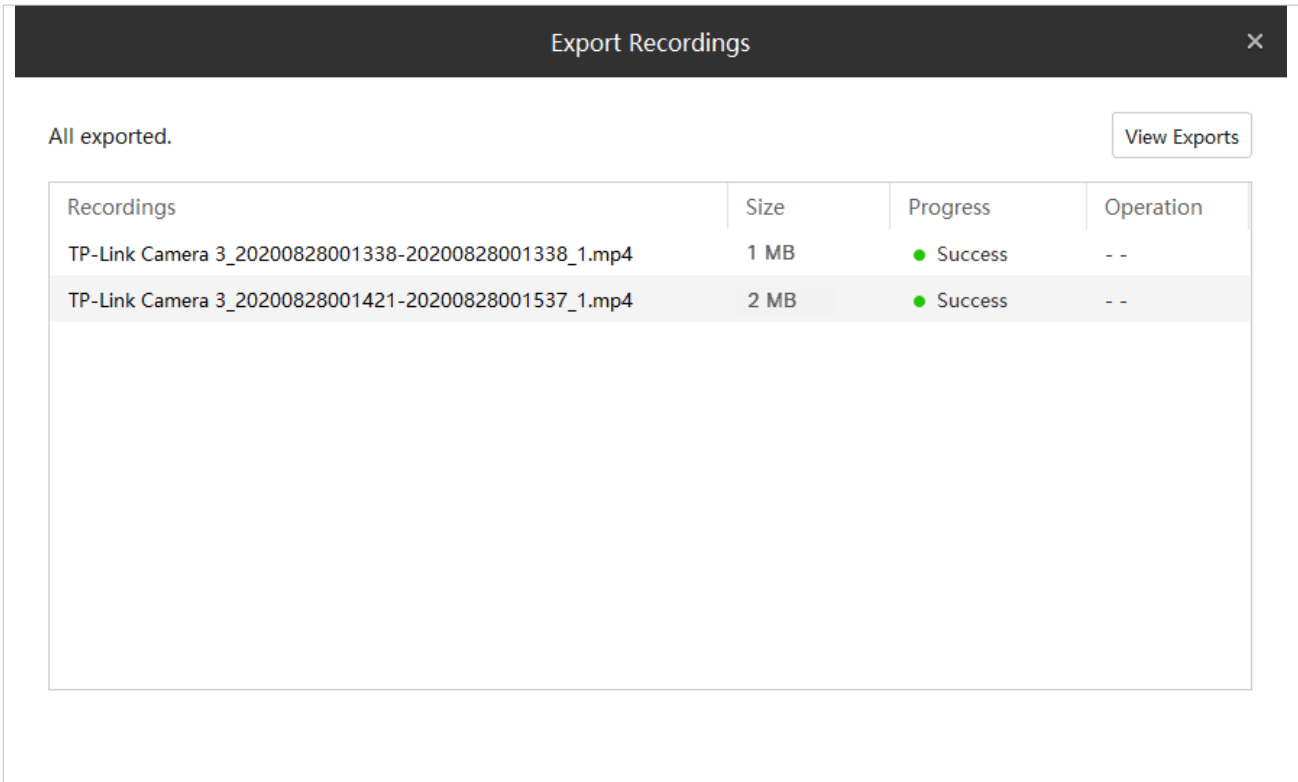

♥ 6.4 File Settings

You can select the storage location for the screenshots, videos recorded in playback and video clips. Go to **Settings > Storage > File Settings** and click **Browse** to select the path. After you click **Save**, three folders, **Picture**, **Video** and **Cloud**, will be automatically created to store the corresponding files.

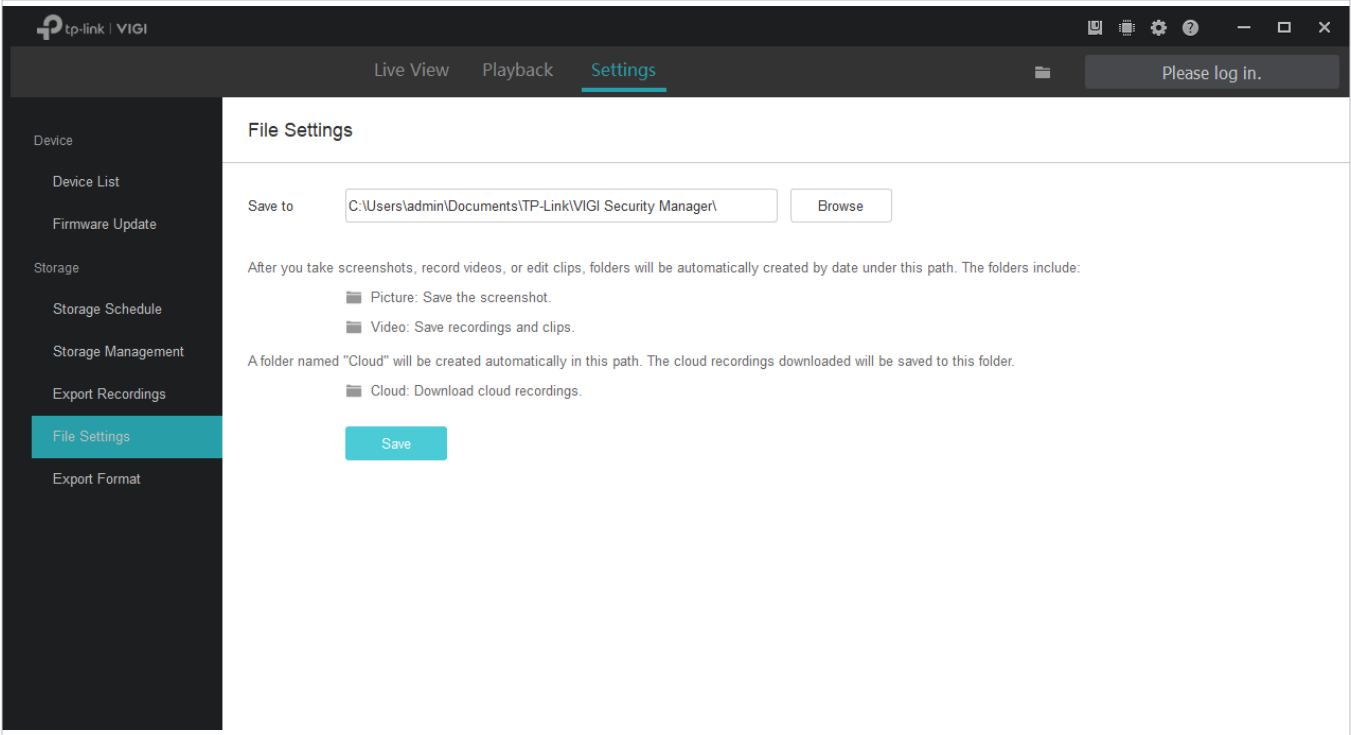

♥ 6.5 Export Format

You can set the export mode in advance to simplify the export process.

Ask before each export


You should select the export mode every time before exporting files.

Using the following mode

Skip the pop-up window of export mode when exporting files. All the files will be exported using the selected mode.

Speed Mode: The export process is faster than that of compatibility mode.

Compatibility Mode: The exported recordings will be transcoded to H.264 which is compatible with various digital products.

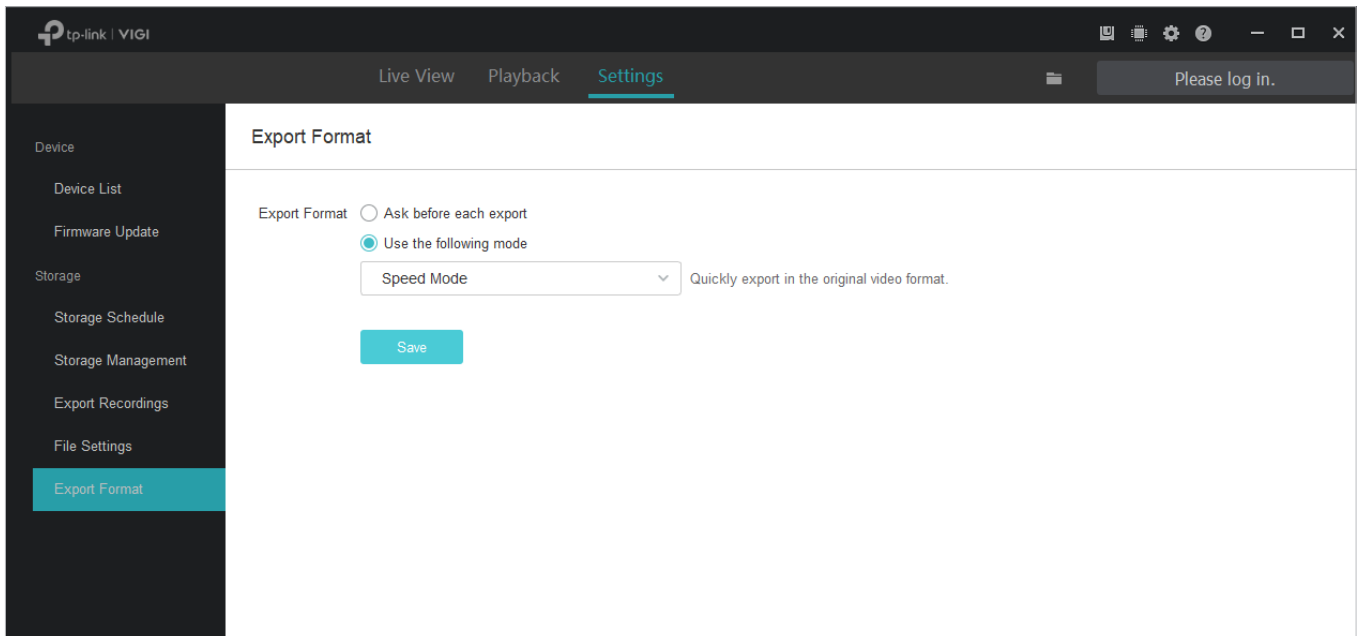




Configure Your Cameras and NVRs

This chapter guides you on how to configure cameras and VIGI NVRs added to VIGI Security Manager. You can configure events on cameras, the information, display parameters and network settings of devices. For VIGI Security Manager, You can also check and configure system settings and upgrade its firmware. This chapter includes the following sections:

- [View Device Information](#)
- [Configure Basic Information](#)
- [Configure Display Information](#)
- [Configure Video](#)
- [Configure Events \(Only for Cameras\)](#)
- [Configure Network Settings](#)
- [Cloud Service](#)
- [Configure System Settings](#)
- [Upgrade the Firmware](#)
- [Remove Devices](#)

♥ 7.1 View Device Information


In Device List, all devices added to VIGI Security Manager are listed. If you have logged in with your TP-Link ID, only the devices bound with the TP-Link ID are listed.

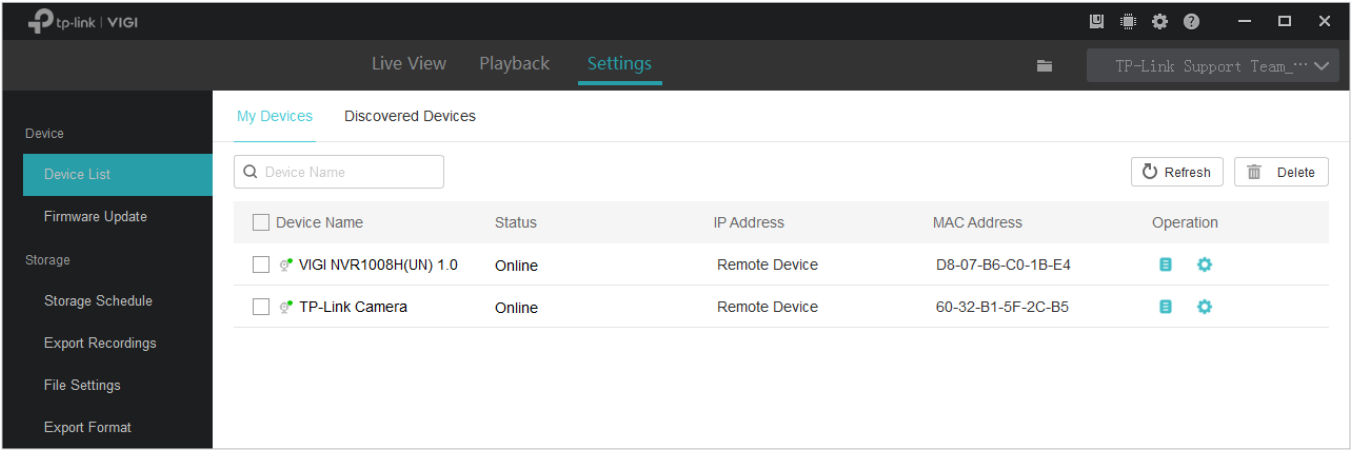

Device Name	Displays the device name.
Status	Displays the connection status. If the device is offline, hover your cursor on and follow the instructions for troubleshooting.
IP Address	Displays the IP address of the device when the device is in the same subnet with the manager host. When the device is not in the same subnet, Remote Device is displayed.
MAC Address	Display the MAC address of the device.
Operation	: Click to view more information of the device. For all managed NVRs and cameras, you can view their information in Device List. For cameras, you can also view system logs to monitor them. : Click to configure the device functions, such as display information, network settings, and cloud service.

7.1.1 View Device Information

Go to **Settings > Device List > My Devices** and click  in the list. Click **Device Info**. The following information are listed in the window.

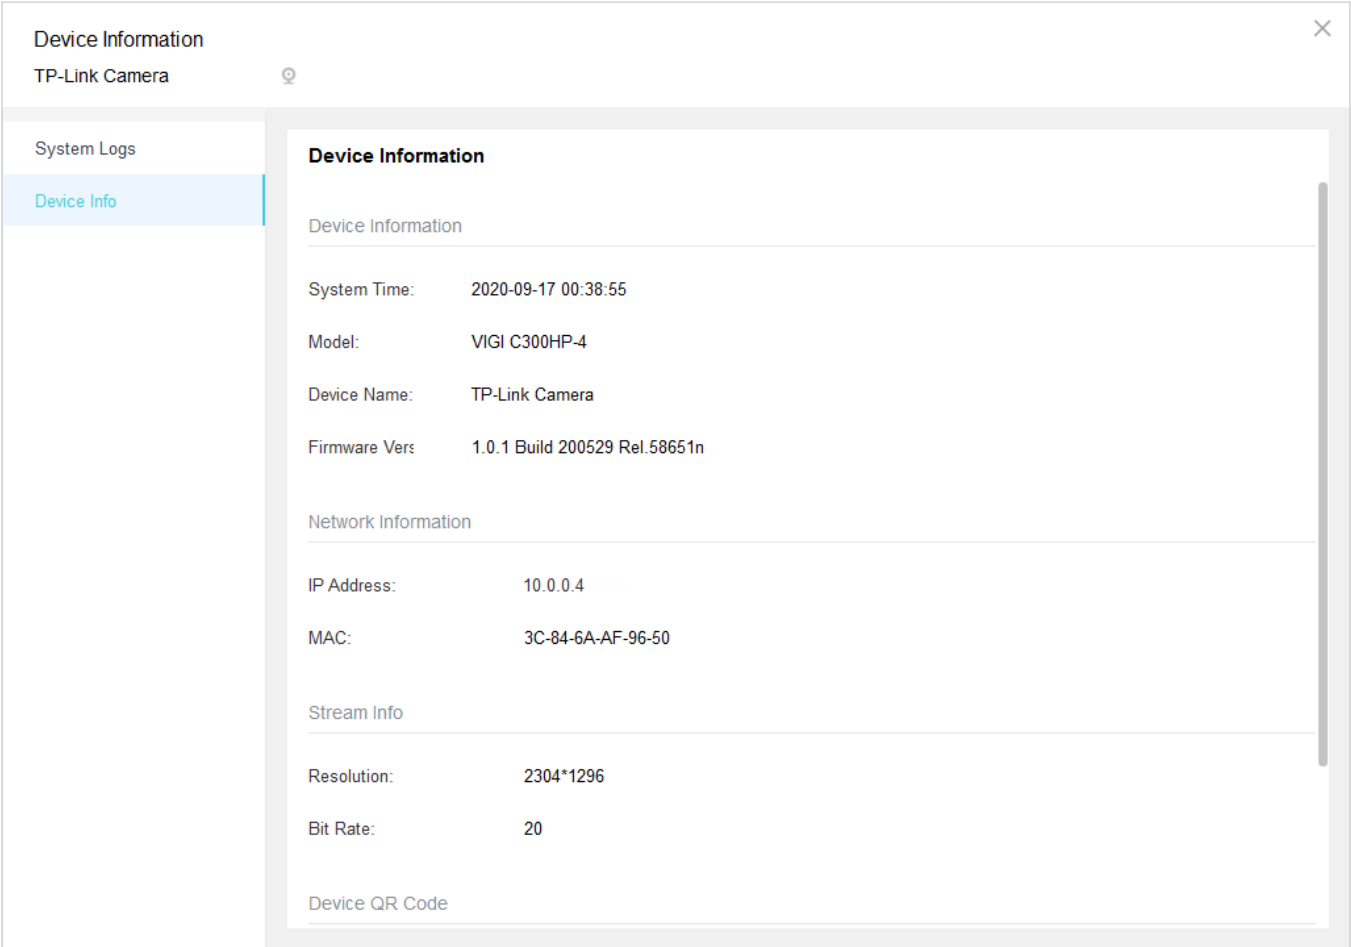

Device Information	Displays the system time, device model, device name, and firmware version.
Network Information	Displays the IP address and MAC address of the device. If the manager does not display the IP address, check the network and try again later.
Stream Info	(Only for cameras) Displays the resolution and bit rate.
Device QR Code	Display the QR code. You can scan it to add the device to VIGI app.

7.1.2 View System Logs (Only for Cameras)

System Logs are used to record the messages of cameras. To view system logs, go to **Settings** > **Device List** > **My Devices** and click  in the list. Click **System Logs** on the left. Select a time range and click **Search**. The logs recorded in the time range will be listed in the table.

Device Information
TP-Link Camera

System Logs

Device Info

System Logs
From: 2020 9 10  0 34 43
To: 2020 9 17  0 34 43
Activity: All
Search

Time	Activity
09/16/2020 19:40:04	Switch to NIGHT (ILMN_236 < d2n[4]_1525)
09/16/2020 19:17:09	Switch to DAY (ILMN_171895 > n2d[4]_9373)
09/16/2020 18:05:49	Switch to NIGHT (ILMN_1511 < d2n[4]_1525)
09/16/2020 07:21:12	Switch to DAY (ILMN_125317 > n2d[4]_9373)
09/16/2020 00:04:50	Switch to NIGHT (ILMN_46 < d2n[4]_1525)
09/15/2020 16:06:49	The user admin logged in. IP address: 10.0.3.110
09/15/2020 16:06:49	The user admin logged in. IP address: 10.0.3.110

Clear
Total: 7 result(s)
1/1


If needed, you can click **Clear** to delete all the logs.

♥ 7.2 Configure Basic Information

You can modify the device name and channel name (only for NVR) in Basic Information. For local devices, you can also modify the password.

Note: To modify the password, log out the TP-Link ID first.

Go to **Settings > Device List > My Devices** and click  in the list. Click **Basic Information**. To modify the name, enter the name and click **Save**. To modify the password, click **Modify**, enter the password and email address, and click **Confirm**.

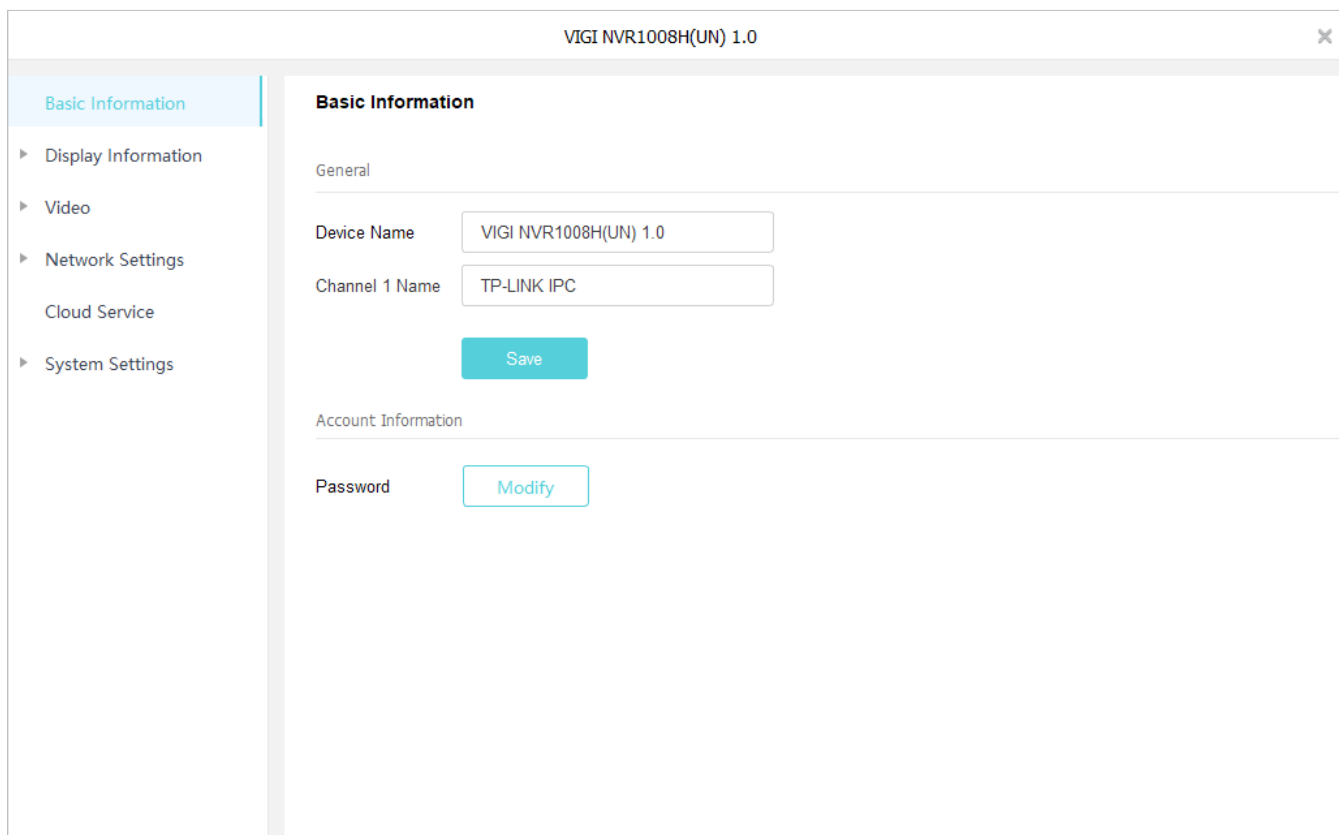

VIGI NVR1008H(UN) 1.0

Basic Information

General

Device Name VIGI NVR1008H(UN) 1.0

Channel 1 Name TP-LINK IPC

Save

Account Information

Password Modify

♥ 7.3 Configure Display Information

In Display Information, you can configure the image effects, specify the privacy areas, and decide the information to display on the screen.


7.3.1 Configure Image Effects

In Image, you can configure the parameters and functions to adjust the image effects.

Follow the steps below to configure image settings.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Display Information > Image**.
2. Configure the parameters and functions.

- For cameras, configure the following parameters and functions.

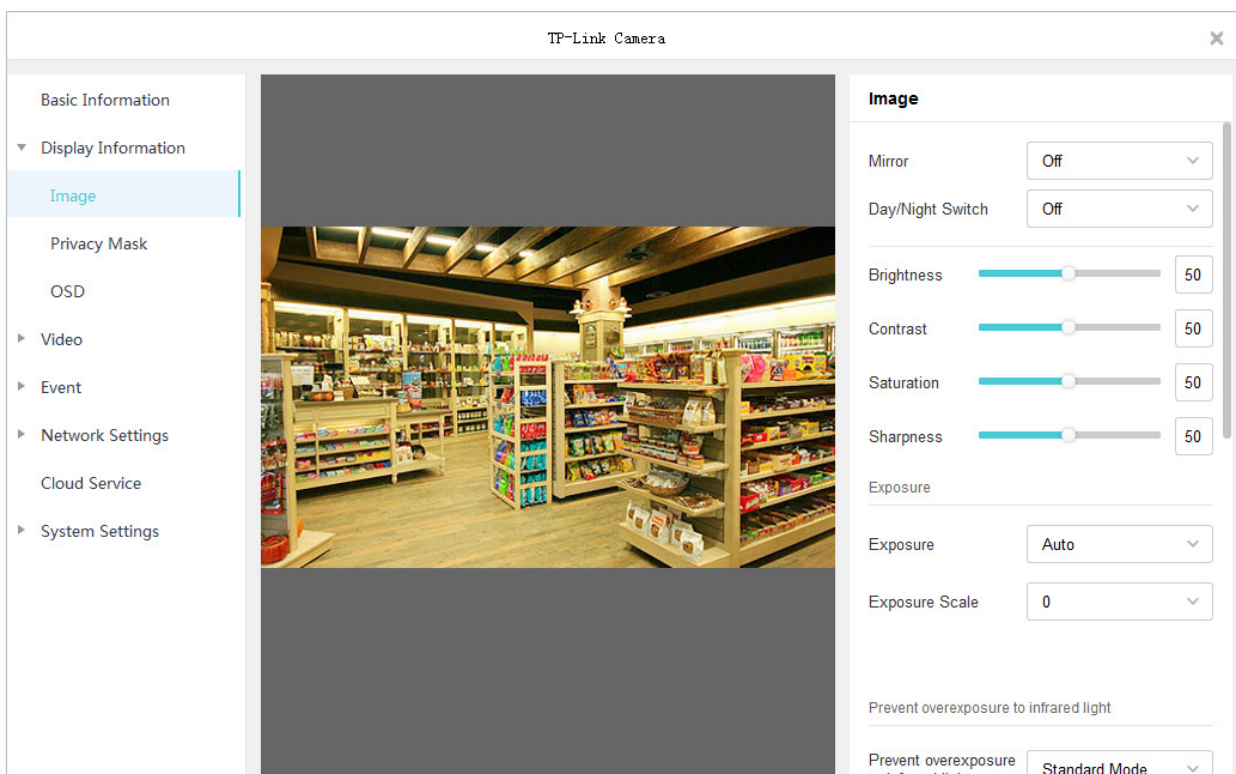

Mirror

Select a mirror mode. When you select **Off**, the image displays normally.

Day/Night Switch

Select a method to switch the image settings of day and night. If you select **Auto** or **Scheduled**, click the Day/Night tab and configure the settings respectively.

Off: The camera applies the same image settings in a day.

Auto: The camera switches the image mode of day and night automatically based on the light intensity.

Scheduled: The camera switches the image mode of day and night at specified time. If you select this method, adjust the slide bar to specify the switch time.

Brightness

Adjust the brightness of image. The image gets brighter when the value increases.

Contrast

Adjust the contrast of image. The image contrast gets stronger when the value increases.

Saturation

Adjust the saturation of image. The color of image gets richer when the value increases.


Sharpness

Adjust the sharpness of image. The image gets sharper when the value increases.

Exposure	Select a exposure mode. Auto: The camera adjusts the exposure automatically. If you select Auto, specify the exposure scale. The image gets brighter when the scale increases. Manual: The image exposure is fixed. If you select Manual, adjust the slide bar of Gain to specify the exposure gain, and select a shutter speed. The image gets brighter when the gain increases or the shutter speed gets slower.
Prevent Overexposure to infrared light	Select a mode to prevent overexposure to infrared light when objects get close to the camera at night. If you select Manual, adjust the slide bar to specify an exposure scale.
Infrared Light	Select a mode to decide the usage of infrared light. The available options vary due to the mode you select in Day/Night Switch. Auto: The camera enables the infrared light automatically when it detects the environment turns dark, and disables when the environment is bright enough. Specify Sensitivity to decide the light intensity that can trigger the switch of infrared light. The infrared light is easier to be triggered when the sensitivity decreases. Enter Delayed Switch to decide how long the camera waits to enable or disable the infrared light when the environment reaches the light condition. Scheduled On/Off: Specify the time to enable and disable infrared light. Always On/Off: The camera enables/disables the infrared light all the time.
WDR	WDR (Wide Dynamic Range) can improve the image effects in backlit scenes. If you select On, the camera balances the light of the brightest and darkest areas automatically.
BLC Area	BLC (Backlight Compensation) can clear the dark area of the video. Select a position and the camera adjusts the exposure based on the light intensity in the area.

White Balance	Select a mode and the camera will adjust the color temperature to display the image approximated to the realistic vision effects. Auto: The camera adjusts the color temperature automatically. Daylight/Natural Light/Incandescent/Warm Light: The camera adjusts the color temperature to remove the color casts caused by the corresponding light. Current: The camera keeps the current color settings all the time. Custom: Adjust the slide bar to configure the color temperature, and the camera keeps the settings all the time.
----------------------	---

- For NVR, select a channel and configure the following parameters.

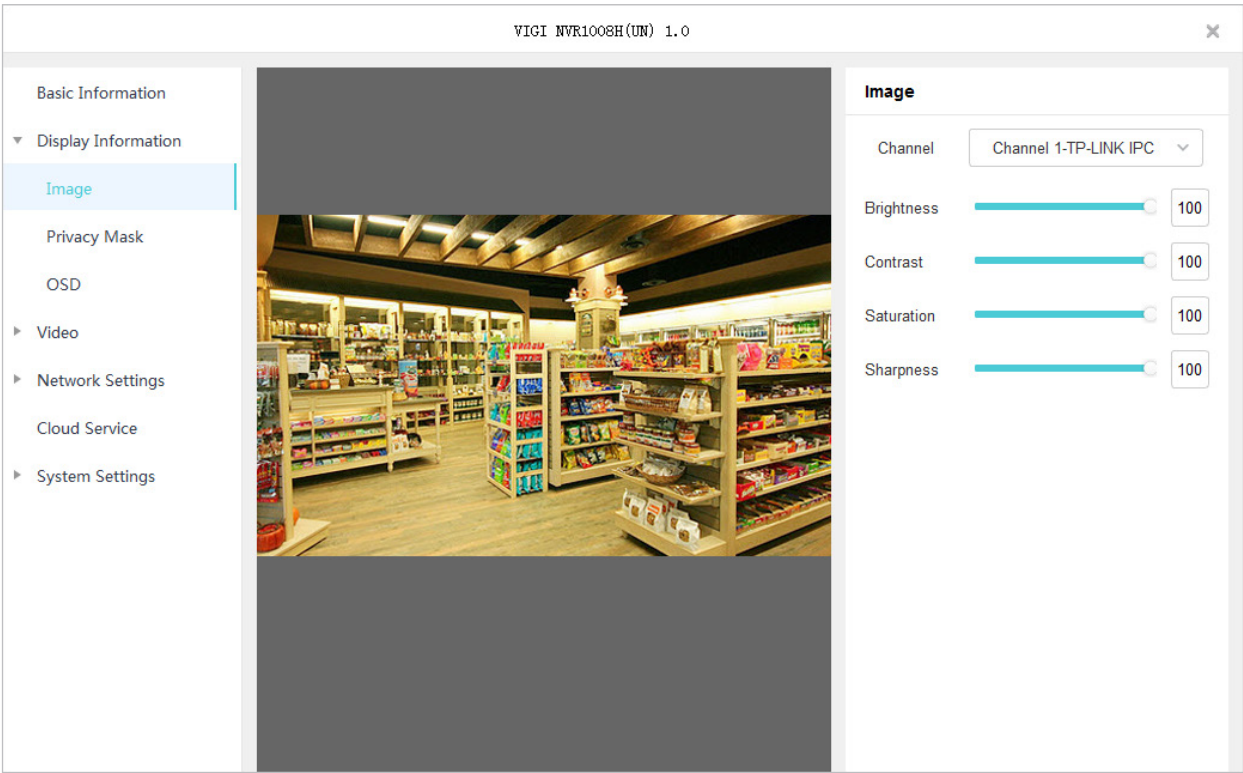

Brightness	Adjust the brightness of image. The image gets brighter when the value increases.
Contrast	Adjust the contrast of image. The image contrast gets stronger when the value increases.
Saturation	Adjust the saturation of image. The color of image gets richer when the value increases.
Sharpness	Adjust the sharpness of image. The image gets sharper when the value increases.


If you want to reset to the default settings, click **Reset**.

7.3.2 Configure Privacy Mask

In Privacy Mask, you can set privacy area in the image. The area cannot be recorded and monitored.

Follow the steps below to configure Privacy Mask.

1. Go to **Settings** > **Device List** > **My Devices** and click  in the list. Go to **Display Information** > **Privacy Mask**.
2. Enable Privacy Mask, select a channel (only for NVR), and draw the privacy areas on the preview screen (the dark squares in the picture below). Use the mouse to adjust the size and location of areas. To remove a certain privacy area, select it and click **Delete**. To remove all privacy areas, click **Clear**.

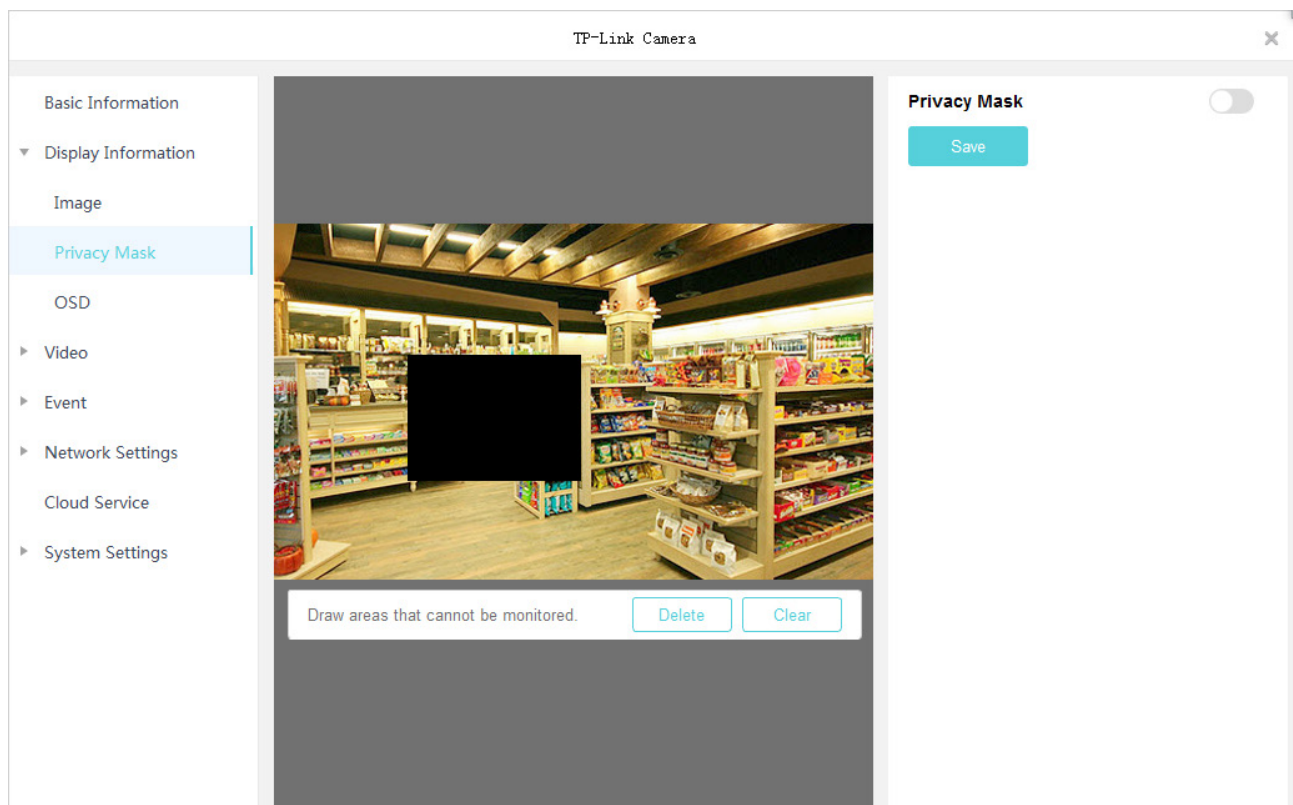

3. Click **Save** to finish the configuration.

If you want to reset to the default settings, click **Reset**.

7.3.3 Configure OSD

In OSD, You can configure OSD (On Screen Display) to edit the information displayed in Live View and recordings.

Follow the steps below to configure OSD.

1. Go to **Settings** > **Device List** > **My Devices** and click  in the list. Go to **Display Information** > **OSD**.

2. Select a channel from the drop-down list (only for NVR), configure displayed information and display effects. Click and drag the information in the preview screen to adjust the place. Click **Save**.

TP-Link Camera

Basic Information

▼ Display Information

Image

Privacy Mask

OSD

▶ Video

▶ Event

▶ Network Settings

Cloud Service

▶ System Settings



OSD

Display Info

☐ Date

2020-09-20 20:44:22

☒ Day

Monday

☐ Channel

TP IPC

☐ Note 1

Custom 1

☐ Note 2

Custom 2

Display Effect

Opaque, not blinking

Font Size

Adaptive

Font Color

Default

Save

Reset

Date/Day	Click to display or hide the time information.
Channel	Click the checkbox and enter the channel name to be displayed.
Note 1/2	(Only for cameras) Click the checkbox and enter the note to be displayed.
Display Effect	Select a display effect to display the information.
Font Size/Color	(Only for cameras) Select the font size and color of displayed information.

If you want to reset to the default settings, click **Reset**.

♥ 7.4 Configure Video


The NVRs and cameras supports two stream levels, main stream and substream, which determine the video parameters of live view and playback, such as resolution, image quality and so on. You can configure the stream settings and apply them to the NVR and cameras added to VIGI Security Manager. For cameras directly added to VIGI Security Manager, you can draw an area for your special concern and the image quality of this area will be better.

7.4.1 Configure Stream Settings

Stream settings can be adjusted to increase or decrease recording resolution and fluency. They also impact recording file size and available recording bandwidth. To select the main stream or substream, go to **Live View**, right click the camera in the device list or the Live View screen, and click **Stream**.

Follow the steps below to configure the stream settings.

3. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Video > Stream**.

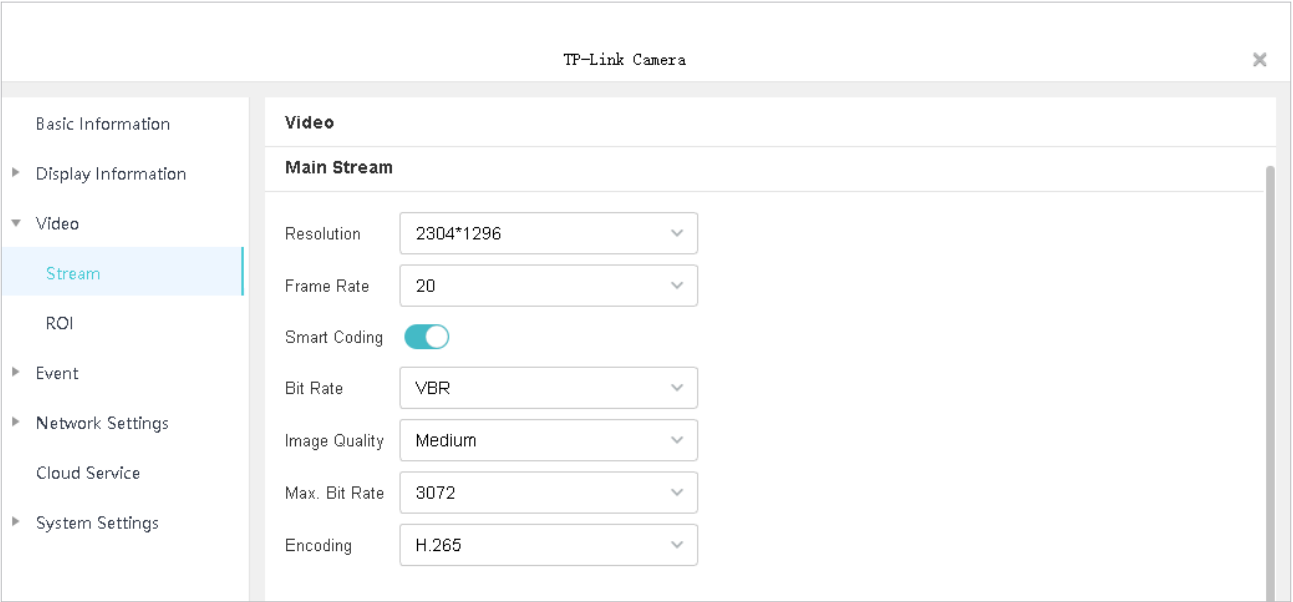

4. Configure the parameters of main stream and substream based on your needs.

Resolution	Specify the resolution of the video stream. The screen displays images more clearly when the resolution increases.
Frame Rate	Specify the frame rate of videos. The video is more fluent when the rate increases.
Smart Coding	Enable Smart Coding to improve compression performance. The size of recording files will be smaller and recordings will use less bandwidth.
Bite Rate	Select a type of bit rate. VBR: The bit rate changes with the image within Maximum Bit Rate. CBR: The bit rate is Maximum Bit Rate all the time.
Image Quality	When VBR selected as the bit rate type, set the video quality as high, medium, or low.
Max. Bit Rate	When VBR selected as the bit rate type, specify the upper limit of bit rate. When CBR selected as the bit rate type, specify the bit rate.

Encoding


Select the encoding type of the stream. Compared with H.264, H.265 is improved in reducing the file size and saving the bandwidth.

5. Click **Save**.

7.4.2 Configure ROI (Only for Cameras)

In ROI (Region of Interest), you can configure the interest level of a specified area in each camera. The level ranks from 1 to 6, and the higher the ROI level, the better image quality.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Video > ROI**.

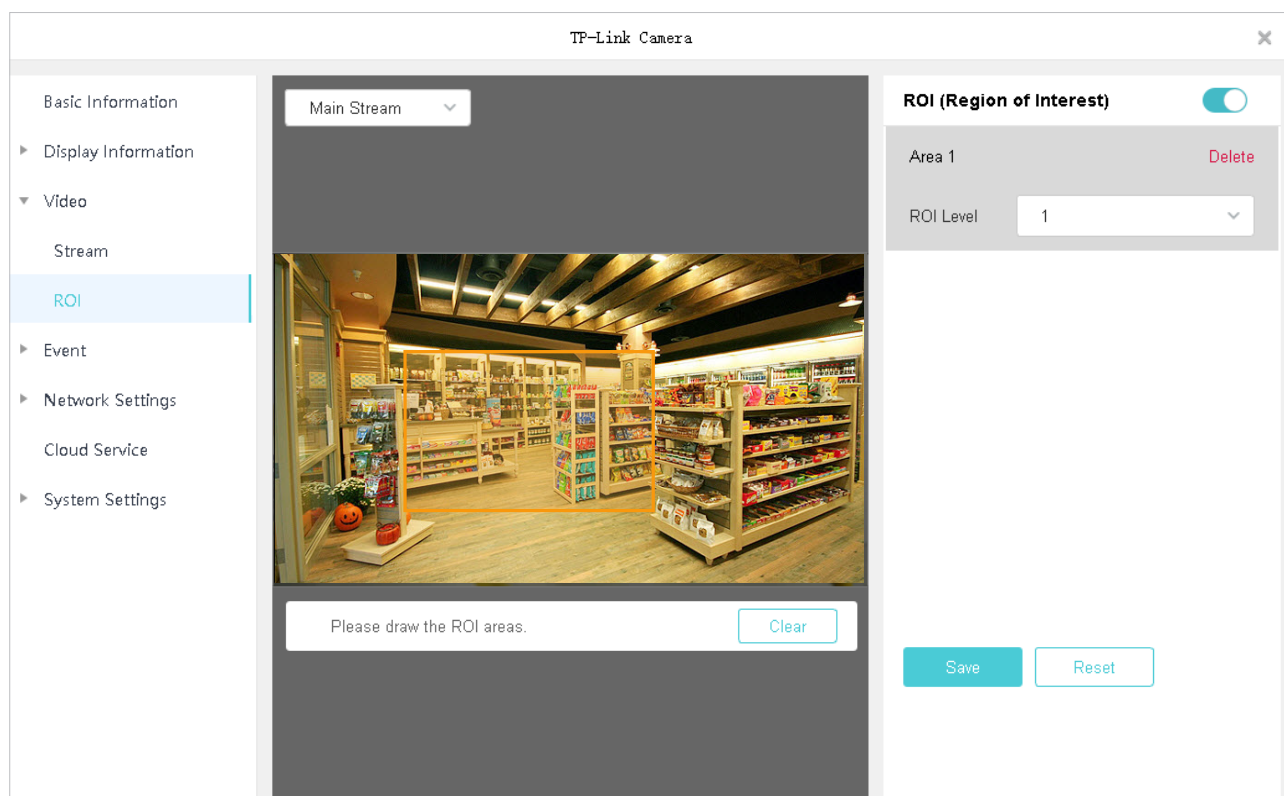

2. Enable ROI.
3. Select the stream type and draw an area on the preview screen (the yellow square in the picture above). Use the mouse to adjust the size and location of areas.
4. Specify the ROI level and click **Save**.

♥ 7.5 Configure Events (Only for Cameras)

VIGI Security Manager allows you to configure the event settings for cameras to detect different types of events. Your cameras monitor the user-defined areas and you'll be automatically alerted to any suspicious activity in your home and office.

It is recommended to bind the cameras to your TP-Link ID and log in to your TP-Link ID on VIGI Security Manager before setting the events. To bind your devices, go to **Settings > Device List > My Devices**


and click  in the list. Then go to **Network Settings > Cloud Service**. You can receive alerts on your phone after you download VIGI app and log in with your TP-Link ID.

7.5.1 Configure Basic Events

■ Motion Detection

Motion detection allows cameras to detect the moving objects in the monitored area and triggers alarm actions. You can draw the monitored areas and customize the motion detection settings. Follow the steps below to finish the configuration.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Event > Basic Event**.

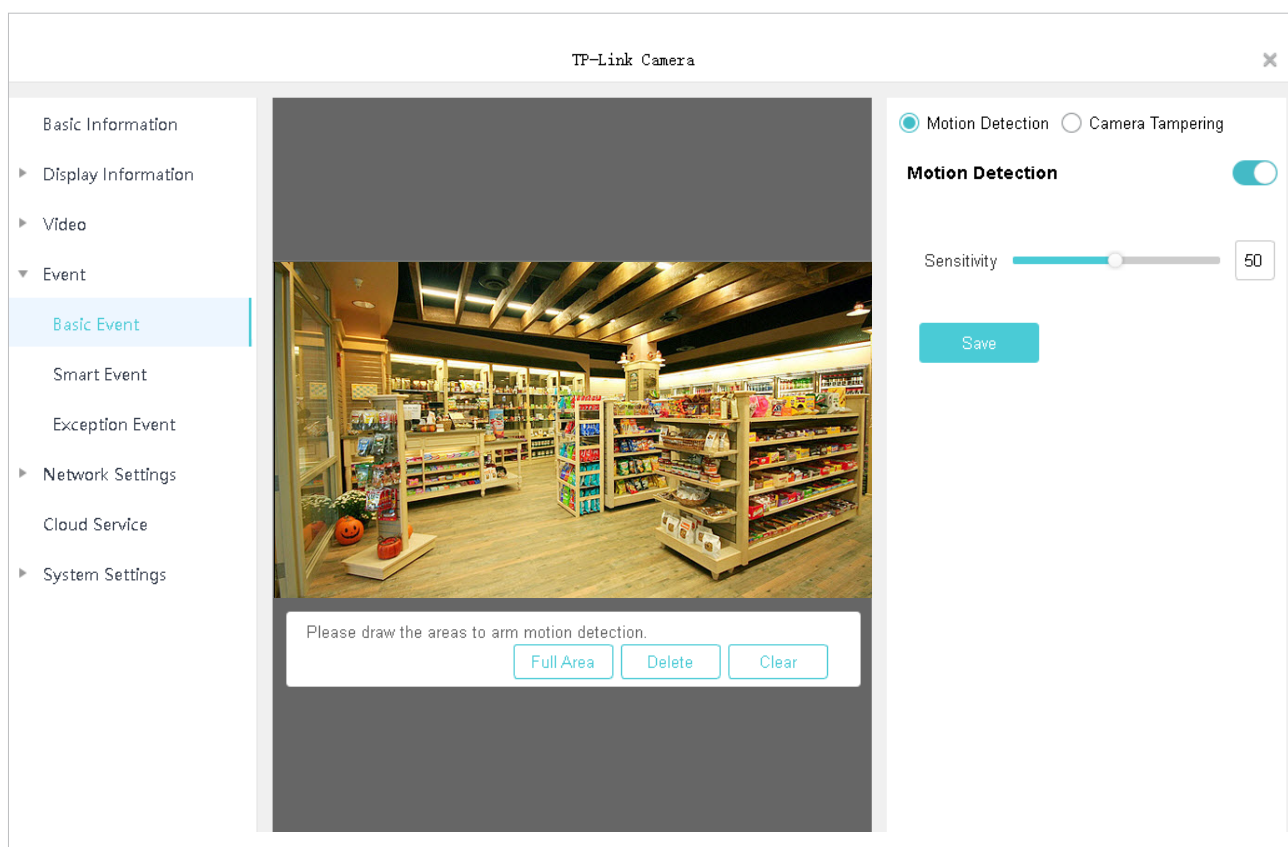


2. Click **Motion Detection** on the top right and enable **Motion Detection**.
3. Adjust the sensitivity of motion detection. A higher value can trigger the motion detection more easily.
4. Draw the areas on the preview screen. If you click **Full Area**, the entire live view screen will be selected.
5. Click **Save**.

■ Camera Tampering

Camera tampering is triggered when an area of camera's lens is blocked, obstructed or vandalized. You can customize the camera tampering settings. Follow the steps below to finish the configuration.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Event > Basic Event**.

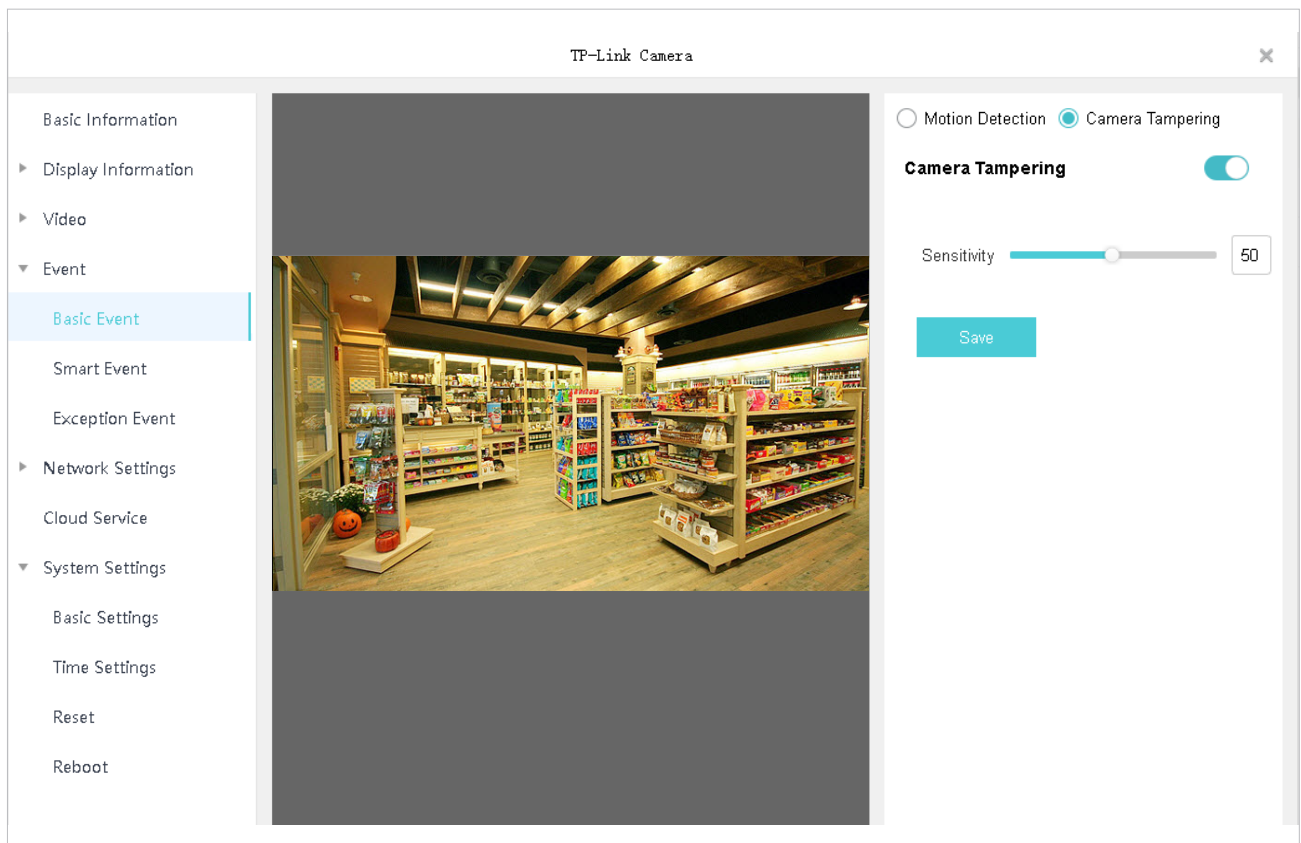


2. Click **Camera Tampering** on the top right and enable **Camera Tampering**.
3. Adjust the sensitivity of camera tampering. A higher value can trigger the camera tampering more easily.
4. Click **Save**.

7.5.2 Configure Smart Events

■ Line Crossing Detection

Line crossing detection is triggered when cameras detect that moving objects cross a customized virtual line. You can customize the line crossing detection settings and set the schedule for them to take effect. Follow the steps below to finish the configuration.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Event > Smart Event**.

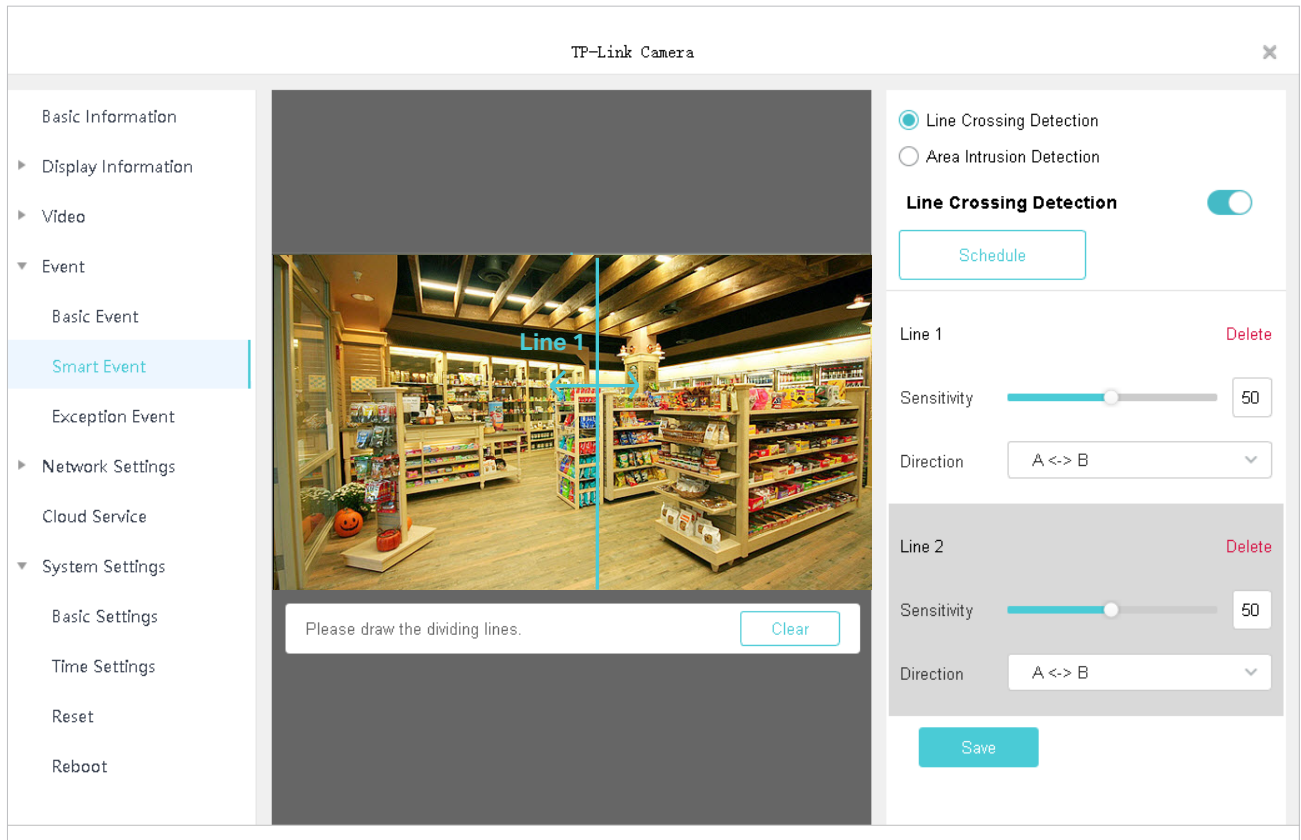

2. Click **Line Crossing Detection** on the top right and enable **Line Crossing Detection**.

3. Click **Schedule**. Click the time bar and enter the start time and end time manually. Click **Save** to save the week schedule for line crossing detection.

Schedule

Smart Event Detection will be enabled during the scheduled times.

Clear All

Select All

Start Time

End Time

00 : 00

-

24 : 00

Confirm

024

8202224

Mon

Tue

Wed

Thu

Fri

Sat

Sun

Save

4. Draw lines on the preview screen. Select the area and configure its settings. The maximum number of customized lines is 4.


Sensitivity	Set the sensitivity of line crossing detection. A higher value can trigger the line crossing detection more easily.
Direction	A->B: Only the object crossing the configured line from the A side to the B side can be detected.
	A<-B: Only the object crossing the configured line from the B side to the A side can be detected.
	A<->B: The object goes across the configured line with both directions can be detected.

5. Click **Save**.


■ **Area Intrusion Detection**

Area intrusion is triggered when the camera detects an intrusion in the specified areas. You can customize the area intrusion settings and set the schedule for them to take effect. Follow the steps below to finish the configuration.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Event > Smart Event**.

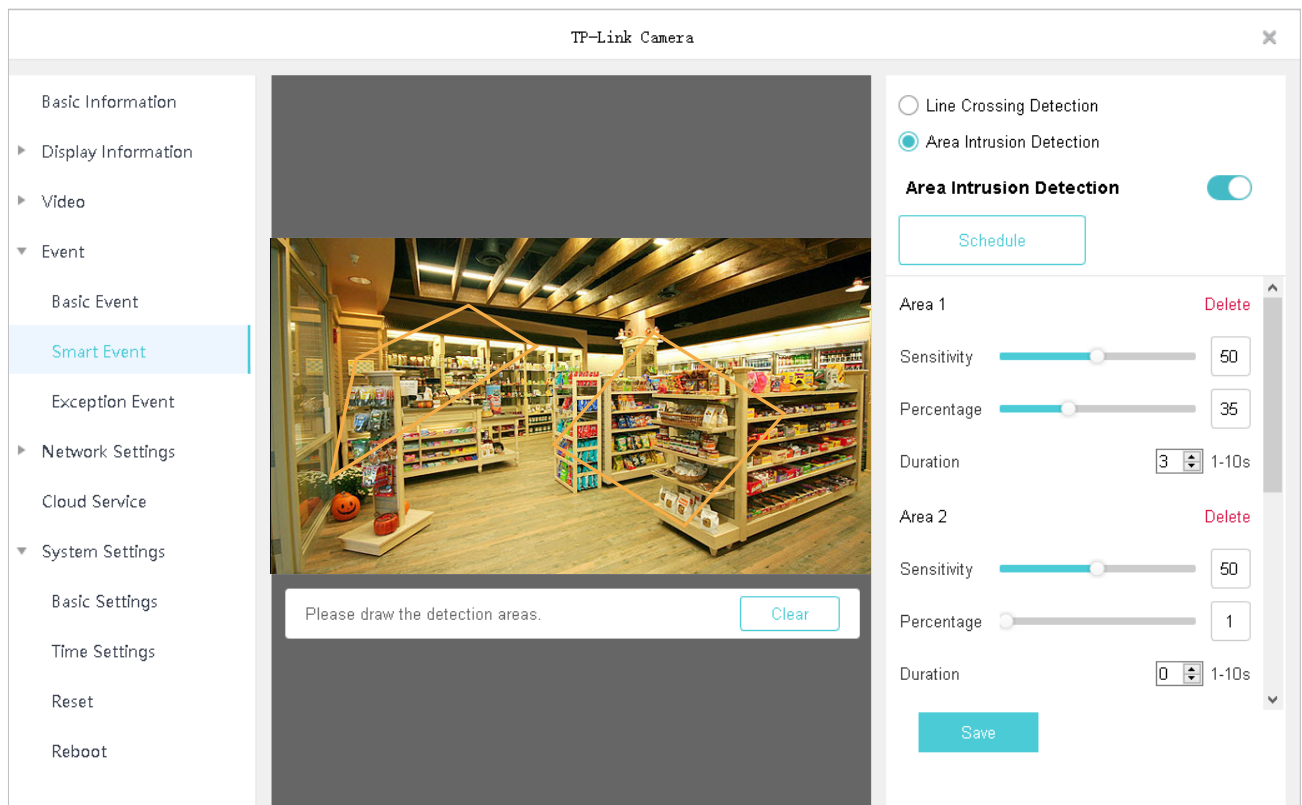

2. Click **Area Intrusion** on the top right and enable **Area Intrusion**.
3. Click **Schedule**. Click the time bar and enter the start time and end time manually. Then click **Save** to save the week schedule for area intrusion detection.

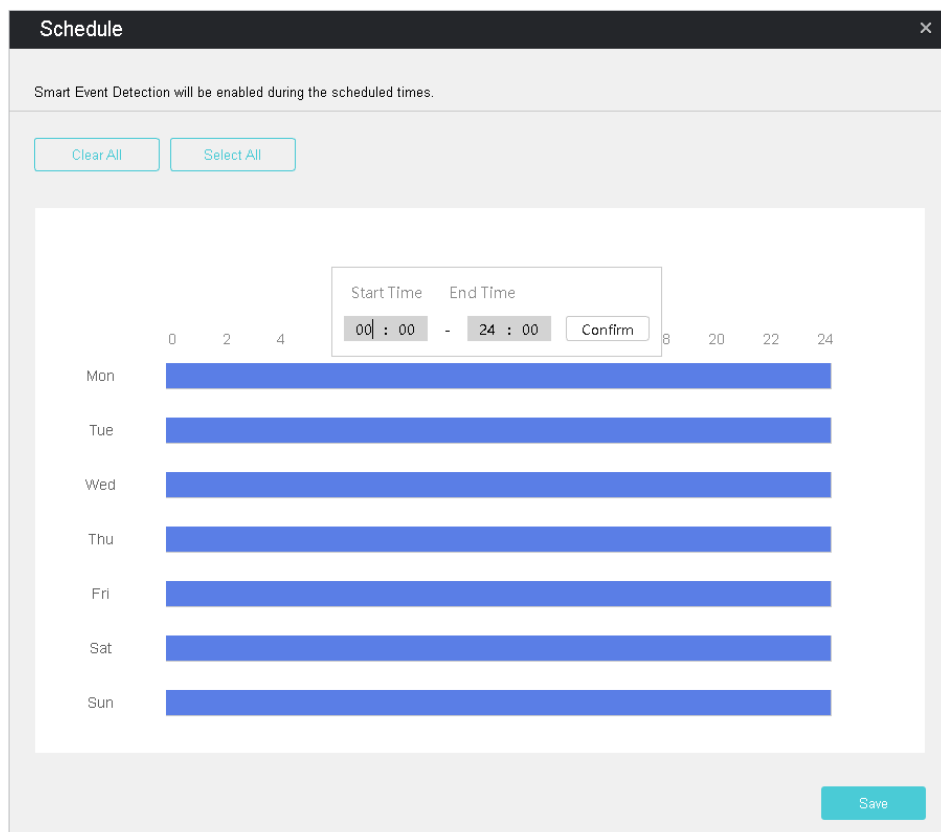

4. Draw areas on the preview screen. Select the area and configure its settings. The maximum number of customized areas is 4.


Sensitivity	Set the sensitivity of area intrusion detection. A higher value can trigger the area intrusion detection more easily.
Percentage	The area detection will be triggered when the ratio of the size of intrusive object to the intrusion area reaches the percentage.
Duration	Set the time for detecting the intrusion of objects. The interval should be no more than 10 seconds.

5. Click **Save**.

7.5.3 Configure Exception Event

Exception event sets the maximum login attempts to protect the security of your cameras. VIGI Security Manager will be locked for 30 minutes if you enter the wrong password of your camera more than the specified attempts. Follow the steps below to finish the configuration.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Event > Exception Event**.

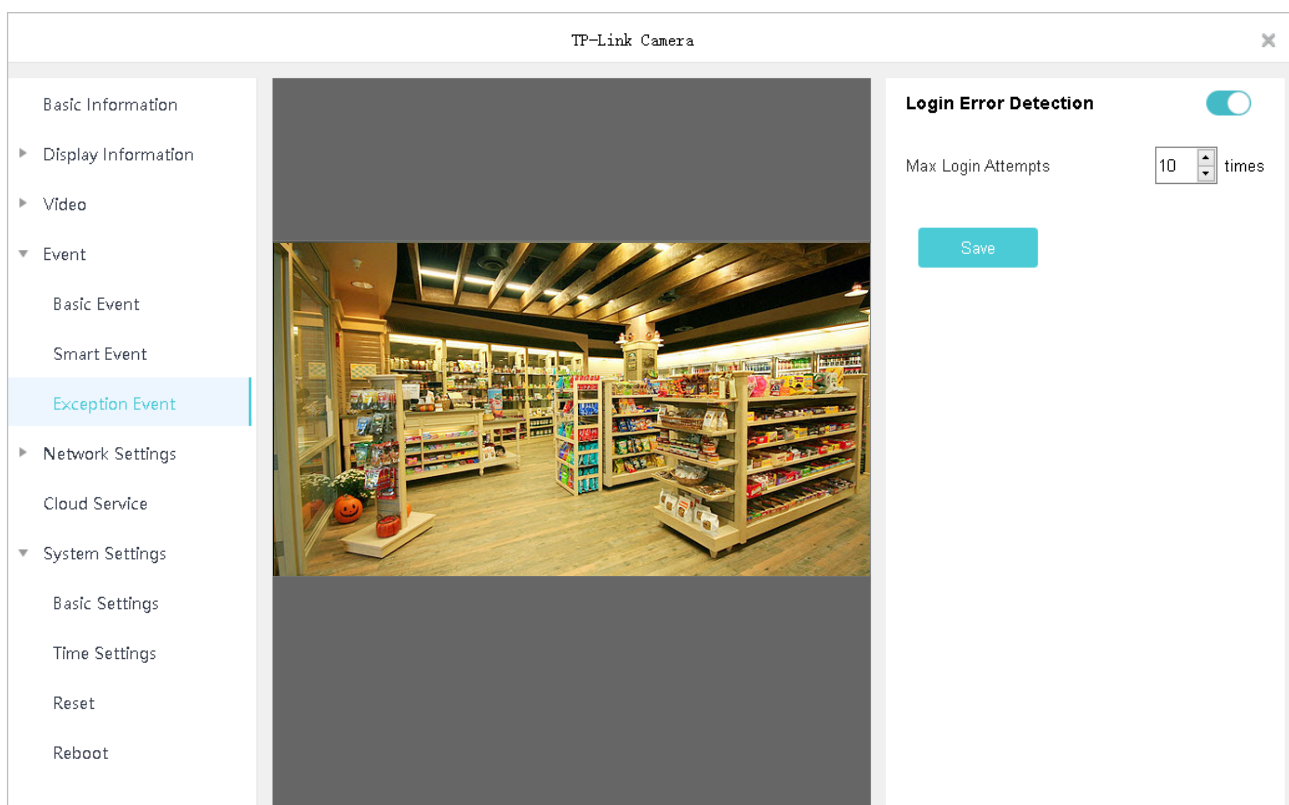

2. Enable **Login Error Detection** on the top right.
3. Set **Max Login Attempts**. The range is from 3 to 10.
4. Click **Save**.

♥ 7.6 Configure Network Settings

In Network Settings, you can configure the IP address, MTU (Maximum Transmission Unit). For cameras not managed by the NVR, you can also configure the management ports and enable advanced functions, such as Port Forwarding, IP Restriction and Multicast.

7.6.1 Basic and Advanced Network Configuration

In Network Configuration, you can configure the device to obtain an IP address automatically or assign a static IP address to it. If needed, you can also modify MTU.

Follow the steps below to configure the network.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Network Settings > Configuration**.
2. Configure basic settings to configure the IP address.
 - To assign a static IP address to the device, select **Static IP** as the mode and configure the following parameters.

TP-Link Camera

Basic Information

▶ Display Information

▶ Video

▶ Event

▼ Network Settings

Configuration

Port Number

Port Forwarding

IP Restriction

Multicast

Cloud Service

▶ System Settings

Network Configuration

Status

● Connected

Basic Settings

Mode

Static IP

IP Address

10.0.0.4

Subnet Mask

255.255.252.0

Gateway

10.0.0.1

Preferred DNS

8.8.8.8

Alternative DNS

8.8.4.4

Advanced Settings

MTU

1480

Save

IP Address	Specify an IP address for the device. The IP address should be in the same segment as the gateway; otherwise, the device cannot connect to the internet.
Subnet Mask	Enter the subnet mask.

Gateway	Enter the IP address of the gateway device. This IP address should be in the same segment as the device's IP address.
Preferred/Alternate DNS	Enter the IP address of the DNS server.

- To configure the device to obtain a dynamic IP address, select **DHCP** as the mode.

TP-Link Camera

Basic Information

▶ Display Information

▶ Video

▶ Event

▼ Network Settings

Configuration

Port Number

Port Forwarding

IP Restriction

Multicast

Cloud Service

▶ System Settings

Network Configuration

Status

Connected

Basic Settings

Mode

DHCP

IP Address

10.0.0.4

Subnet Mask

255.255.252.0

Gateway

10.0.0.1

Preferred DNS

8.8.8.8

Alternative DNS

8.8.4.4

Advanced Settings

MTU

1480

Save

Note: A DHCP server (usually a router) is needed for the device to obtain a dynamic IP address.

- (Optional) Specify MTU (Maximum Transmission Unit) to decide the largest size of data unit that can be transmitted in the network. A larger unit can transmit more data in each packet, but it may increase the network delay because it needs more time to transmit.
- Click **Save**.

7.6.2 Configure Port Number (Only for Cameras)

In Port Number, you can configure the HTTP port, RTSP port and service port that can be used to access the camera through the network. Also, the ports configured here are used for communications of corresponding protocols.

To configure ports, go to **Settings > Device List > My Devices** and click  in the list. Go to **Network Settings > Port Forwarding**. Configure the ports and click **Save**.

TP-Link Camera

Basic Information

▶ Display Information

▶ Video

▶ Event

▼ Network Settings

Configuration

Port Number

Port Forwarding

IP Restriction

Multicast

Cloud Service

▶ System Settings

Port Number

HTTP Port:

80

RTSP Port:

554

Video Service Port:

8800

Save

Reset

HTTP Port	Specify a port for HTTP protocol.
RTSP Port	Specify a port for RTSP protocol.
Video Service Port	Specify a port for protocols of video services.

If you want to reset to default settings, click **Reset**.

7. 6. 3 Configure Port Forwarding (Only for Cameras)

Port Forwarding is used to establish the mapping between the internal port and external port. When Port Forwarding is enabled, you can access the device and watch the videos when accessing the external port remotely.

Note: The device should be connected to the internet, and Port Forwarding should be enabled on the gateway.

Follow the steps below to configure Port Forwarding.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Network Settings > Port Forwarding**.

2. Enable Port Forwarding and specify a mapping type. If you select **Auto** as the mapping type, the mappings are established automatically. If you select **Manual** as the mapping type, click  to specify the external port.

TP-Link Camera

Basic Information

▶ Display Information

▶ Video

▶ Event

▼ Network Settings

Configuration

Port Number

Port Forwarding

IP Restriction

Multicast

Cloud Service

▶ System Settings

Port Forwarding

Port Forwarding: ☒

Forwarding Rule:

Manual

Port Number	Internal Port	External Port	Internal IP	Status	
HTTP	80	0	10.0.0.4	Disabled	
RTSP	554	0	10.0.0.4	Disabled	
Video Service	8800	0	10.0.0.4	Disabled	

Save

Reset

Port Type	Displays the protocol type.
Internal Port	Displays the port of the device to be converted.
External Port	Displays the external port opened by the gateway.
Internal IP	Displays the IP address of the device that needs to be converted.
Status	Displays the status of mapping.

3. Click **Save**.

With Port Forwarding enabled, you can remotely watch the videos with the URL `rtsp://A.B.C.D:Port/streamN`, for example, <rtsp://10.0.1.47:28736/stream1>. A.B.C.D is the WAN IP address of the gateway, and Port is the number of RTSP external port. N can be number 1 or 2 that indicates the stream, 1 for main stream and 2 for substream.


If you want to reset to default settings, click **Reset**.

7. 6. 4 Configure IP Restriction (Only for Cameras)

When IP Restriction is enabled, you can add IP addresses to the deny list or allow list to restrict the access to the camera. The IP address in the deny list cannot access the camera, while only the IP addresses in the allow list can access the camera.

Follow the steps below to add an IP address to the deny or allow list.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Network Settings > IP Restriction**.
2. Enable IP Restriction and select **Deny List** or **Allow List**. Click **Add** to enter the IP address and description. Click **Save**. Then the IP address is in the corresponding list.

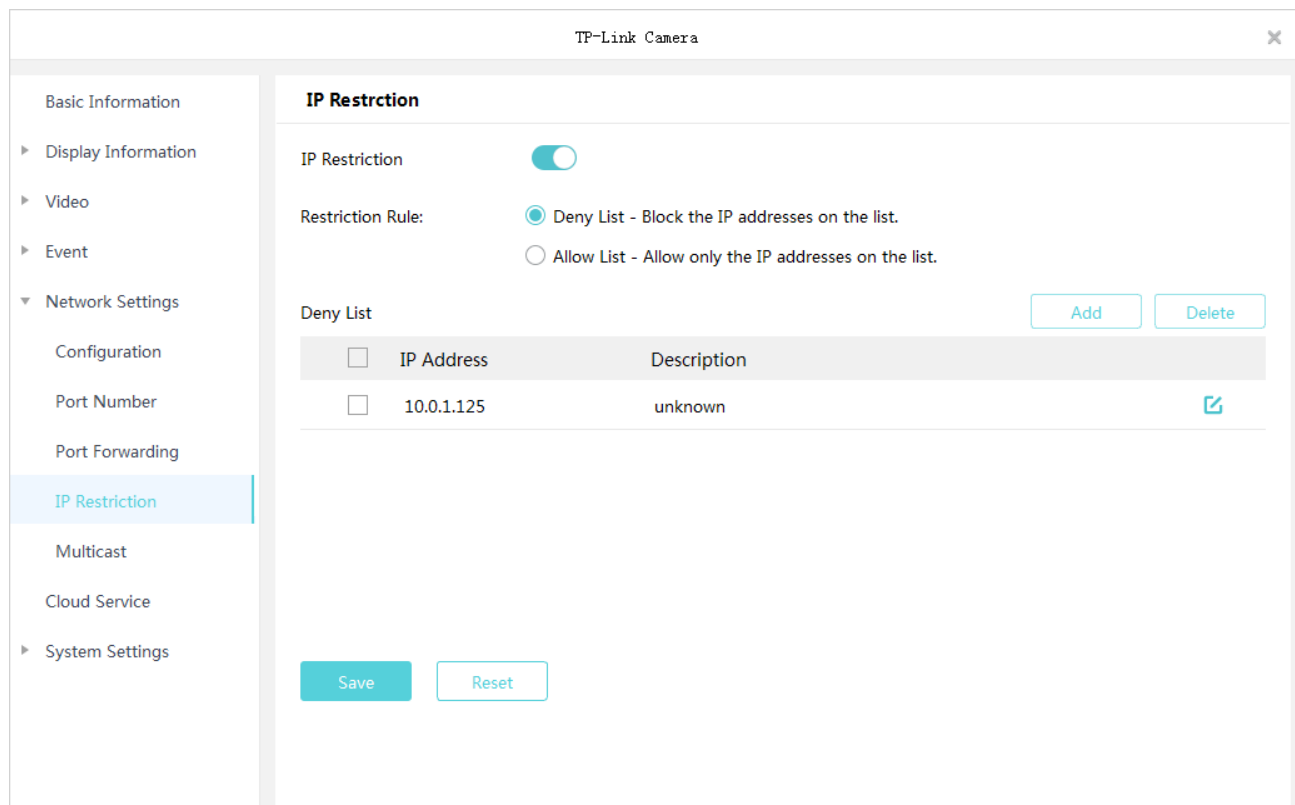

TP-Link Camera

Basic Information

- Display Information
- Video
- Event
- Network Settings
 - Configuration
 - Port Number
 - Port Forwarding
 - IP Restriction**
 - Multicast
 - Cloud Service
- System Settings

IP Restriction

IP Restriction ☒

Restriction Rule: ☒ Deny List - Block the IP addresses on the list.
☐ Allow List - Allow only the IP addresses on the list.

Deny List Add Delete

☐	IP Address	Description	
☐	10.0.1.125	unknown	

Save Reset

3. Click **Save** in IP Restriction to finish the configuration.

If you want to reset to default settings, click **Reset**.

7.6.5 Configure Multicast (Only for Cameras)

When Multicast is enabled, you can watch videos using the multicast address and port.

Follow the steps below to configure Multicast.

1. Go to **Settings > Device List > My Devices** and click  in the list. Go to **Network Settings > Multicast**.

2. Select a stream and then enable Multicast. For the multicast address and port, you can disable Random IP Port and specify a static address and port, or enable it and use a random one. Click **Save**.

The screenshot shows the 'TP-Link Camera' configuration window with the 'Multicast' tab selected in the left sidebar. The 'Multicast' section contains the following settings:

- Main Stream** (selected) and **Substream** (unselected) radio buttons.
- Multicast:** A toggle switch that is currently turned on.
- Random IP Port:** A toggle switch that is currently turned off.
- Multicast Address:** A text input field containing '224.0.1.0' with a range '(224.0.1.0 - 239.255.255.255)' shown to the right.
- Multicast Port:** A text input field containing '10000' with a range '(1025 - 65535)' shown to the right.
- Save** and **Reset** buttons at the bottom.

After Multicast enabled, you can watch the video with the URL `rtsp://A:B:C:D/multicastStreamN`, for example, <rtsp://192.168.0.3/multicastStream1>. A.B.C.D is the IP address of the camera, and N can be number 1 or 2 that indicates the stream, 1 for main stream and 2 for substream.


If you want to reset to default settings, click **Reset**.

♥ 7.7 Cloud Service


VIGI Security Manager supports remote management with the support of TP-Link Cloud Services. With a TP-Link ID bound, you can remotely monitor your property through cameras on your computer.

If you want to bind or unbind your devices with your TP-Link ID, follow the steps below to finish the configuration.


1. Go to **Settings > Device List > My Devices** and click  in the list. Then go to **Cloud Service** and click **Log in**.

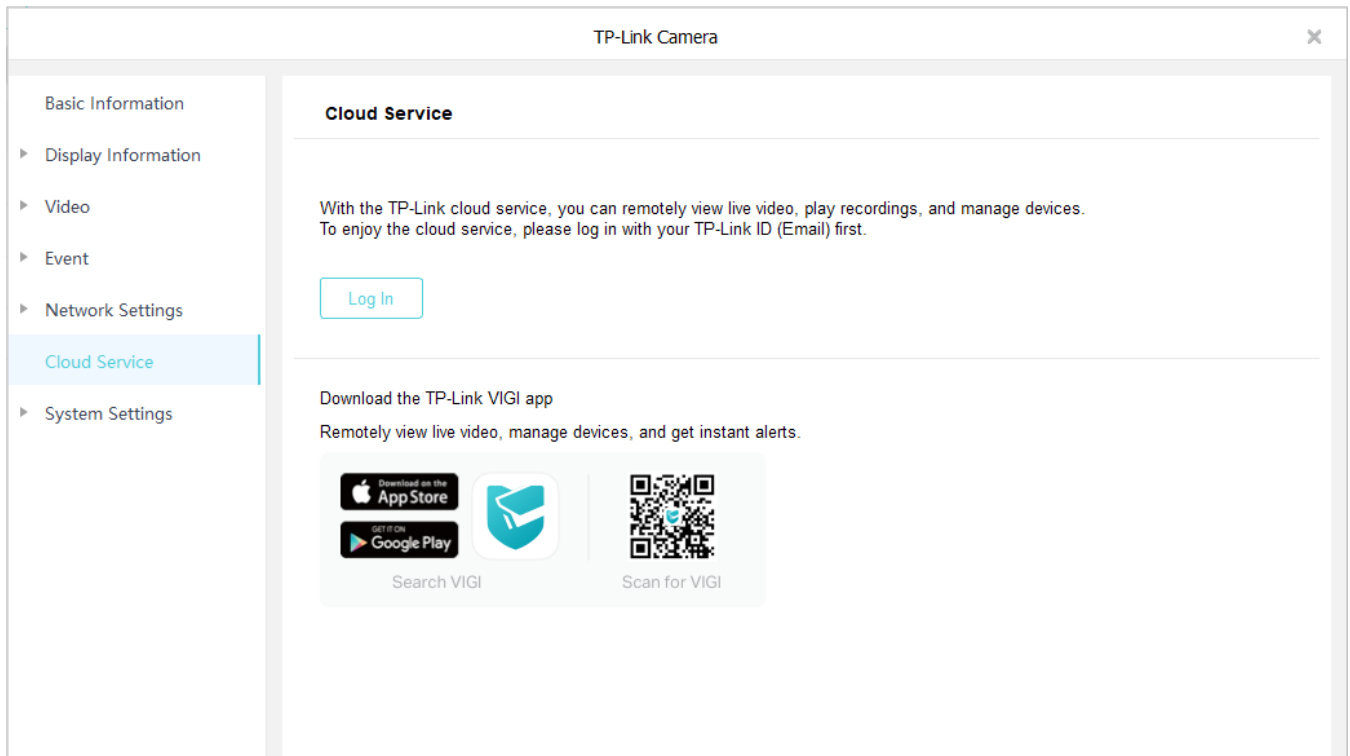


2. You can enable Auto Login to allow the utility to remember your account and log in automatically when switching it as the logged account. Click **Log In**.

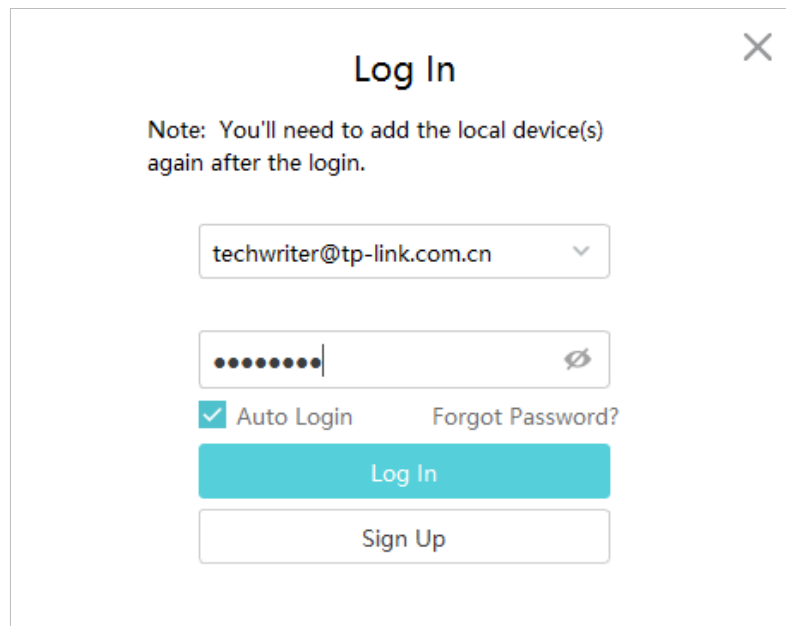The screenshot shows a 'Log In' dialog box. At the top, it says 'Log In' with a close button (X). Below that is a note: 'Note: You'll need to add the local device(s) again after the login.' There is a dropdown menu for email, currently showing 'techwriter@tp-link.com.cn'. Below the email field is a password field with dots and a toggle icon. Under the password field, there is a checked checkbox for 'Auto Login' and a link for 'Forgot Password?'. At the bottom, there are two buttons: 'Log In' (highlighted in teal) and 'Sign Up'.

3. Click **Bind** to bind all the devices added locally to your TP-Link ID. All the local devices will be bound automatically to your TP-Link ID.

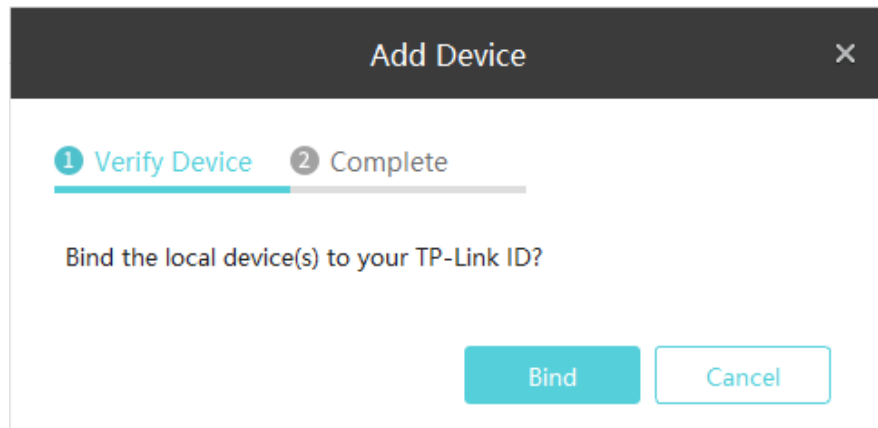


4. (Optional) After finish binding the devices, click **Unbind** if you want to unbind a certain device from your TP-Link ID.

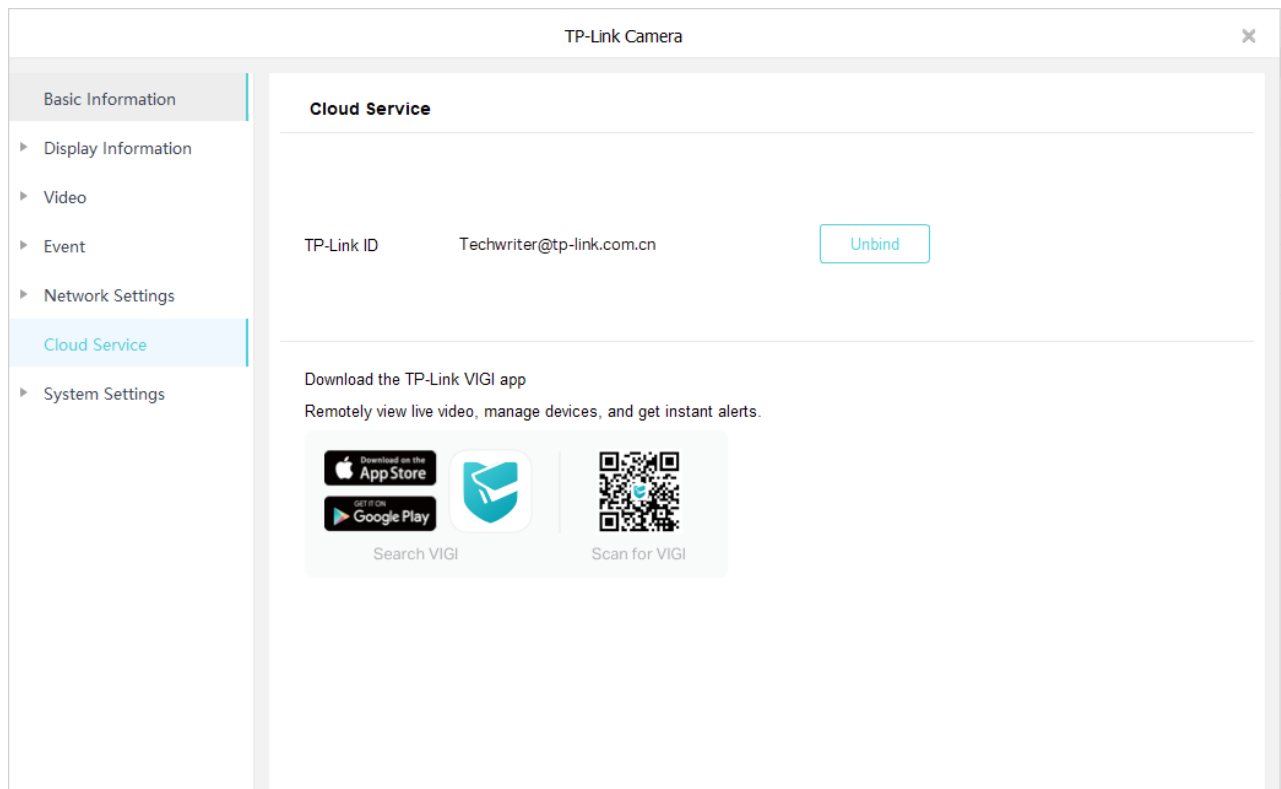


♥ 7.8 Configure System Settings

The system settings allow you to modify the name and password, set the time and reboot schedule for your devices. To configure system settings, go to **Settings > Device List** and click  in the list.

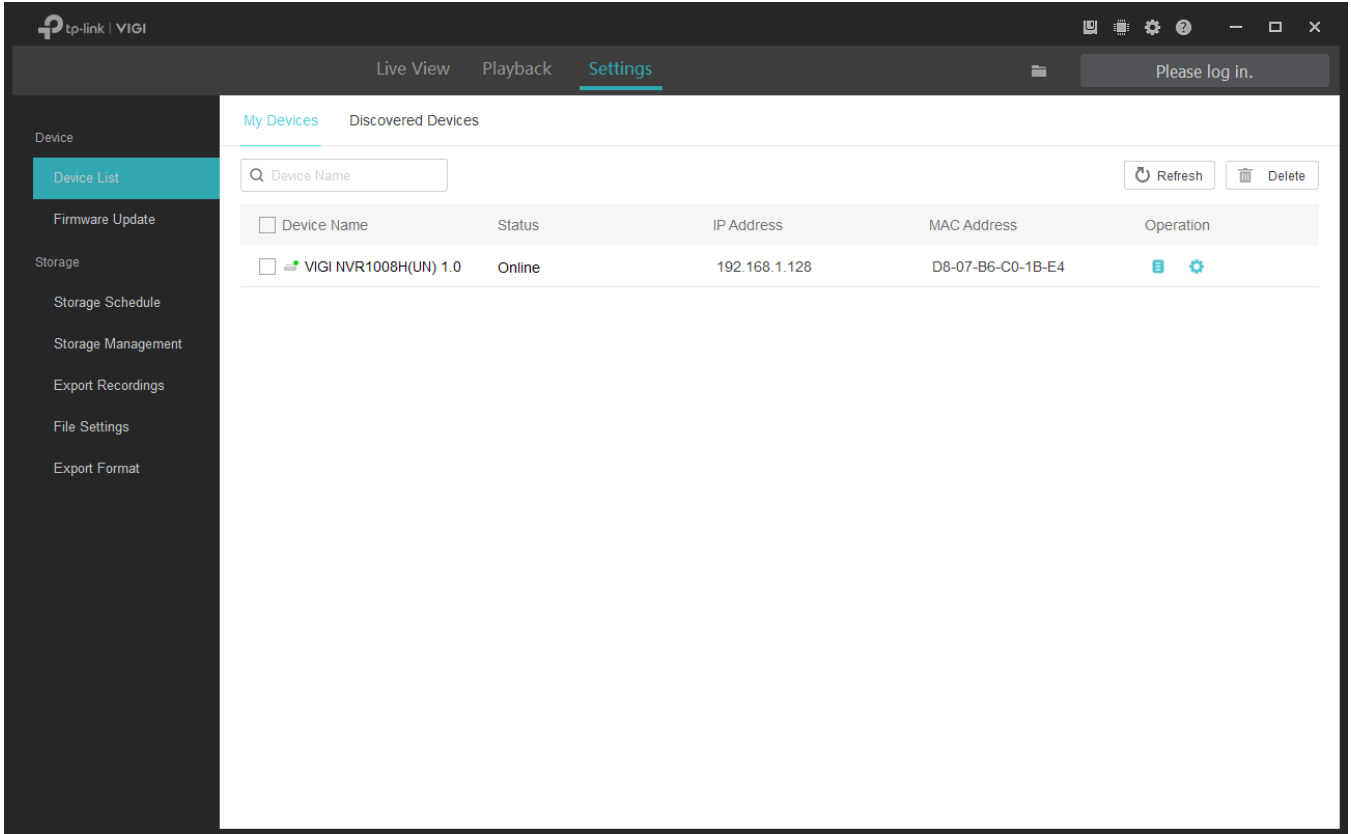

7.8.1 Configure Basic Settings


To modify the device name, channel name (only for NVR) and passwords of devices, go to **Settings > Device List** and click  in the list. Then go to **System Settings > Basic Settings**.

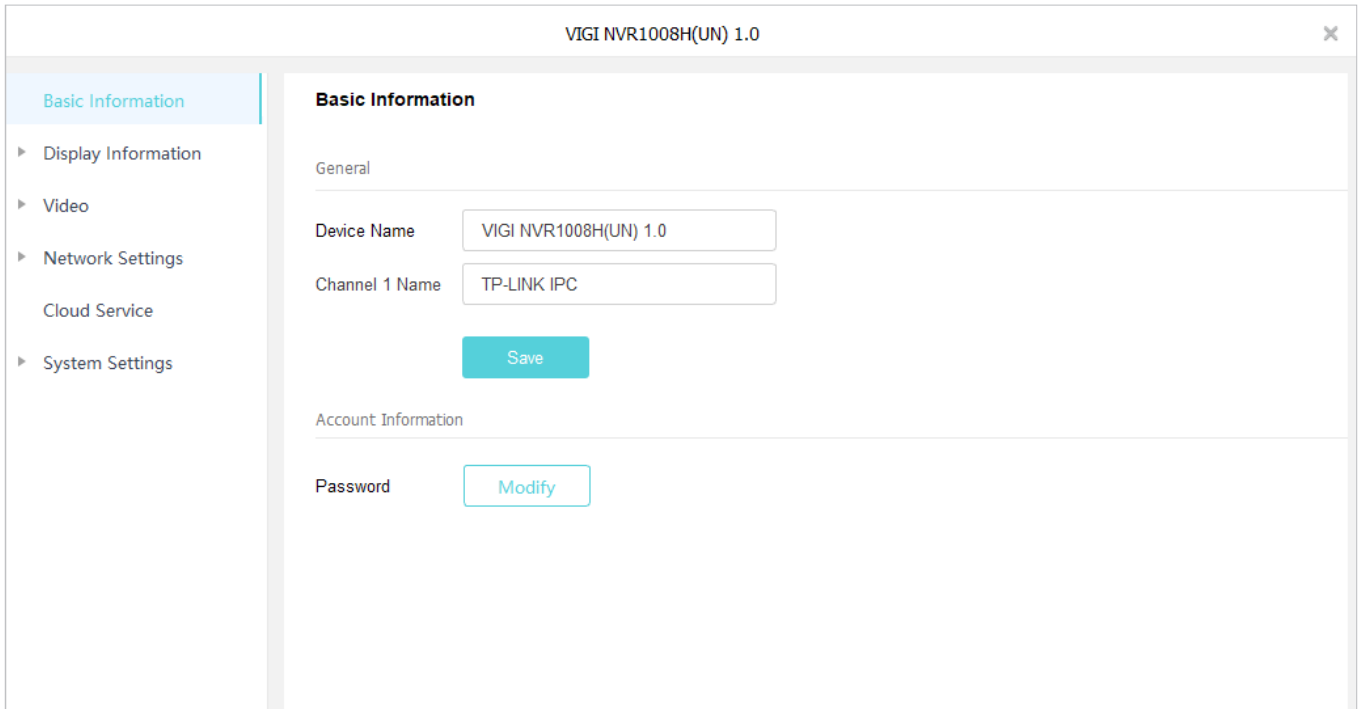

The screenshot shows the 'Basic Information' settings page for a VIGI NVR1008H(UN) 1.0 device. The page has a sidebar on the left with a menu containing 'Basic Information' (selected), 'Display Information', 'Video', 'Network Settings', 'Cloud Service', and 'System Settings'. The main content area is titled 'Basic Information' and is divided into two sections: 'General' and 'Account Information'. In the 'General' section, there are two text input fields: 'Device Name' with the value 'VIGI NVR1008H(UN) 1.0' and 'Channel 1 Name' with the value 'TP-LINK IPC'. Below these fields is a blue 'Save' button. In the 'Account Information' section, there is a 'Password' label and a blue 'Modify' button.

You can click **Modify** to change the password and email address for password reset.

Note: You can only modify the password of local devices.

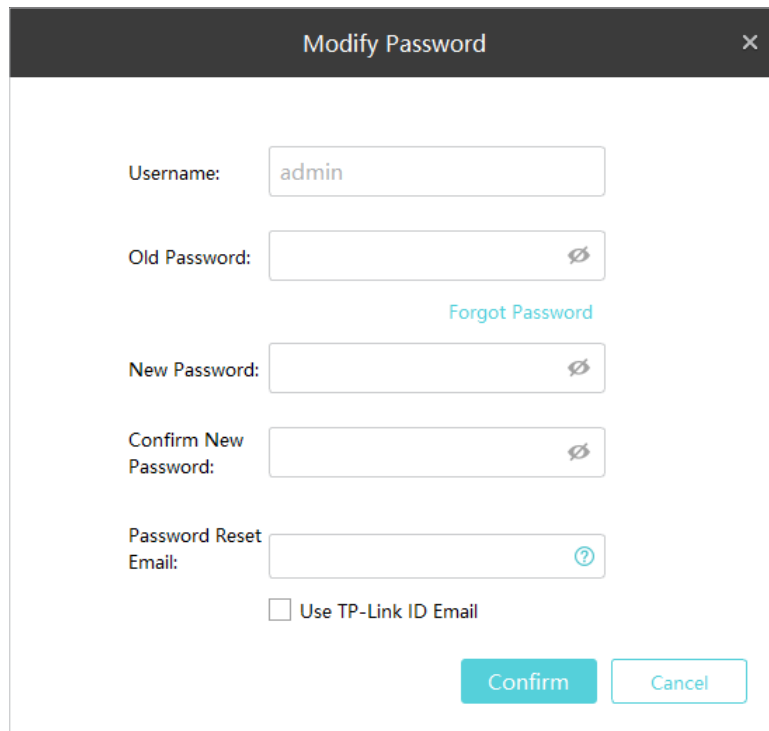


The screenshot shows the 'Modify Password' dialog box. It has a dark header bar with the title 'Modify Password' and a close button (X). The dialog contains several input fields: 'Username' with the value 'admin', 'Old Password' (with a toggle icon), 'New Password' (with a toggle icon), 'Confirm New Password' (with a toggle icon), and 'Password Reset Email' (with a help icon). Below the email field is a checkbox labeled 'Use TP-Link ID Email'. At the bottom right, there are two buttons: 'Confirm' and 'Cancel'. A 'Forgot Password' link is located between the 'Old Password' and 'New Password' fields.

7.8.2 Configure Time Settings

VIGI Security Manager provides two methods to modify the system time. To configure time settings, go to **Settings** > **Device List** and click  in the list. Go to **System Settings** > **Time Settings**.

■ Get Time from the Internet

VIGI devices can use NTP (Network Time Protocol) to automatically get the system time from the Internet. You can also customize the NTP Server Address if you don't want to get the time from the default NTP server address provided by NVR. Then select the time zone according to your region.

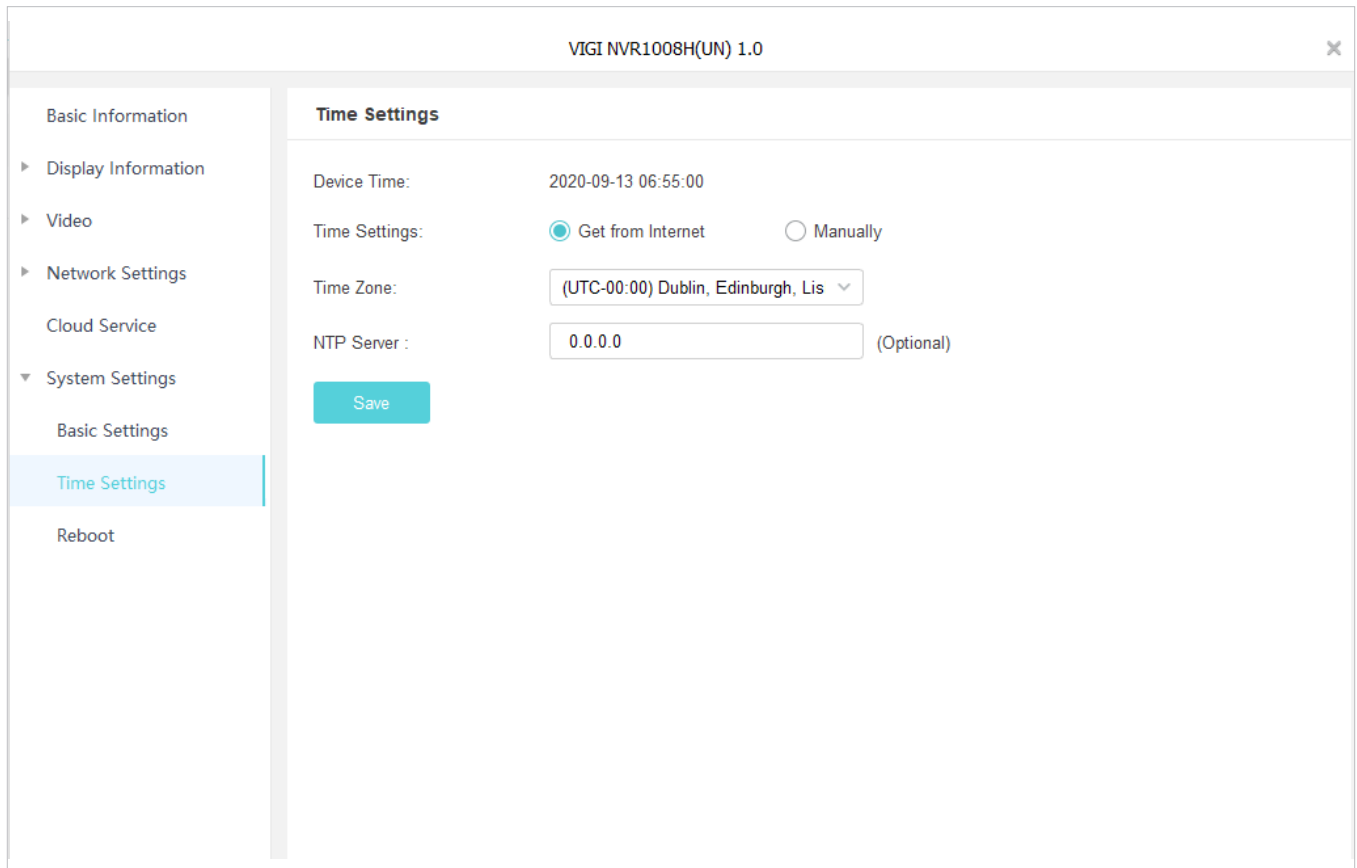

VIGI NVR1008H(UN) 1.0

Basic Information

► Display Information

► Video

► Network Settings

Cloud Service

▼ System Settings

Basic Settings

Time Settings

Reboot

Time Settings

Device Time: 2020-09-13 06:55:00

Time Settings: ☒ Get from Internet ☐ Manually

Time Zone: (UTC-00:00) Dublin, Edinburgh, Lis ▼

NTP Server : 0.0.0.0 (Optional)

Save

■ Set Manually

You can set the device time manually or click [Get From PC](#) to synchronize the device time with that of your PC.

The screenshot shows the 'Time Settings' window for a VIGI NVR1008H(UN) 1.0. On the left is a sidebar menu with the following items: 'Basic Information', 'Display Information', 'Video', 'Network Settings', 'Cloud Service', 'System Settings' (expanded), 'Basic Settings', 'Time Settings' (highlighted), and 'Reboot'. The main content area is titled 'Time Settings' and contains the following fields and controls:

- Device Time:** 2020-09-13 06:54:22
- Time Settings:** Two radio buttons: 'Get from Internet' (unselected) and 'Manually' (selected).
- Date:** A text field showing '2020-9-13' with a calendar icon to its right.
- Time:** Three dropdown menus showing '06', '54', and '22' respectively.
- Buttons:** A teal 'Save' button at the bottom left, and a light blue 'Get from PC' button to the right of the time dropdowns.

7.8.3 Reboot Device

To reboot your devices instantly or set the reboot schedule, go to [Settings > Device List](#) and click  in the list. Go to [System Settings > Reboot](#).

If you want to reboot your device based on a schedule, enable **Scheduled Reboot** and customize the schedule according to your needs.

VIGI NVR1008H(UN) 1.0

Basic Information

▶ Display Information

▶ Video

▶ Network Settings

Cloud Service

▼ System Settings

Basic Settings

Time Settings

Reboot

Reboot Device

Reboot

Reboot Device

Reboot Now

Scheduled Reboot

Scheduled Reboot ☒

Reboot Schedule

Every Sunday ▼

3 ▼

 :

0 ▼


 :

0 ▼

Save

♥ 7.9 Upgrade the Firmware

VIGI Security Manager allows you to upgrade the firmware of your device automatically or manually. To upgrade a device solely or upgrade them in batches, go to **Settings > Device > Firmware Update**.

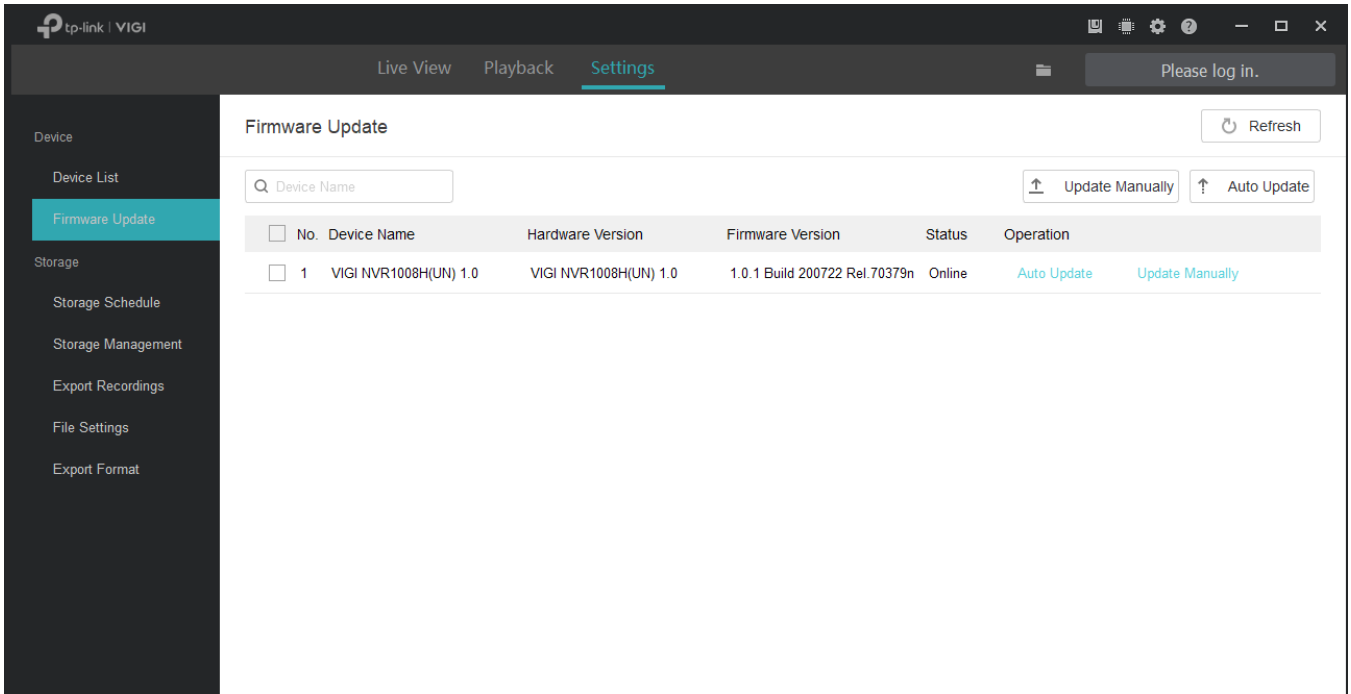


Auto Update


Select a device and click **Auto Update** to automatically upgrade your device.

Update Manually

 Select a device and click Update Manually. Then import the update file and click **Update**



 Click the checkboxes before devices and click **Update Manually** to automatically upgrade your devices.




Click the checkboxes before devices and click **Auto Update**. Then import the update file and click **Update**.


♥ 7.10 Remove Devices

To remove the devices from your VIGI Security Manager, follow the steps below.

1. Go to **Settings > Device List**.

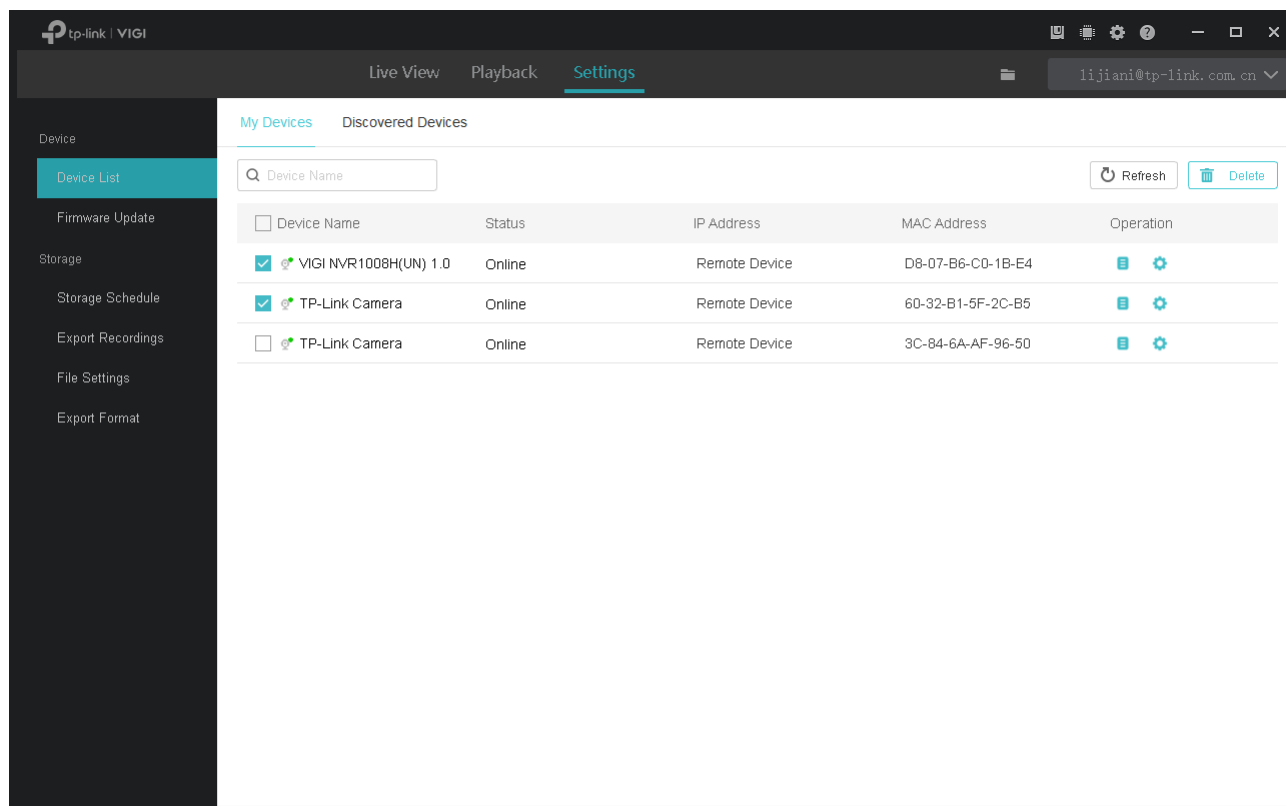

2. Click the checkbox of devices and click **Delete**.
3. Click **Delete**.

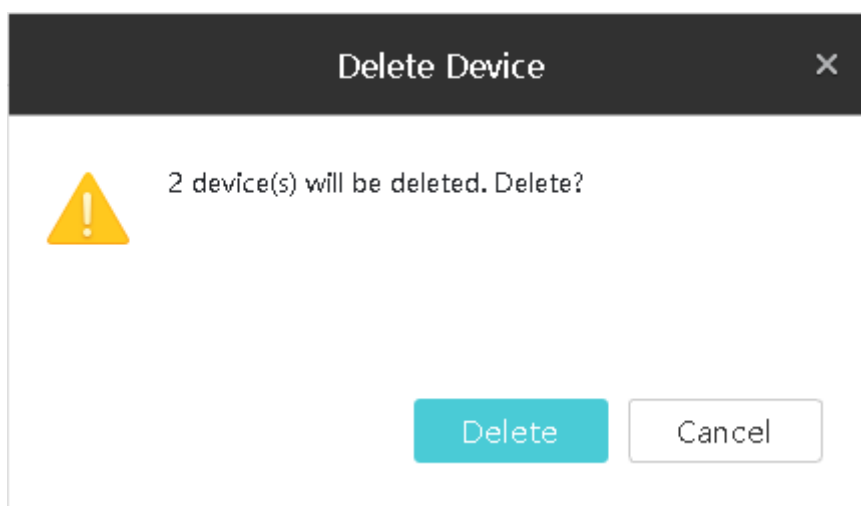



System Management

This chapter guides you on how to view and manage the system of VIGI Security Manager. You can check the storage and CPU usage, configure system settings and update the software.

You can check the storage and CPU usage, configure system settings and update the software on the top right corner.



Hover the cursor above the icon to check the storage usage.



Hover the cursor above the icon to check the CPU usage.



Click the check box to configure the following system settings.

Run at Windows Startup: Makes the software run automatically when your computer starts up.

Enable Hardware Decoding: Allows your GPU (Graphics Processing Unit) to process certain video data, which will take load off the CPU and make the application run smoother.

When Closed: Choose to exit or minimize to tray when clicking .



Click to check the software version and update VIGI Security Manager.