





www.benning.de

Quality for industry, trade and service

Innovative developments and consistent manufacturing quality

Innovative developments and consistent manufacturing quality are the basis for the excellent international reputation of BENNING products. Their design and implementation are based on the requirements of professional users.

Voltage, continuity and phase sequence testers

The DUSPOL[®] and DUTEST[®] product range is intended for voltage, phase, polarity, phase sequence, continuity and semiconductor testing.

Digital multimeters and

digital current clamps

The product range offers the ideal solution for all requirements and applications. We manufacture both devices using the conventional averaging measuring method (RMS) and the TRUE RMS measuring method up to the highest measuring category CAT IV.

The appliance testers

BENNING ST 710 / ST 725 / ST 755 / ST 760 allow safe and time-saving safety and periodic testing of electrical appliances in compliance with the standards DIN VDE 0701-0702, DIN EN 62353 (VDE 0751-1), DIN EN 60974-4 (VDE 0544-4) and DGUV Regulation 3.

Insulation multimeters and installation testers The insulation multimeter **BENNING IT 101** and the installation testers **BENNING IT 115 / IT 130** are intended for safety testing of low-voltage electrical installations according to the standard IEC/EN 60364 (DIN VDE 0100/0105).

Measuring devices for photovoltaics

BENNING offers a range of measuring devices and accessories for commissioning tests, periodic testing and performance assessment of grid-connected PV systems in compliance with the standards IEC/EN 62446 (VDE 0126-23) and IEC/EN 61829 (VDE 0126-24). (BENNING PV 1-1 / PV 2 / SUN 2 / SOLAR Manager)



Any further questions?

Choose your contact person


Technical Support (After Sales Service) (24 hours) Tel. +49/ (0) 2871 / 93 555 · E-Mail: hotline@benning.de **Returns Management, Calibration, Repairs** Tel. +49/ (0) 2871 / 93 554 · E-Mail: returns@benning.de

Product advice (Tobias Enck) Tel. +49/ (0) 2871 / 93 447 · E-Mail: t.enck@benning.de Product advice (Frank Spieker) Tel. +49/ (0) 2871 / 93 416 · E-Mail: f.spieker@benning.de

Voltage Tester and Continuity Tester

Socket Tester and Phase Sequence Indicator

- DUSPOL® Voltage Tester the original since 70 years
- PROFIPOL®+ Voltage Tester a plus in functionality
- DUTEST[®] pro Continuity and Line Tester with LED torch
- BENNING SDT 1 Socket Tester
- TRITEST[®] pro Phase Sequence Indicator with LED torch
- TRITEST[®] easy non-contact Phase Sequence and Phase Tester

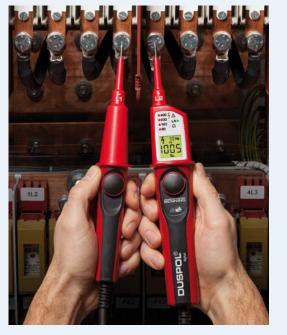







safe voltage testing up to 1000 V

DUSPOR 70 PEARS 1948-2018



The international standard for voltage testers IEC EN 61243-3 (VDE 0682-401):2015 increases safety for work under voltage

Your work as an expert requires safe testing. Therefore, you should not make any compromises concerning safety! Voltage testers which are used on electrical systems of up to 1000 V have to comply with the standard IEC/EN 61243-3 (VDE 0682-401):2015. The standard creates uniform testing and safety criteria on an international level and remarkably which concentrates on user safety. The generation of DUSPOL[®] voltage testers exceeds the demands of the standards concerning both the protection category for housings (IP 65) and overvoltage protection (CAT IV 600 V). The nominal voltage range has been increased to a minimum of 1000 V AC/DC in order to ensure safe testing of increased system voltages of industrial applications, photovoltaic systems and wind power plants as well as of hybrid automotive engineering.



DUSPOL® Voltage Testers – the testers with the VDE mark of conformity

PROFIPOL®+ a plus in functionality

The generation DUSPOL® voltage testers

- safe voltage testing up to 1000 V AC/DC
- · load connection with vibration alert
- intentional tripping of a 30 mA RCD
- phase sequence test in a three-phase mains
- single-pole external conductor test (phase)

Additionally for DUSPOL® expert, DUSPOL® digital:

- acoustic continuity test with loud test buzzer and visual indication by means of yellow LED (continuity tests even of live components, such as e. g. fuses in "intermeshed" systems).
- measuring point illumination by means of white high-power LED
- phase sequence test by means of green LED (left/right)
- detector for non-contact localization of cable breaks on exposed and live lines

Additionally for DUSPOL® digital:

- voltage testing up to 1000 V AC TRUE RMS/1200 V DC
- TRUE RMS measuring method
- low-volt range: 1.0 V to 11.9 V
- frequency indication up to 1000 Hz
- \bullet resistance measurement up to 300 k Ω
- · conducting-state voltage measurement of diodes
- · automatic LC display illumination by means of a light sensor

The new PROFIPOL®+ voltage tester with additional functions and convenient design

- slim and compact design
- test handle lock for one-hand operation on sockets and for safe storage
- indicating steps from 12 V to 690 V AC/DC, fully operational even with batteries being exhausted or removed
- acoustic continuity test with loud buzzer and visual indication by means of yellow LED (continuity tests even of live components, such as e. g. fuses in "intermeshed" systems).
- single-pole external conductor test (phase) and polarity test
- non-contact cable break detector (yellow LED)



Voltage and Continuity Tester

| | DUSPOL® analog | DUSPOL® expert | DUSPOL [®] digital | PROFIPOL® + |
|-------------------------------------|--|--|--|-----------------------------------|
| indication | plunger system (illuminated)/LED | LED | LED/LCD (illuminated) | LED |
| voltage range | 12 V - 1000 V AC/DC | 12 V - 1000 V AC/DC | 1.0 V - 1000 V AC/1200 V DC | 12 V - 690 V AC/DC |
| frequency range | - | - | 1 - 1000 Hz | - |
| acoustic and visual continuity test | - | buzzer + yellow LED 0 - 100 kΩ | buzzer + yellow LED 0 - 100 kΩ | buzzer + yellow LED 0 - 100 kΩ |
| diode test | - | conducting-state/ non-conducting direction | 0.3 - 2.0 V | - |
| resistance measuring range | - | - | 0.1 kΩ - 300 kΩ | - |
| phase-sequence test | LCD ("R" symbol) | green LEDs (right/left) | green LEDs (right/left) | - |
| single-pole external conductor test | LCD ("R" symbol) | red "lightning" LED | red "lightning" LED | red "lightning" LED |
| polarity test | LED (+/-) | LED (+/-) | LCD (+/-) | LED (+/-) |
| cable break detector | - | yellow LED (flashing) | yellow LED (flashing) | yellow LED |
| load connection via push button | I _s = 550 mA (1000 V) 30 mA RCD trip | I _s = 550 mA (1000 V) 30 mA RCD trip | I _s = 550 mA (1000 V) 30 mA RCD trip | - |
| vibrating alarm | • | • | • | - |
| measuring point illumination | - | white LED | white LED | - |
| protection class | IP 65 | IP 65 | IP 65 | IP 54 |
| item no. | 050261 | 050262 | 050263 | 020023 |
| See page 8 for further accessories | | | | |

Professional Continuity Tester

Socket Tester with contact sensor

DUTEST® pro

continuity and line tester for testing high-impedance and low-impedance resistances

- continuity and semiconductor test by means of LEDs and loud buzzer
- visual indication by means of three LED steps: 0 100 $\Omega/1~k\Omega/10~k\Omega$
- acoustic indication via buzzer up to approx. 100 $\boldsymbol{\Omega}$
- external-voltage indication: 6 V to 400 V AC/DC (LEDs/ buzzer)
- polarity test, single-pole external conductor test (phase) and non-contact cable break detector (volt sensor)
- buzzer volume and brightness of the torch are adjustable
- precise and powerful LED torch
- integrated magnetic holder and belt clip at the rear of the housing

BENNING SDT 1


socket tester with contact sensor for active PE error detection

- quick and easy testing of shock-proof sockets for correct connection
- wiring errors such as missing PE, N and L conductors as well as an inversion of the L and PE conductors are clearly indicated via three LEDs
- contact sensor warns of a dangerous contact voltage at the PE contact via the LC display
- unambiguous indication via LEDs and LC display
- FI/RCD TEST key for testing the tripping function of 30 mA RCDs
- an easily understandable status table provides information about the correct connection (OK, green) and the type of existing errors (red) at the shock-proof socket

DUTEST® pro



SDT 1

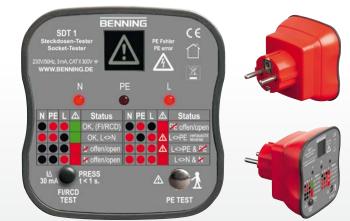

Continuity and Line Tester

| | DUTEST [®] pro |
|-------------------------------------|---|
| LED indication | 3 x yellow, 2 x red |
| acoustic continuity test | loud test buzzer up to 100 $\boldsymbol{\Omega}$ |
| visual continuity test | 0 - 100 $\Omega/1~k\Omega/10~k\Omega$ (yellow LEDs) |
| voltage range | 6 V - 400 V AC/DC (50 Hz/60 Hz) |
| single-pole external conductor test | • |
| polarity test | • |
| cable break detector | • |
| luminous LED torch | yes, adjustable to four levels |
| safety | IEC/EN 61010-1 |
| measuring category | CAT III 300 V |
| batteries | 3 x 1.5 V batteries of type AA (LR6) |
| scope of delivery | incl. set of measuring leads |
| item no. | 050156 |
| See page 8 for further accessories | |

Socket Tester

| | BENNING SDT 1 | | | | |
|----------------------------|---|--|--|--|--|
| indication | 3 red LEDs for N, PE, L conductor and LC display " Δ " | | | | |
| voltage range | 230 V AC, ± 10 % | | | | |
| frequency range | 50 Hz - 60 Hz | | | | |
| PE test response threshold | $U_{\text{B}} < 50$ V AC to earth | | | | |
| RCD testing current | I∆N approx. 30 mA | | | | |
| power supply | via test object (no batteries required) | | | | |
| safety | IEC/EN 61010-1, IEC/EN 61010-2-033 | | | | |
| measuring category | CAT II 300 V | | | | |
| appliance dimensions | 80 x 72 x 78 mm (L x B x H) | | | | |
| appliance weight | 70 g | | | | |
| item no. | 020053 | | | | |

Phase Sequence Indicator for three-phase mains

Non-contact Phase/Phase Sequence Tester

TRITEST® pro


phase sequence indicator with high-power LED torch and magnetic suspension

- indication of "clockwise" and "counter-clockwise" phase sequence by means of green/red LED
- indication of phase voltages L1, L2 and L3 by means of red LED
- voltage range: 400 V to 500 V AC (50 Hz to 60 Hz)
- luminous high-power LED torch
- integrated magnetic holder and belt clip at the rear of the housing
- including three attachable 4 mm probe tips and alligator clip

TRITEST® easy

non-contact phase/phase sequence tester for easy and quick testing

- easy phase sequence testing in three-phase mains by means of green LED probe tip (lights up) = clockwise phase sequence red LED probe tip (lights up) = counter-clockwise phase sequence
- · phase testing on sockets and distribution boxes
- testing with regard to phase balance
- testing insulated lines (cable reel, chains of lights) of cable breaks
- indication via red/green probe tip and buzzer
- ON/OFF push-button with automatic switch-off
- voltage range: 200 V 1000 V AC
- highest measuring category CAT IV 600 V
- break-proof ABS housing and easy operation
- incl. Batteries and pen clip

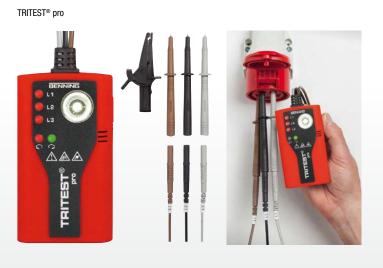

TRITEST[®] easy



CAT IV 600 V Phase sequence testing green = clockwise



Testing of cable breaks

Phase Sequence Indicator

| | TRITEST® pro | TRITEST® easy |
|-------------------------------------|--|--|
| indication | 4 x red, 1 x green LEDs | LED probe tip/buzzer |
| phase sequence indication | green/red LED for clockwise/counter-clockwise phase sequence | green/red LED probe tip for clockwise/counter-clockwise phase sequence |
| single-pole external conductor test | - | red LED probe tip flashing/buzzer |
| voltage range | 400 V - 500 V AC | 200 V - 1000 V AC |
| frequency range | 50 Hz - 60 Hz | 45 Hz - 65 Hz |
| cable break detector | - | • |
| luminous LED torch | yes, single-level | - |
| safety | IEC/EN 61010-1, IEC/EN 61557-1, IEC/EN 61557-7 | IEC/EN 61010-1 |
| measuring category | CAT III 300 V | CAT IV 600 V, CAT III 1000 V |
| batteries | 3 x 1.5 V batteries of type AA (LR6) | 2 x 1.5 V batteries of type AAA (LR03) |
| scope of delivery | incl. set of measuring leads/test probes, alligator clip | incl. batteries |
| item no. | 020052 | 020051 |
| | | |

See page 8 for further accessories

Accessories for Voltage Testers, Continuity and Line Tester, Phase Sequence Indicator

| | Description | Product data | ltem no. | DUSPOL® | PROFIPOL®+ | DUTEST [®] pro | SDT 1 | TRITEST [®] pro | TRITEST® easy |
|----------------|---|--|----------|---------|------------|-------------------------|-------|--------------------------|---------------|
| Stand-by cases | | | | | | | | | |
| BENNING | Stand-by case DUSPOL® dimensions: 330 x 100 x 60 mm | With belt loop on the back, made of hard-wearing nylon fabric | 010911 | • | • | | | | |
| BENNING | Stand-by case size S dimensions: 220 x 110 x 50 mm | With belt loop on the back, made of hard-wearing nylon fabric | 010912 | | | • | | • | • |

Digital Multimeter with safety and function without any compromises

TRUE RMS measuring method to satisfy highest demands on accuracy

Digital Multimeter with proven quality and technology:

- BENNING MM P3 a variety of function in pocket size
- BENNING MM 2/MM 3 precise current measuring ranges of 200 μ A up to 20 A

For precise measurements in trade, service and industry:

- BENNING MM 5 series compact housing with magnetic hanger in a rubber holster
- BENNING MM 6 series, MM 7-1 maximum safety thanks to highest measuring category
- BENNING MM 12 with data logger, Bluetooth[®], PC software and app





Digital-Multimeter BENNING MM P3, MM 1-1 - MM 1-3

reliable and precise in each and every situation

10

BENNING MM P3

pocket-size

- top-class functionality and design
- even smaller and narrower with lower weight (130 g)
- minimum dimensions: 132 x 86 x 19 mm
- for all-purpose use with leather case, firmly connected attached measuring leads and batteries

BENNING MM 1-1, MM 1-2 and MM 1-3 with volt sensor function

- · extremely compact housing type
- the integrated Volt sensor signalises phase voltages by means of an acoustic signal and a red LED signal
- it localizes cable breaks and defective lamps in exposed cables (cable reel, light chains) via the feeding side of the phase
- delivery including case, batteries, measuring leads and wire temperature sensor (MM 1-3)



Digital-Multimeter

| | BENNING MM P3 | BENNING MM 1-1 | BENNING MM 1-2 | BENNING MM 1-3 |
|--------------------|----------------|-----------------|-----------------|----------------------|
| indicating range | 5000 | 2000 | 2000 | 2000 |
| basic accuracy | 0.6 % | 0.5 % | 0.5 % | 0.5 % |
| AC voltage | 100 μV - 600 V | 100 μV - 750 V | 100 μV - 750 V | 100 µV - 750 V |
| DC voltage | 100 μV - 600 V | 100 μV - 1000 V | 100 µV - 1000 V | 100 μV - 1000 V |
| AC current | - | - | 1 mA - 10 A | 1 mA - 10 A |
| DC current | - | - | 1 mA - 10 A | 1 mA - 10 A |
| resistance | 0.1 Ω - 40 MΩ | 0.1 Ω - 20 MΩ | 0.1 Ω - 20 MΩ | 0.1 Ω - 20 MΩ |
| continuity/diode | • / • | • / • | • / • | • / • |
| frequency | 1 mHz - 5 MHz | - | 1 Hz - 20 MHz | 1 Hz - 20 MHz |
| capacity | 10 pF - 100 μF | - | 1 pF - 2 mF | 1 pF - 2 mF |
| temperature | - | - | - | -20 °C up to +800 °C |
| volt sensor | - | • | • | • |
| interface | - | - | - | - |
| software | - | - | - | - |
| memory | HOLD | HOLD | HOLD, MAX/MIN | HOLD, MAX/MIN |
| Data Log function | - | - | - | - |
| measuring method | RMS | RMS | RMS | RMS |
| measuring category | CAT III 300 V | CAT III 600 V | CAT III 600 V | CAT III 600 V |
| item no. | 044084 | 044081 | 044082 | 044083 |

See page 14 for further accessories

Digital-Multimeter BENNING MM 1, MM 2, MM 3, MM 4

safety and functional diversity without any compromises

BENNING MM 1, MM 2 and MM 3

quality that convinces

- basic measuring for current, voltage, resistance, capacity, frequency, continuity and diode test
- precise current measuring ranges (200 µA and 2/20/200 mA) for ionization current measurement at the gas burner and for testing the sacrificial anode in the hot water tank (HVAC technicians) (MM 2/MM 3)
- automatic and/or manual measuring range selection
- delivery including rubber holster, case, battery/batteries and measuring leads

BENNING MM 4

with current clamp adapter

- basic measuring for AC current, voltage, resistance, continuity and diode test
- automatic and manual measuring range selection
- safe current measuring up to 300 A AC via attachable current clamp adapter (max. clamp opening 30 mm)
- · delivery including case, batteries, measuring lead and measuring probes



Digital-Multimeter

| | BENNING MM 1 | BENNING MM 2 | BENNING MM 3 | BENNING MM 4 |
|--------------------|-----------------|-----------------|----------------|---------------|
| indicating range | 3200 | 2000 | 2000 | 4200 |
| basic accuracy | 0.5 % | 0.5 % | 0.5 % | 0.5 % |
| AC voltage | 1 mV - 600 V | 100 μV - 750 V | 100 μV - 600 V | 1 mV - 600 V |
| DC voltage | 100 μV - 600 V | 100 µV - 1000 V | 100 μV - 600 V | 1 mV - 600 V |
| AC current | - | 0.1 µA - 20 A | 0.1 µA - 20 A | 0.1 A - 300 A |
| DC current | 0.1 μA - 3.2 mA | 0.1 μA - 20 A | 0.1 μA - 20 A | - |
| resistance | 0.1 Ω - 32 MΩ | 0.1 Ω - 20 MΩ | 0.1 Ω - 20 MΩ | 0.1 Ω - 42 MΩ |
| continuity/diode | • / • | • / • | • / • | • / • |
| frequency | - | - | 1 Hz - 200 kHz | - |
| capacity | - | - | 1 pF - 200 μF | - |
| temperature | - | - | - | - |
| volt sensor | - | - | - | - |
| interface | - | - | - | - |
| software | - | - | - | - |
| memory | HOLD | - | - | HOLD |
| Data Log function | - | - | - | - |
| measuring method | RMS | RMS | RMS | RMS |
| measuring category | CAT III 600 V | CAT III 600 V | CAT III 300 V | CAT III 300 V |
| item no. | 044027 | 044028 | 044029 | 044073 |

See page 14 for further accessories

TRUE RMS Digital Multimeter BENNING MM 5-1, MM 5-2, MM 6-1, MM 6-2

TRUE RMS measuring method to satisfy highest demands on accuracy

12

BENNING MM 5-1, MM 5-2

compact, precise and innovative

- compact dimensions: 140 x 70 x 33 mm (without holster)
- rubber holster with integrated magnetic hanger
- Volt sensor for non-contact cable break detection (red LED)
- continuity test by means of red LED and buzzer
- measuring input for AC/DC current, microampere DC and temperature
- LC display with illumination (MM 5-2)
- delivery including rubber holster with magnetic hanger, case, batteries, measuring leads as well as wire temperature sensor (MM 5-2)

BENNING MM 6-1, MM 6-2

compact, precise, with highest safety

- highest measuring category CAT IV 600 V for highest safety
- "AutoV" function with low input impedance (LoZ) to suppress reactive voltages
- rubber holster with integrated magnetic hanger
- Volt sensor for non-contact signaling of phase voltages and cable breaks in lines (buzzer/red LED)
- · continuity test by means of red LED and buzzer
- LC display with bar graph indication and illumination
- delivery including rubber holster with magnetic hanger, case, batteries, measuring leads as well as wire temperature sensor (MM 6-1)



TRUE RMS Digital Multimeter

| | BENNING MM 5-1 | BENNING MM 5-2 | BENNING MM 6-1 | BENNING MM 6-2 |
|-------------------------------------|------------------|----------------------|--|---|
| indicating range | 6000 | 6000 | 6000 | 6000 |
| basic accuracy | 0.5 % | 0.5 % | 0.5 % | 0.5 % |
| AC voltage | 100 μV - 600 V | 100 μV - 600 V | 100 µV - 1000 V | 100 μV - 1000 V |
| DC voltage | 100 μV - 600 V | 100 μV - 600 V | 100 µV - 1000 V | 100 μV - 1000 V |
| AC current | - | 1 mA - 10 A | 0.1 μA - 600 μA | 1 mA - 10 A |
| DC current | - | 0.1 μA - 10 A | 0.1 μA - 600 μA | 1 mA - 10 A |
| resistance | 0.1 Ω - 40 MΩ | 0.1 Ω - 40 MΩ | 0.1 Ω - 40 MΩ | 0.1 Ω - 40 MΩ |
| continuity/diode | • / • | • / • | • / • | • / • |
| frequency | 0.01 Hz - 50 kHz | 0.01 Hz - 50 kHz | 0.01 Hz - 100 kHz | 0.01 Hz - 100 kHz |
| capacity | 0.01 nF - 1 mF | 0.01 nF - 1 mF | 1 nF - 10 mF | 1 nF - 10 mF |
| temperature | - | -40 °C up to +400 °C | -40 °C up to + 400 °C | - |
| volt sensor | • | • | • | • |
| interface | - | - | - | - |
| software | - | - | - | - |
| memory | HOLD, PEAK | HOLD, PEAK | HOLD, PEAK, REL | HOLD, PEAK, REL |
| Data Log function | - | - | - | - |
| measuring method | TRUE RMS | TRUE RMS | TRUE RMS | TRUE RMS |
| measuring category | CAT III 600 V | CAT III 600 V | CAT IV 600 V | CAT IV 600 V |
| item no. | 044070 | 044071 | 044086 | 044087 |
| See page 14 for further accessories | | | Measuring range indications refer to ranges from | n highest resolution to the final measuring renge |

TRUE RMS Digital Multimeter BENNING MM 7-1, MM 12

for all sophisticated measuring tasks in industry and trade

BENNING MM 7-1

with highest safety for industrial applications

- highest measuring category CAT IV 600 V for highest safety
- "AutoV" function for automatic AC/DC voltage detection and low input impedance (LoZ) to suppress reactive voltages
- · the integrated Volt sensor signalises non-contact phase voltages and cable breaks in cables (buzzer/LCD)
- LC display with bar graph indication and illumination
- delivery including rubber holster, case, battery, measuring leads and wire temperature sensor

BENNING MM 12

ISB

 \bigcirc

with logging function and Bluetooth®

- data logger (40000 measured values) and memory function (1000 measured values)
- Bluetooth[®] Low Energy 4.0 and USB interface
- · PC software for further evaluation
- free IOS and Android app for data link to smartphone/tablet
- "AutoV" function with low input impedance (LoZ) to suppress reactive voltages
- · highest measuring category CAT IV 600 V for highest safety
- LC display with bar graph indication and illumination
- delivery including PC software, USB data cable, rubber holster, magnetic holder, case, batteries, measuring leads, wire temperature sensor and calibration certificate



TRUE RMS Digital Multimeter

| | BENNING MM 7-1 | BENNING MM 12 |
|--------------------|----------------------|--|
| indicating range | 6000 | 40000 |
| basic accuracy | 0.08 % | 0.5 % |
| AC voltage | 10 µV - 1000 V | 10 μV - 1000 V |
| DC voltage | 10 µV - 1000 V | 10 µV - 1000 V |
| AC current | 10 µA - 10 A | 10 µA - 10 A |
| DC current | 10 µA - 10 A | 10 µA - 10 A |
| resistance | 0.1 Ω - 40 MΩ | 0.1 Ω - 40 ΜΩ |
| continuity/diode | • / • | • / • |
| frequency | 0.01 Hz - 100 kHz | 0.1 Hz - 100 kHz |
| capacity | 1 nF - 10 mF | 0.01 nF - 40 mF |
| temperature | -40 °C up to +400 °C | -200 °C up to +1200 °C |
| volt sensor | • | - |
| interface | - | Bluetooth®, USB |
| software | - | РС, Арр |
| memory | HOLD, MAX/MIN | HOLD, PEAK, MAX/MIN, SAVE |
| Data Log function | - | 40000 measured values |
| measuring method | TRUE RMS | TRUE RMS |
| measuring category | CAT IV 600 V | CAT IV 600 V |
| item no. | 044085 | 044088 |
| | | and when a second indications refer to reason from |

See page 14 for further accessories

Measuring range indications refer to ranges from highest resolution to the final measuring range value.





Simultaneous monitoring of up to 5 digital multimeters from a safe distance

Accessories for Digital Multimeter

safe – functional – indispensable

| | Description | Product data | Item no. | MM P3 | MM 1-1 | MM 1-2 | MM 1-3 | MM 1 | MM 2 | MM 3 | MM 4 | MM 5-1 | MM 5-2 | MM 6-1 | MM 6-2 | MM 7-1 |
|----------------|--|--|----------|-------|--------|--------|--------|------|------|------|------|--------|--------|--------|--------|--------|
| urrent Cla | mp Adapters | | | | | | | | | _ | _ | | | | | |
| 7 | BENNING CC 1 AC current clamp adapter | basic accuracy: 1.9 % current: 1 A - 400 A AC output: 1 mV AC per 1 A AC | 044037 | | • | • | • | | • | • | | • | • | • | • | • |
| | BENNING CC 3 AC/DC current clamp adapter | basic accuracy: 1 % - 2 % current: 0.2 A - 300 A AC/DC output: 1 mV/10 mV AC/DC per 1 A AC/DC | 044038 | | • | • | • | | • | • | | • | • | • | • | • |
| | BENNING CFlex 1 AC current transformer | basic accuracy: 3 % current: 0.3 A - 3000 A AC output: 100 mV/10 mV/1 mV AC per 1 A AC | 044068 | | • | • | • | | • | • | | • | • | • | • | • |
| tand-by ca | ISES | | | | | | | | | | | | | | | |
| | Stand-by case size S dimensions: 220 x 110 x 50 mm | with belt loop on the back, made of hard-wearing nylon fabric | 010912 | | • | • | • | • | | | | • | • | • | • | |
| analas | Stand-by case size M dimensions: 240 x 180 x 70 mm | made of hard-wearing nylon fabric | 010913 | | • | • | • | • | • | • | • | • | • | • | • | • |
| leasuring a | accessories | | | | | | | | | | | | | | | |
| * | BENNING TA 1 crocodile clips, two pieces | Ø 4 mm plug-in technology, red/black, professional equipment, CAT III 1000 V | 044124 | | • | • | • | • | • | • | | • | • | • | • | • |
| 88411 | BENNING TA 2 set of measuring leads, six pieces | Ø 4 mm plug-in technology, red/black, professional equipment, consisting of: measuring leads (silicone) CAT III 1000 V, test probes (Ø 4 mm measuring tip) CAT II 1000 V, crocodile clips CAT III 1000 V | 044125 | | • | • | • | • | • | • | • | • | • | • | • | • |
| | BENNING TA 3 set of measuring leads, eight pieces | Ø 4 mm plug-in technology, red/black, professional equipment, CAT III 1000 V, consting of: measuring leads (silicone), test probes (slender measuring tip), claw clamps, crocodile clips | 044126 | | • | • | • | • | • | • | • | • | • | • | • | • |
| | BENNING TA 4 magnetic holder, three pieces | For attachment of multimeters to switching cabinets, machine and system parts. Consisting of: magnetic holder, adapter and belt | 044120 | | • | • | • | • | • | • | | • | • | • | • | • |
| | Ø 4 mm safety measuring leads with 2 mm measuring tip, two pieces | Red/black, L = 1.40 m, with \emptyset 2 mm measuring tip (L = 18 mm), CAT IV 600 V/CAT III 1000 V (with protective caps), CAT II 1000 V (without protective caps) | 044146 | | • | • | • | • | • | • | • | • | • | • | • | • |
| | Ø 4 mm safety measuring leads with 4 mm measuring tip, two pieces | Red/black, L = 1.40 m, with Ø 4 mm measuring tip (L = 18 mm), CAT IV 600 V/CAT III 1000 V (with protective caps), CAT II 1000 V (without protective caps) | 044145 | | • | • | • | • | • | • | • | • | • | • | • | • |
| | Set of measuring leads for BENNING MM 4, Ø 4 mm plug-in technology, three pieces | Consisting of: measuring lead with Ø 2 mm measuring tip, 2 measuring probes with Ø 2 mm measuring tip | 044119 | | | | | | | | • | | | | | |
| 8 | Temperature probe, type K, insertion probe (V4A steel tube) | For flexible substances, liquids, gases and air. Measuring range: - 196 °C up to + 800 °C | 044121 | | | | • | | | | | | • | • | | • |
| eramic fus | e | | | | | | | | | | | | | | | |
| without figure | 440 mA fuses packaging unit 10 pieces | fast-acting, breaking capacity 10 kA, rated voltage 1000 V, dimensions 10 x 35 mm | 10016655 | | | | | | | | | | | | | • |
| without figure | 1 A fuses packaging unit 10 pieces | fast-acting, rated current 1 A, rated voltage 500 V, dimensions 6.3 x 32 mm | 749669 | | | | | | • | • | | | | | | |
| without figure | 10 A fuses packaging unit 10 pieces | fast-acting, rated current 10 A, breaking capacity 50 kA, rated voltage 600 V, dimensions 10 x 38 mm | 748263 | | | • | • | | | | | | | | | |
| without figure | 11 A fuses packaging unit 10 pieces | fast-acting, rated current 11 A, breaking capacity 20 kA, rated voltage 1000 V, dimensions 10 x 38 mm | 10016656 | | | | | | | | | | | | • | • |
| without figure | 15 A fuses packaging unit 10 pieces | fast-acting, rated current 15 A, breaking capacity 50 kA, rated voltage 600 V, dimensions 10.3 x 38.1 mm fact acting rated current 16 A rated voltage 500 V | 10149447 | | | | | | | | | | • | | | |
| without figure | 16 A fuses packaging unit 10 pieces | fast-acting, rated current 16 A, rated voltage 500 V, dimensions 6.3 x 32 mm | 749770 | | | | | | ٠ | ٠ | | | | | | |

Digital Current Clamp Multimeter for AC/DC current

TRUE RMS measuring method to satisfy highest demands on accuracy

Particularly for troubleshooting in electrical installations and devices:

- BENNING CM 9 for measurement of leakage currents and differential currents (1 µA 100 A AC)
- BENNING CM 11 for process signals, automotive engineering and intrusion alarm systems

For precise measurements in trade, service and industry:

- BENNING CM P1/CM P2 pocket size Mini Current Clamp Meters with low-pass filter
- BENNING CM 2 our best seller for multifunctional use
- BENNING CM 12 Power Current Clamp Multimeter with data logger, Bluetooth® and app













Digital Current Clamp Meters BENNING CM 1-1 - CM 1-3

for AC current

BENNING CM 1-1 and CM 1-2

with compact design

- safe AC current measuring up to max. 400 A AC
- measuring inputs for voltage, resistance, continuity and diode test (CM 1-2)
- delivery including case and battery/batteries as well as measuring leads (CM 1-2)

BENNING CM 1-3 with volt sensor function

- safe AC current measurement with open current clamp head up to max. 200 A AC
- · measuring inputs for voltage, resistance, continuity and diode test
- integrated volt sensor signalises phase voltages by means of an acoustic signal and a red LED signal
- it localizes cable breaks and defective lamps in exposed cables (cable reel, light chains) via the feeding side of the phase
- delivery including case, batteries and measuring leads



Digital Current Clamp Meter

| | BENNING CM 1-1 | BENNING CM 1-2 | BENNING CM 1-3 |
|-------------------------------------|----------------|-----------------------------------|---|
| indicating range | 2000 | 2000 | 2000 |
| basic accuracy | 2 % | 1 % | 1 % |
| AC voltage | - | 0.1 V - 600 V | 0.1 V - 750 V |
| DC voltage | - | 0.1 V - 600 V | 0.1 V - 1000 V |
| AC current | 10 mA - 400 A | 100 mA - 400 A | 100 mA - 200 A |
| DC current | - | - | - |
| resistance | - | 0.1 Ω - 20 MΩ | 0.1 Ω - 20 MΩ |
| continuity/diode | - | • / - | • / • |
| frequency | - | - | - |
| capacity | - | - | - |
| effective power | - | - | - |
| power factor (cos φ) | - | - | - |
| temperature | - | - | - |
| volt sensor | - | - | yes |
| interface | - | - | - |
| software | - | - | - |
| memory | HOLD, MAX | HOLD | HOLD |
| Data Log function | - | - | - |
| measuring method | RMS | RMS | RMS |
| max. clamp opening | 30 mm | 30 mm | 16 mm |
| measuring category | CAT III 600 V | CAT III 600 V | CAT IV 600 V |
| item no. | 044061 | 044062 | 044063 |
| See page 20 for further accessories | | Massuring range indications refer | to ranges from highest resolution to the final measuring range va |

Mini Current Clamp Meters BENNING CM P1, CM P2

flexible AC current transformers BENNING CFlex 1, CFlex 2

BENNING CM P1 and CM P2


minimum dimensions, maximum safety

- TRUE RMS measuring method
- precise measurements of load currents of up to 400 A
- maximum resolution of 10 mA in the 40.00 A measuring range
- inrush current measurement (INRUSH) in the 40 A measuring range of motors and lighting systems
- low-pass filter (LPF, approx.. 160 Hz) to suppress high-frequency pulses at pulsed motor drives
- Volt sensor (NCV) for non-contact signaling of phase voltages (buzzer/LCD)
- · LC display with illumination
- delivery including case and batteries

BENNING CFlex 1, CFlex 2

flexible AC current transformers up to 3000 A

- TRUE RMS measuring method (CFlex 2)
- measuring loop (46 cm) with high flexibility for narrow measuring points and large cable cross-sections
- length of connecting cable: 1.8 m
- · simple closing mechanism which can be operated with gloves
- analog output is universally applicable for all multimeters and oscilloscopes via 4 mm safety plugs (CFlex 1)
- output 100/10/1 mV per A (CFlex 1)
- large 4 digit LC display with illumination (CFlex 2)
- delivery including case and batteries

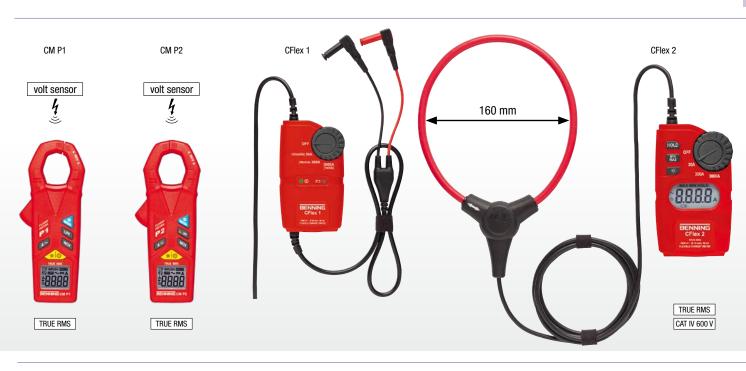

Digital Current Clamp Meter and Current Transformers

| | BENNING CM P1 | BENNING CM P2 | BENNING CFlex 1 | BENNING CFlex 2 |
|---------------------|-------------------|-------------------------|-----------------|-----------------|
| ndicating range | 4200 | 4200 | - | 6000 |
| basic accuracy | 2 % | 2 % | 3 % | 3 % |
| AC voltage | - | - | - | - |
|)C voltage | - | - | - | - |
| AC current | 0.01 A - 400 A | 0.01 A - 400 A | 0.3 A - 3000 A | 0.1 A - 3000 A |
| DC current | - | 0.01 A - 400 A | - | - |
| esistance | - | - | - | - |
| continuity/diode | - | - | - | - |
| requency | - | - | - | - |
| apacity | - | - | - | - |
| effective power | - | - | - | - |
| ower factor (cos φ) | - | - | - | - |
| emperature | - | - | - | - |
| olt sensor | • | • | - | - |
| nterface | - | - | - | - |
| software | - | - | - | - |
| nemory | HOLD, INRUSH, LPF | HOLD, INRUSH, LPF, ZERO | - | HOLD, MIN/MAX |
| Data Log function | - | - | - | - |
| neasuring method | TRUE RMS | TRUE RMS | - | TRUE RMS |
| nax. clamp opening | 23 mm | 23 mm | 160 mm | 160 mm |
| neasuring category | CAT III 600 V | CAT III 600 V | CAT III 600 V | CAT IV 600 V |
| tem no. | 044678 | 044679 | 044068 | 044069 |

See page 20 for further accessories

TRUE RMS Digital Current Clamp Meters BENNING CM 2, CM 5-1, CM 7, CM 8

for AC/DC current

1

BENNING CM 2

Our best seller!

- · safe and non-contact measuring of high currents
- DC and AC current measuring up to 300 A AC/DC
- measurement of low currents (automotive, photovoltaics, industry)
- measuring inputs for voltage, resistance and continuity test
- delivery including case, batteries and measuring leads

BENNING CM 5-1 and CM 7 innovative technology

- safe current measuring up to max. 1000 A AC/DC
- highest measuring category CAT IV 600 V
- automatic selection of the measuring function (V AC/DC, A AC/DC, Ω and low input impedance LoZ (CM 5-1))
- LC display with illumination
- delivery including case, battery and measuring leads

BENNING CM 8 power analysis for single-phase and three-phase mains

- safe current measuring up to max. 600 A AC/DC
- measurement of inrush currents (motors etc.)
- effective power measurements up to 360 kW
- calculation of the power factor $\cos\phi$
- indication of the load type (inductive, capacitive)
- bipolar phase sequence test in three-phase mains
- measuring inputs for voltage, resistance, frequency, temperature, continuity and diode test
- delivery including case, battery, measuring leads and wire temperature sensor



TRUE RMS Digital Current Clamp Meter

| | BENNING CM 2 | BENNING CM 5-1 | BENNING CM 7 | BENNING CM 8 | | | |
|----------------------|--|----------------|---------------------------|-----------------------------|--|--|--|
| indicating range | 4000 | 9999 | 4000 | 6000 | | | |
| basic accuracy | 0.5 % | 0.9 % | 0.7 % | 0.7 % | | | |
| AC voltage | 1 mV - 600 V | 1.3 V - 750 V | 0.1 V - 750 V | 10 mV - 600 V | | | |
| DC voltage | 0.1 mV - 600 V | 0.7 V - 1000 V | 0.1 V - 1000 V | 10 mV - 600 V | | | |
| AC current | 100 mA - 300 A | 0.9 A - 600 A | 0.1 A - 1000 A | 0.1 A - 600 A | | | |
| DC current | 10 mA - 300 A | 0.9 A - 600 A | 0.1 A - 1000 A | 0.1 A - 600 A | | | |
| resistance | 0.1 Ω - 40 MΩ | 1 Ω - 10 kΩ | 0.1 Ω - 400 Ω | 0.1 Ω - 20 kΩ | | | |
| continuity/diode | • / - | • / • | • / - | • / • | | | |
| frequency | - | - | 1 Hz - 400 Hz | 0.1 Hz - 4 kHz | | | |
| capacity | - | - | - | - | | | |
| effective power | - | - | - | 360 kW | | | |
| power factor (cos φ) | - | - | - | ± 0.00 - 1.00 | | | |
| temperature | - | - | - | -50 °C up to 1000 °C | | | |
| volt sensor | - | - | - | - | | | |
| interface | - | - | - | - | | | |
| software | - | - | - | - | | | |
| memory | HOLD, MAX, ZERO | HOLD, ZERO | HOLD, MAX/MIN, PEAK, ZERO | HOLD, MAX/MIN, PEAK, INRUSH | | | |
| Data Log function | - | - | - | - | | | |
| measuring method | TRUE RMS | TRUE RMS | TRUE RMS | TRUE RMS | | | |
| max. clamp opening | 25 mm | 35 mm | 53 mm | 40 mm | | | |
| measuring category | CAT III 300 V | CAT IV 600 V | CAT IV 600 V | CAT III 600 V | | | |
| item no. | 044035 | 044066 | 044059 | 044064 | | | |
| | e page 20 for further accessories Measuring range indications refer to ranges from highest resolution to the final measuring range val | | | | | | |

TRUE RMS Digital Current Clamp Meters BENNING CM 9, CM 11, CM 12

TRUE RMS measuring method to satisfy highest demands on accuracy

BENNING CM 9

with a resolution of 1 µA

- measurement of leakage currents and differential currents in electrical systems (IEC/EN 60364) and devices
- highest resolution of 1 µA in the 6 mA measuring range
- measurement without switch-off during normal operation of the system/device
- precise and reproducible measuring results up to 100 A
- · switchable low-pass filter
- optimum screening against external magnetic fields
- · delivery including case and batteries


BENNING CM 11 with a resolution of 0.1 mA

- highest resolution of 0.1 mA AC/DC
- ideal for troubleshooting in electrical installations, devices, automotive engineering, control systems (4 to 20 mA process signals) as well as in fire and intrusion alarm systems
- measurements of leakage currents, differential currents and load currents
- multifunctional use fore voltage (600 V), resistance measurements (600 kΩ) and continuity test
- compact dimensions with a clamp opening of 23 mm
- delivery including case, batteries and measuring leads

BENNING CM 12

with logging function and Bluetooth®

- effective power (AC/DC) and power factor measurement (cos $\boldsymbol{\varphi})$
- measurement of inrush currents (motors etc.)
- low-pass filter (HFR), THD measurement of the harmonic
- Volt sensor for non-contact cable break detection (red LED)
- · bipolar phase sequence test
- data logger (9999 measured values) and memory function
- Bluetooth[®] Low Energy 4.0 interface
- free IOS and Android app for smartphone/tablet
- AUTO SENSE function for automatic selection of measuring ranges and functions
- highest measuring category CAT IV 600 V for highest safety
- LC display with bar graph indication and illumination
- delivery including case, batteries and measuring leads

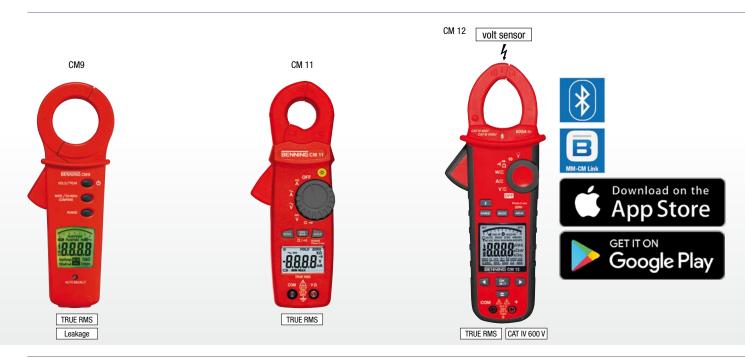

TRUE RMS Digital Current Clamp Meter

| | BENNING CM 9 | BENNING CM 11 | BENNING CM 12 | | | | |
|-------------------------------------|--|---------------------|---|--|--|--|--|
| indicating range | 6000 | 6000 | 9999 | | | | |
| basic accuracy | 1 % | 1 % | 1 % | | | | |
| AC voltage | - | 10 mV - 600 V | 10 mV - 1000 V | | | | |
| DC voltage | - | 0.1 mV - 600 V | 10 mV - 1000 V | | | | |
| AC current | 1 µA - 100 A | 0.1 mA - 20 A | 10 mA - 600 A | | | | |
| DC current | - | 0.1 mA - 10 A | 10 mA - 600 A | | | | |
| resistance | - | 0.1 Ω - 600 kΩ | 0.1 Ω - 100 kΩ | | | | |
| continuity/diode | - | • / - | • / • | | | | |
| frequency | - | - | 0.01 Hz - 10 kHz | | | | |
| capacity | - | - | 1 nF - 4 mF | | | | |
| effective power | - | - | 1 W - 600 kW | | | | |
| power factor (cos φ) | - | - | 0.01 - 1.00 | | | | |
| temperature | - | - | • | | | | |
| volt sensor | - | - | • | | | | |
| interface | - | - | Bluetooth® | | | | |
| software | - | - | Арр | | | | |
| memory | HOLD, PEAK | HOLD, MIN/MAX, ZERO | A-SAVE, HOLD, MIN, MAX, PEAK, AVG, INRUSH | | | | |
| Data Log function | - | - | 9999 measured values | | | | |
| measuring method | TRUE RMS | TRUE RMS | TRUE RMS | | | | |
| max. clamp opening | 40 mm | 23 mm | 33 mm | | | | |
| measuring category | CAT III 300 V | CAT IV 300 V | CAT IV 600 V | | | | |
| item no. | 044065 | 044067 | 044680 | | | | |
| See page 20 for further accessories | ge 20 for further accessories Measuring range indications refer to ranges from highest resolution to the final measuring range | | | | | | |

Accessories for Digital Current Clamp Meter

safe – functional – indispensable

20

| | Description | Product data | ltem no. | CFlex 1 | CFlex 2 | CM P1 | CM P2 | CM 1-1 | CM 1-2 | CM 1-3 | CM 2 | CM 5-1 | CM 7 | CM 8 | CM 9 | CM 11 | CM 12 |
|--------------|--|--|----------|---------|---------|-------|-------|--------|--------|--------|------|--------|------|------|------|-------|-------|
| AC current t | ransformer | | | | | | | | | | | | | | | | |
| | BENNING CFlex 1 AC current transformer | basic accuracy: 3 % current: 0.3 A - 3000 A AC output: 100 mV/10 mV/1 mV AC per 1 A AC | 044068 | | | | | | • | • | • | • | • | • | | • | • |
| Stand-by ca | ses | | | | | | | | | | | | | | | | |
| | Stand-by case size S dimensions: 220 x 110 x 50 mm | with belt loop on the back, made of hard-wearing nylon fabric | 010912 | | | • | • | • | • | • | • | • | | | • | • | |
| assure: | Stand-by case size M dimensions: 240 x 180 x 70 mm | made of hard-wearing nylon fabric | 010913 | • | • | • | • | • | • | • | • | • | | • | • | • | |
| Measuring a | ccessories | | | | | | | | | | | | | | | | |
| * | BENNING TA 1 crocodile clips, two pieces | Ø 4 mm plug-in technology, red/black, professional equipment, CAT III 1000 V | 044124 | | | | | | • | • | • | • | • | • | | • | • |
| 88411 | BENNING TA 2 set of measuring leads, six pieces | Ø 4 mm plug-in technology, red/black, professional equipment, consisting of: measuring leads (silicone) CAT III 1000 V, test probes (Ø 4 mm measuring tip) CAT II 1000 V, crocodile clips CAT III 1000 V | 044125 | | | | | | • | • | • | • | • | • | | • | • |
| | BENNING TA 3 set of measuring leads, eight pieces | Ø 4 mm plug-in technology, red/black, professional equipment, CAT III 1000 V, consting of: measuring leads (silicone), test probes (slender measuring tip), claw clamps, crocodile clips | 044126 | | | | | | • | • | • | • | • | • | | • | • |
| | Ø 4 mm safety measuring leads with 2 mm measuring tip, two pieces | Red/black, L = 1.40 m, with Ø 2 mm measuring tip (L = 18 mm), CAT IV 600 V/CAT III 1000 V (with protective caps), CAT II 1000 V (without protective caps) | 044146 | | | | | | • | • | • | • | • | • | | • | • |
| | Ø 4 mm safety measuring leads with 4 mm measuring tip, two pieces | Red/black, L = 1.40 m, with Ø 4 mm measuring tip (L = 18 mm), CAT IV 600 V/CAT III 1000 V (with protective caps), CAT II 1000 V (without protective caps) | 044145 | | | | | | • | • | • | • | • | • | | • | • |
| 8 | Temperature probe, type K, insertion probe (V4A steel tube) | For flexible substances, liquids, gases and air. Measuring range: - 196 $^\circ C$ up to + 800 $^\circ C$ | 044121 | | | | | | | | | | | • | | | |

Measuring adapter for BENNING CM 9

| 00 | Measuring adapter, single-phase, shock-proof plug/coupling, conductors led through individually and with double insulation | Measurement: IPE by means of differential current/direct measurement method, load current | 044131 | | • |
|----|---|---|--------|--|------------------|
| | Measuring adapter three-phasig, 16 A CEE 5-pin, conductors led through individually and with double insulation | Measurement: IPE by means of differential current/direct measurement method, load current | 044127 | | • |
| ۴ | Measuring adapter three-phasig, 32 A CEE 5-pin, conductors led through individually and with double insulation | Measurement: IPE by means of differential current/direct measurement method, load current | 044128 | | • |
| | | | | | * figure similar |



Appliance Tester - testing of electrical and medical electrical device

PRCDs and arc welding equipment

Highlights of the new Appliance Testers BENNING ST 755/ST 760

PRCD testing - mobile personal protection



Complete and automatic testing of 2-pin and 3-pin PRCDs of types S, S+ and K.

RCD test - mobile subdistributions or construction site distributions



The testing of RCDs of types AC, A, F, B, B+ offers new options for application.

WLAN, RJ45 (LAN), USB, Bluetooth[®], SD card slot - modern interfaces



The integration of the appliance tester into a network and modern interfaces allow automatic updates and form the basis for integrating further functions and applications.

Testing of arc welding equipment (ST 760)

© PC Electric Gmb1



Standard-compliant and complete testing of arc welding equipment.

The testing of three-phase welding equipment requires the BENNING MA 2-16 adapter.

Touch-Screen - modern user interface



Touch gestures (dragging, swiping, tapping) are supported. Texts are entered via a softkey pad (QWERTZ). Icons stand for the different functions.

and customer-specific visual inspection



Besides the standard visual inspection (2 points), it is possible to create an enhanced (18 points) and a customer-specific (unlimited) visual inspection with individual requests.

Suitable for IT systems - testing in earthing systems



Generally, appliance testers require an earthed TN/TT system for mains voltage supply. By enabling the "On/Off slider", the new appliance testers can be used in an unearthed IT system.

BENNING

VDE 0701-0702 Appliance Tester BENNING ST 710

mobile and network-independent testing of electrical appliances

BENNING ST 710

battery-operated appliance tester for mobile testing of electrical devices

- testing in compliance with DIN VDE 0701-0702, ÖVE/ÖNORM E 8701, **NEV, NEN 3140**
- · easy operation by means of three keys
- · quick complete testing within 10 seconds
- · mobile testing can be made network-independently

Application

Safety-related testing of electrical devices/work equipment such as e.g. electrical devices/tools with ON/OFF switch, motorized equipment, lamps, cable reels, multiple distributors and household appliances. The protective conductor current/contact current is measured by means of the alternative leakage current measurement method.

Features

- · automatic testing procedure for devices of class I, class II/III and line test
- testing of cable reels, multiple distributors and device connecting cables with rubber connector
- measuring result with "pass/fail" information
- limiting values preset in compliance with DIN VDE standard
- indication in case of incorrect operation and if the test sample is not switched on
- sufficient battery capacity for > 2500 test samples
- three-phase test objects can be tested by means of optional measuring adapter

Measuring functions

- · protective conductor resistance with a testing current of 200 mA DC and automatic polarity reversal
- · insulating resistance with a testing voltage of 500 V DC
- protective conductor current and contact current by means of alternative leakage current measurement method
- voltage measurement on external shock-proof socket (L-N, L-PE, N-PE)



Appliance Tester

| •• | |
|---|--|
| | BENNING ST 710 |
| display | graphic display |
| protective conductor resistance (RPE) | 0.05 Ω - 20 Ω |
| insulation resistance (Riso) | 0.1 MΩ - 20 MΩ (500 V DC) |
| protective conductor current/contact current by means of alternative leakage current measurement method (IEA) | 0.1 mA - 20 mA |
| line test | RPE, RISO, short-circuit test and continuity test of phase conductor (L) and neutral conductor (N) |
| voltage | 50 V - 270 V |
| scope of delivery | carrying case, test cable with alligator clip, appliance cable, batteries |
| item no. | 050308 |

Measuring range indications refer to ranges from highest resolution to the final measuring range value

Optional accessories

| | item no. |
|--|----------|
| TRUE RMS leakage current clamp BENNING CM 9 for the measurement of differential current, protective conductor current and load current of single-phase and three-phase loads (see page 19) | 044065 |
| | |
| measuring adapters for TRUE RMS leakage current clamp BENNING CM 9 | |
| single-phase, shock-proof plug/coupling (see page 26) | 044131 |
| three-phase, 16 A CEE-CEE, 5-pin (see page 26) | 044127 |
| three-phase, 32 A CEE-CEE, 5-pin (see page 26) | 044128 |
| See page 26 for further accessories | |

Ľ

L2 L3 Ν PE

Leakage current e.g. via the water conduits and

capacity of the washing

machine to earth

T)

Ø

VDE 0701-0702 Appliance Tester BENNING ST 725

testing of electrical appliances under operating conditions

BENNING ST 725

mains-operated and battery-operated appliance tester for mobile testing of electrical devices

- testing in compliance with DIN VDE 0701-0702. ÖVE/ÖNORM E 8701, NEV, NEN 3140
- guick testing within a few seconds
- all-in-one appliance tester and RCD tester in one single device
- unique testing of single-phase and three-phase devices under operating conditions

Application

Testing of devices with mains voltage-dependent switching elements/ mains-supply units/relays such as controlled devices/tools, devices of information and communication technology as well as of devices which can be tested completely with mains voltage only. In mains operating mode, the protective conductor current/contact current is measured by means of the required differential current/direct measurement method.

Features

- · measuring result with "pass/fail" information
- · limiting values preset in compliance with DIN VDE standard
- storage locations for 999 test samples
- · data transmission to the PC
- measured values support the creation of test certificates in MS Excel[®]
- · keys for storing, calling and printing the measured values

Measuring functions

- protective conductor resistance (200 mA pulsed testing current, max. 2 x 90 sec.)
- · testing of RCDs with 30 mA with indication of tripping time
- reduction of the ISO testing voltage to 250 V / 500 V
- mains operating mode: protective conductor current/contact current by means of differential current/direct measurement method (max. 2 x 5 min.)
- battery operating mode: protective conductor current/contact current by means of alternative leakage current measurement method
- · optional measuring adapters for passive/active testing of three-phase appliances with CEE connector (page 26)



ST 725



Scope of delivery





PT 1 044150



Measuring adapter MA 1-16 (044140), MA 1-32 (044141) (active) only for ST 725

Appliance Tester

| | BENNING ST 725 |
|--|--|
| display | graphic display |
| protective conductor resistance (RPE) | 0.05 Ω - 20 Ω |
| insulation resistance (Riso) | 0.1 MΩ - 20 MΩ (250 V/500 V DC) |
| protective conductor current/ contact current by means of - differential current - alternative leakage current - direct measurement method | 0.25 mA - 20 mA 0.25 mA - 20 mA 0.1 mA - 2 mA |
| line test | RPE, Riso, short-circuit test and continuity test of phase conductor (L) and neutral conductor (N) |
| testing current of RCD | 30 mA + 150 mA |
| tripping time | 10 ms - 500 ms |
| protective conductor current of three- phase test objects under operating conditions (optional) | 0.25 mA - 10 mA |
| voltage | 50 V - 270 V |

| | BENNING ST 725 |
|-----------------------|---|
| measured value memory | 999 storage locations |
| interfaces | micro USB for PC, PS/2 for printer BENNING PT 1 |
| scope of delivery | carrying case, test cable with alligator clip, mains connection cable, appliance cable, batteries, micro USB data cable, download software (CD) |
| item no. | 050316 |

Optional accessories

| | item no. |
|---|----------|
| measuring adapter for appliances with 3-pin/5-pin CEE connector (see page 26) | |
| measuring adapter BENNING MA 1-16, 5-pin, active (see page 26) | 044140 |
| measuring adapter BENNING MA 1-32, 5-pin, active (see page 26) | 044141 |
| | |
| Portable log printer BENNING PT 1 incl. serial PS/2 data cable | 044150 |
| See page 26 for further accessories | |

Appliance Tester BENNING ST 755, BENNING ST 760

testing of electrical appliances, medical electrical devices and welding equipment

Testing in compliance with DGUV V3, BetrSichV according to

- DIN VDE 0701-0702:2008 for electrical appliances (ÖVE/ÖNORM E 8701, NEV, NEN 3140)
- IEC/EN 62353 for medical electrical devices (VDE 0751-1:2015, ÖVE/ÖNORM E 8751-1)
- IEC/EN 60974-4 for welding equipment (only ST 760) (VDE 0544-4:2017, ÖVE/ÖNORM EN 60974-4)

BENNING ST 760 – standard-compliant testing of arc welding equipment

- measuring the crest value and TRUE RMS value of open-circuit voltage and contact current of the welding circuit
- testing the functionality of three-phase welding equipment via optional BENNING MA 2-16 measuring adapter
- scope of services of the BENNING ST 755

Features

- NEW! Testing of PRCDs (2-pin/3-pin) of types S, S+, K
- NEW! Testing of RCDs with nominal fault currents of RCD type AC, A, F, B, B+
- NEW! Interfaces: Wireless LAN, RJ45, USB, SD card slot and Bluetooth®
- NEW! Standard, enhanced and customer-specific visual inspections
- NEW! Testing of arc welding equipment (only ST 760)
- management of customers and equipment in databases with unambiguous ID no.
- creation and assignment of individual test procedures and intervals (risk assessment)
- · low operating costs, free updates via WLAN, LAN, USB
- touchscreen for gestures, softkey pad (QWERTZ), icons stand for the different functions, "On/Off slider" for enabling/disabling functions



Appliance Tester

| | BENNING ST 755 | BENNING ST 760 | | | |
|---------------------------------------|--|---|--|--|--|
| display | 5.7" capacitive color touchscreen | | | | |
| protective conductor resistance (RPE) | 0.1 Ω - 30 Ω (> 200 r | mA + 10 A test current) | | | |
| insulation resistance (Riso) | 0.1 MΩ - 100 MΩ (50 | V - 1000 V test voltage) | | | |
| protective conductor current (IPE) | 0.05 mA - 25 mA (differ | ential, direct, alternative) | | | |
| contact current (IBER.) | 0.05 mA - 25 mA (differ | ential, direct, alternative) | | | |
| testing of electrical appliances | • | • | | | |
| testing of PRCD types | • | • | | | |
| testing of medical electrical devices | • • | | | | |
| testing of welding equipment | - | • | | | |
| voltage/current | 1 V - 360 V | /0.1 A - 16 A | | | |
| effective power/apparent power | 20 W - | 4000 W | | | |
| interfaces | WLAN, Bluetooth®, 4 x | USB, Mini-USB, RJ45 | | | |
| dimensions/weight | 405 x 330 x 16 | 5 mm/ca. 5.0 kg | | | |
| scope of delivery | tester in break-proof case (IP 67), set of measuring leads/crocodile clips, 2-pin test cable, appliance cable, SD card | | | | |
| item no. | 050322 | 050324 | | | |
| See page 26 for further accessories | | g range indications refer to ranges from ution to the final measuring range value. | | | |

Optional accessories

| | Item no. |
|--|----------|
| PC software BENNING PC-Win ST 750-760 on CD-ROM incl. USB data cable | 047002 |
| 1D USB barcode scanner for 1D barcodes | 009369 |
| barcode labels with consecutive numeric representation (1000 pieces), further number ranges available | 756301 |
| test badges "next test" (300 pieces) | 756212 |

Professional PC Software BENNING PC-Win ST 750-760

helpful accessories for efficient testing

BENNING PC-Win ST 750-760

professional PC software for documentation

- management, documentation and evaluation of test results
- explicit database structure with customer, department and test sample ID
- import and export function via MS Excel[®]
- free software updates per download

test sample identification via barcode scanner/labels

- 1D-USB barcode scanner for reading 1D barcodes such as code 39, code 128, ...
- 1D/2D barcode scanner with USB or Bluetooth® interface for barcodes and QR codes, Data Matrix codes, ...
- PVC barcode labels with consecutive numbering on reels (reels of 1000 pieces), further number ranges available

test sample identification via RFID reader/RFID tags

- RFID reader for reading the UID no.
- · RFID tag, self-adhesive for attachment onto the housing
- · RFID tag, tag-type for attachment by means of cable ties
- · RFID tag, cable tie for attachment to the mains supply line

BENNING PT 1 portable direct thermal printer with Bluetooth®

- · ideal for printing test records rapidly on site
- compact dimensions (47 x 92 x 108 mm), with storage-battery mode

measuring adapter for three-phase loads

- BENNING MA 2-16 (active testing, also for welding equipment)
- · BENNING MA 3 (passive testing, also for CEE extension cables)
- triple CEE measuring adapter (passive testing, without function)



Optional accessories

| | item no. |
|---|----------|
| 1D/2D USB scanner for barcodes and QR/Data Matrix codes | 009373 |
| 1D/2D Bluetooth® scanner for barcodes and QR/Data Matrix codes | 009374 |
| industrial keyboard with USB interface | 044154 |
| wireless keyboard with USB receiver (4.2 GHz) | 044161 |
| multifrequency RFID reader with USB interface (125 kHz+13.56 MHz) | 009372 |
| RFID tag self-adhesive (125 kHz) 100 tags, Ø 18 mm | 044156 |
| RFID- tag cable tie (125 kHz) 100 tags, I x w: 30 x 15 mm, length of cable tie 200 mm | 044157 |
| RFID tag tag-type (125 kHz) 100 tags, I x w: 43 x 34 mm | 044158 |

| measuring adapter BENNING MA 2-16 (16 A CEE 5-pin) for active testing of three-phase loads with function RPE, RINSU, IPE/ICONT (alternative leakage current, differential current, direct method) and welding equipment measuring adapter BENNING MA 3 (16 A CEE 3-pin, 16 A/32 A CEE 5-pin) | 044160 |
|---|--------|
| measuring adapter RENNING MA 3 (16 A CEE 3 pin 16 A/32 A CEE 5 pin) | |
| for testing CEE extension cables (Rec Rinsu, lec/lcorr, functional test and phase sequence test) and single-/three-phased loads (passive) | 044159 |
| triple CEE measuring adapter 16 A 3-pin, 16 A/32 A 5-pin for passive testing of three-phase loads (RPE RINSU, IPE/ICONT (alternative leakage current measurement method) | 044147 |
| printer BENNING PT 1 with Bluetooth® | 044150 |
| roll of thermographic paper (20 pieces) | 044151 |


See page 26 for further accessories

Measuring Adapter for Appliance Tester BENNING ST 710, ST 725, ST 755 and ST 760

measuring adapter for leakage current clamp BENNING CM 9

| | Description | Product data | ltem no. | ST 710 | ST 725 | ST 755 ST 760 |
|----------------|---|--|----------|--------|--------|------------------|
| Measuring adap | ter for single-phase loads | | | | | |
| | Measuring adapter 16 A CEE 3-pin (passive testing) | Rpe, Riso, Ipe, Iber. | 044143 | • | • | • |
| | Messadapter 32 A CEE 3-polig (passive testing) | Rpe, Riso, Ipe, Iber. | 044144 | • | • | • |
| | Measuring adapter 4 mm stackable safety plug on shock-proof plug | Rpe, Riso, Ipe, Iber. | 044142 | • | • | |
| Measuring adap | ter for three-phase loads | | | | | |
| | Measuring adapter 16 A CEE 5-pin (passive testing with L1-L2-L3 bridged) | RPE, RISO, IPE/IBER. by means of alternative leakage current measurement method | 044122 | • | • | • |
| | Measuring adapter 32 A CEE 5-pin (passive testing with L1-L2-L3 bridged) | $\ensuremath{R}\xspace_{R}, \ensuremath{R}\xspace_{R}, \ensuremath{R}\xspace_{R}$ | 044123 | • | • | • |
| | Measuring adapter BENNING MA 1-16, 16 A CEE 5-pin (active testing under operating conditions) | RPE, IPE by means of direct measurement method | 044140 | | • | |
| el o) 🖗 | Measuring adapter BENNING MA 1-32, 32 A CEE 5-pin (active testing under operating conditions) | RPE, IPE by means of direct measurement method | 044141 | | • | |
| | Measuring adapter BENNING MA 2-16, 16 A CEE 5-pin (active testing under operating conditions or passive testing with L1-L2-L3 bridged), testing of 3-phase welding equipment | RPE, RISO, IPE/IBER. by means of alternative leakage current/differential current/direct measurement method | 044160 | | | • |

Measuring adapter for single-phase and three-phase loads



| Measuring adapter 3-fach 16 A/32 A CEE 5-pin (passive testing with L1-L2-L3 bridged) and 16 A 3-pin | RPE, RISO, IPE/IBER by means of alternative leakage current measurement method for three-phase loads | 044147 | · | • | • | |
|---|---|--------|---|---|---|--|
| Measuring adapter BENNING MA 3, 16 A/32 A CEE 5-pin (testing of CEE extensions cables and passive testing 3-phase loads, 16 A CEE 3-pin (active testing) | RPE, RISO, IPE/IBER (for three-phase loads only with alternative leakage current measurement method) extension cables with functional test/phase sequence test | 044159 | | • | • | |

TRUE RMS leakage current clamp BENNING CM 9 and measuring adapter

| Oppen | TRUE RMS leakage current clamp BENNING CM 9 with low-pass filter (LPF) | differential/protective conductor/load current of single-phase and three-phase loads (1 μA to 100 A AC) | 044065 | • | • | • |
|-------------------|--|--|----------|---|---|---|
| 6 | Measuring adapter single-phase, shock-proof plug/coupling, conductors led through individually and with double insulation | Ir∈ by means of differential and direct measurement method, load current | 044131 | • | | |
| | Measuring adapter three-phase, 16 A CEE 5-pin, conductors led through individually and with double insulation | ${\sf I}_{\sf PE}$ by means of differential and direct measurement method, load current | 044127 | • | • | • |
| ۴ | Measuring adapter three-phase, 32 A CEE 5-pin, conductors led through individually and with double insulation | Ire by means of differential and direct measurement method, load current | 044128 | • | • | • |
| Test cable for Bl | ENNING ST 755/ST 760 | | | | | |
| r= " | 2 m test cable (2-pin) with 4 mm test probe | Rpe, Riso, IBer. | 10150829 | | | • |
| O' | 5 m test cable (2-pin) with 4 mm test probe | Rpe, Riso, IBer. | 10154024 | | | • |
| Ceramic fuse | | | | | | |
| without figure | 16 A fuses packaging unit 10 pieces | fast-acting, rated current 16 A, breaking capacity 500 A, rated voltage 250 V, dimensions 5 $\rm x$ 20 mm | 10019440 | | • | |

Installation Tester - testing of stationary electrical installations

safety testing in compliance with the standard IEC 60364

Highlights of TRUE RMS Installation Testers BENNING IT 115/IT 130:

RCD testing – in distribution connection boxes, construction site power boxes, controls, ...



RCD testing can be carried out in four different versions for RCDs of types AC, A, F, B, B+ (Typ B, B+ only BENNING IT 130).



Voltage drop



The "voltage drop" test is intended to check whether a voltage in an electrical installation remains above an admissible value if the maximum nominal current of the upstream fuse is flowing in the circuit.

Power supply – via storage battery with integrated charging function



Voltage supply is ensured by storage batteries (NiMH) that are charged via an integrated charging current control. There is no need for external charging.

Testing in IT systems – in hospitals, railway companies, ...



Besides tests in TT/TN systems, it is also possible to carry out tests in IT systems (unearthed earthing systems). In IT systems, the BENNING IT 130 additionally measures the fault current at the first error.

Limit evaluation – for all IEC 60364 functions



Due to the selection of limits and testing parameters in all functions, the installation testers can evaluate the results and display a PASS/FAIL indication via LED. Parameters and limits can be set neutrally so that the test persons cannot evaluate the results. Thus, evaluation is reserved exclusively for experts.

PC software for logging and creation of reports – included in the standard scope of delivery (IT 130)



The PC software BENNING PC-WIN IT 130 is part of the vast accessories for the BENNING IT 130 and is intended for logging and the creation of reports. Up to 1800 measurements can be managed in a structure comprising four levels.

BENNING

Safety Instruments BENNING IT 101, IT 115 and IT 130

testing of electrical systems in compliance with the standards

BENNING IT 101

insulation and resistance measuring device

- measurement of the insulating resistance with testing voltages of 50 V, 100 V, 250 V, 500 V and 1,000 V
- measurement of polarization index (PI) and dielectric absorption rate (DAR)
- selectable limiting values for ISO measurement, green LED for "PASS", red LED for ▲ testing voltage/external voltage
- resistance measurement with a testing current of 200 mA for testing protective conductor connections with null balance of the measuring leads
- · switchable probe tip for triggering the measuring process
- internal memory for 100 measuring values per measuring function
- TRUE RMS voltage measurement with low-pass filter
- including case, switchable probe tip, silicone measuring leads, magnetic hook, alligator clips, rubber protective frame and batteries

BENNING IT 115, IT 130 TRUE RMS installation testers

Complete testing and efficient troubleshooting of electrical systems according to IEC 60364 with unambiguous "PASS"/"FAIL" indication by means of green/red LEDs

- measurement of the protective conductor line and of the equipotential bonding line with a testing current of 200 mA, with null balance of the measuring leads
- measurement of the insulation resistance with testing voltages of 50 V, 100 V, 250 V, 500 V and 1000 V
- line impedance and loop impedance measurement (optional without tripping of the RCD) with calculation of the shortcircuit current (PFC/PSC), sub-function: voltage drop
- testing of RCDs with nominal fault currents of 10/30/100/300/500/1000 mA by means of measurement of contact voltage (without tripping), tripping time and tripping current (ramp test)
- · voltage measurement with frequency and phase sequence test
- earthing measurement by means of three-wire measuring method (optional earthing kit)

IT 115

· delivery includes calibration certificate







Insulation and Resistance Measuring Device

| | BENNING IT 101 |
|-------------------------------------|---|
| indicating range | 4000 digit (illuminated) |
| low-impedance resistance | 0.01 Ω - 40 Ω |
| insulation resistance | 50 kΩ - 20 GΩ |
| resistance | 0.01 Ω - 40 kΩ |
| voltage | 0.1 V - 600 V AC TRUE RMS/DC |
| supplementary function | leakage current, polarization index (PI), dielectric absorption rate (DAR), automatic discharge function, null balance of the measuring leads |
| measured value memory | 500 measuring results |
| measuring category | CAT IV 600 V |
| item no. | 044033 |
| See page 30 for further accessories | Measuring range indications refer to ranges from highest resolution to the final measuring range value. |

TRUE RMS Installation Testers

| | BENNINT IT 115 | BENNING IT 130 | |
|-------------------------------------|-------------------------------|-------------------------|--|
| display | graphic display (illuminated) | | |
| low-impedance resistance/continuity | 0.01 Ω - 2000 Ω | | |
| insulation resistance | 10 kΩ - 1000 MΩ | | |
| line impedance/voltage drop | 0.01 Ω | - 10 kΩ | |
| loop impedance | 0.01 Ω | - 10 kΩ | |
| short-circuit current | 0.01 A - 200 kA | | |
| RCD testing | AC/A/F AC/A/F/B/B+ | | |
| phase sequence | • | | |
| voltage (TRUE RMS), frequency | 1 V - 550 V, (|) Hz - 500 Hz | |
| earth resistance | yes, by mear | ns of 044113 | |
| current (TRUE RMS) | | yes, by means of 044038 | |
| luminous intensity | | yes, by means of 044111 | |
| measured value memory | up to 1800 | | |
| interfaces | USB, RS 232 | | |
| logging software | • | | |
| item no. | 044104 | 044103 | |

TRUE RMS Installation Testers BENNING IT 115, IT 130

the perfect solution for efficient testing

Features

- all measuring functions can be selected directly by means of a rotary switch
- graphic display and help function with connecting diagram
- complete measuring result with measuring parameters, limiting value and symbols for "PASS"/"FAIL"
- current supply by means of 6 NiMH storage batteries (AA) with charger

Logging software with test log according to ZVEH BENNING PC-Win IT 130

- creation and transmission of installation structures to the BENNING IT 130 for efficient periodic testing
- download of measured values and logging by means of test reports and ZVEH test certificates

Additional functions BENNING IT 130

- testing of universal current-sensitive RCDs of type B/B+
- measured value memory covering four levels (object/block/fuse/measuring point) for up to 1800 measurements
- bidirectional USB/ RS 232 interfaces
- BENNING PC-Win IT 130 software included
- including "Commander" probe tip with "TEST" and "MEM" keys as well as bright LED measuring point illumination
- connection for barcode scanner for identifying the measuring point and renaming the storage location
- current measurement (TRUE RMS) by means of current clamp adapter (optional)
- illumination measurement by means of lux sensor (optional)



Optional accessories

| | item no. |
|---|----------|
| "Commander" probe tip* with "PASS"/"FAIL" indication by means of green/red LED, "TEST" key and bright LED measuring point illumination | 044155 |
| "Commander" test plug for shock-proof socket, with "PASS"/"FAIL" indication by means of green/red LED and "TEST" key | 044149 |
| earthing set for earthing measurement, 2 earth rods, 3 test cables (2 x 20 m, 1 x 4.5 m) | 044113 |
| measuring cable BENNING TA 5 40 m measurement cable with winder and strap | 044039 |
| CEE measuring adapter 16 A, 5-pin voltage/phase-sequence (rotary field), frequency | 044148 |
| * Included in the scope of delivery of the BENNING IT 130 | |

See page 30 for further accessories

Accessories for Insulation and Resistance Measuring Device/ Installation Testers BENNING IT 101, IT 115 and IT 130

professional accessories

| | Description | Product data | Item no. | IT 101 | IT 115 | IT 130 |
|-----------------|--|--|----------|--------|--------|--------|
| Stand-by case | | | | | | |
| actives. | Stand-by case size M dimensions: 240 x 180 x 70 mm | made of hard-wearing nylon fabric | 010913 | • | | |
| Measuring acces | Measuring accessories | | | | | |
| * | BENNING TA 1 crocodile clips, two pieces | Ø 4 mm plug-in technology, red/black, professional equipment, CAT III 1000 V | 044124 | • | | |
| 884 | BENNING TA 2 set of measuring leads, six pieces | Ø 4 mm plug-in technology, red/black, professional equipment, consisting of: measuring leads (silicone) CAT III 1000 V, test probes (Ø 4 mm measuring tip) CAT II 1000 V, crocodile clips CAT III 1000 V | 044125 | • | | |
| | BENNING TA 3 set of measuring leads, eight pieces | Ø 4 mm plug-in technology, red/black, professional equipment, CAT III 1000 V, consting of: measuring leads (silicone), test probes (slender measuring tip), claw clamps, crocodile clips | 044126 | • | | |
| | BENNING TA 4 magnetic holder, three pieces | For attachment of multimeters to switching cabinets, machine and system parts. Consisting of: magnetic holder, adapter and belt | 044120 | • | | |
| | BENNING TA 5 40 m measuring cable | With practical winder and strap, for the measurement of protective and bonding conductors, connection \emptyset 4 mm test socket/plugs | 044039 | • | • | • |
| | Ø 4 mm safety measuring leads with 2 mm measuring tip, two pieces | Red/black, L = 1.40 m, with Ø 2 mm measuring tip (L = 18 mm), CAT IV 600 V/ CAT III 1000 V (with protective caps), CAT II 1000 V (without protective caps) | 044146 | • | | |
| | Ø 4 mm safety measuring leads with 4 mm measuring tip, two pieces | Red/black, L = 1.40 m, with Ø 4 mm measuring tip (L = 18 mm), CAT IV 600 V/ CAT III 1000 V (with protective caps), CAT II 1000 V (without protective caps) | 044145 | • | | |
| | earthing set for earthing measurement | Three-wire measung method. Consisting of: 2 earth rods, 3 test cables (2 x 20 m, 1 x 4.5 m) | 044113 | | • | • |
| | CEE measuring adapter 16 A CEE 5-pin | For measurement of voltage/phase-sequence (rotary field), frequency | 044148 | | • | • |
| | "Commander" test plug for shock-proof socket | with "TEST"/"MEM" key, LED measuring point illumination, "PASS"/"FAIL" indication by means of green/red LED, PE contact electrode for protective conductor connection | 044149 | | • | • |
| | "Commander" probe tip switchable | with "TEST"/"MEM" key, LED measuring point illumination, "PASS"/"FAIL" indication by means of green/red LED, PE contact electrode for protective conductor connection (BENNING IT 130 delivery including "Commander" probe tip!) | 044155 | | • | • |

Current Clamp Adapters

| | BENNING CC 3 AC/DC current clamp adapter | basic accuracy: 1 % - 2 % current: 0.2 A - 300 A AC/DC output: 1 mV/10 mV AC/DC per 1 A AC/DC | | | • |
|--------------------|---|--|--------|--|---|
| | BENNING CFIex 1 AC current transformer | basic accuracy: 3 % current: 0.3 A - 3000 A AC output: 100 mV/10 mV/1 mV AC per 1 A AC | 044068 | | • |
| illumination sense | sor | | | | |
| | BENNING Luxmeter type B | Adapter, measuring range 0.01 lx - 20 klx, accuracy 5 %. Precise illumination measurement for the planning and testing of interior and exterior lighting | 044111 | | • |

Barcode scanner



packaging unit 10 pieces

| Builden Stanne | | | | | | |
|----------------|--|--|--------|---|---|---|
| | Barcode scanner with PS/2 connector | For identifying the measuring point and renaming the storage location | 009371 | | | • |
| Ceramic fuse | | | | | | |
| without figure | 315 mA fuses packaging unit 10 pieces | superfast-acting (FF), breaking capacity 10 kA, rated voltage 1000 V, dimensions 6.3 x 32 mm | 757213 | • | | |
| without figure | 315 mA fuses | F1, medium slow-acting (M), rated voltage 250 V, dimensions 5 x 20 mm | 757211 | | • | • |

Installation Tester for photovoltaic systems and curve tracer

testing in compliance with DIN EN 62446 and DIN EN 61829

Installation Tester for photovoltaic systems and curve tracer BENNING PV 2 SET

Easy operation – with insolation and temperature sensors



The BENNING PV 2 excels by its easy operation and compact design. Once the BENNING PV 2 is connected to the PV string and coupled with the BENNING SUN 2, measurement can be started at the touch of a button.



Wireless connection – with insolation and temperature sensors



Only in combination with an insolation and temperature sensor (BENNING SUN 2) it is possible to evaluate the measuring results

in detail. Insolation and temperature have a direct impact on the short-circuit current and the performance of a PV system.

BENNING PV Link app – for Android devices with NFC interface



The free BENNING PV Link app enables the direct presentation of measured values and characteristic curves. The STC curve comparison is made via the integrated PV module database containing approx. 14000 module types. The app is available for BENNING PV 2 in the Android Playstore.


Testing electrical safety – DIN EN 62446



Measurements of connections (low-impedance measurements), of open-circuit voltages up to 1 kV, of shortup to 15 A DC and o

circuit currents up to 15 A DC and of the insulating resistance are standard functions for PV systems. The BENNING PV 2 offers independent and permanent Rinsu measurement for troubleshooting with testing voltages of 250 V, 500 V and 1000 V DC.

Curve / performance measurements – DIN EN 61829



On the display of the BENNING PV 2, the curve measurement displays current and voltage at the MPP as well as the filling factor, open-circuit voltage and short-circuit current. The curves are displayed by means of the BENNING SOLAR Manager or with the BENNING PV Link app.

Documentation and evaluation – of PV systems



The PC software BENNING SOLAR Manager is intended for visualizing and evaluating the results, the recorded I-V curve

and the power curve of the BENNING PV 2. It displays the measured curve as well as the curve converted to STC. The nominal curve is selected from the module database and taken as a reference. Documents, drawings and reports of the PV system and its components can be archived and documented.



Installation Tester for photovoltaic systems BENNING PV 1-1, BENNING PV 2

commissioning tests, periodic inspection and curve measurement of PV systems

32

BENNING PV 1-1, PV 2

installation tester for photovoltaic systems for testing grid-connected PV systems

- tests in compliance with DIN EN 62446 standard
- easy operation by means of keys with AUTO test procedure
- quick testing within a few seconds only
- \bullet safe contacting by means of PV connectors

Features

- automatic test procedure for Uo/c, Is/c and Riso
- \bullet insulating resistance with a testing voltage of 250 V, 500 V and 1000 V
- memory of measured values with real-time clock (date/time stamp)
- wireless connection BENNING SUN 2 (insolation/ temperature)
- USB interface and download software BENNING SOLAR Datalogger
- delivery including calibration certificate

BENNING PV 2

installation tester for photovoltaic systems and curve tracer

- testing in compliance with DIN EN 62446 and DIN EN 61829 for documenting the performance data
- measurement of the current-voltage characteristic (I-V) and the power characteristic (P-V)
- indication of Umpp, Impp and filling factor (FF)

Features

- automatic test procedures for curve measurement and RISO testing
- separate Riso measurement via 4 mm measuring leads
- optional PC software BENNING SOLAR Manager for the creation of test reports and documentation of characteristics
- free app BENNING PV Link (requires Android device with NFC)



Installation Tester for PV systems

| | BENNING PV 1-1 | BENNING PV 2 | |
|---|---|--------------------------|--|
| display | graphic display (illuminated) | | |
| protective conductor resistance (RPE) | 0.05 Ω · | – 199 Ω | |
| open-circuit voltage with polarity (Uo/c) | 5 V – 10 | 00 V DC | |
| short-circuit current (ls/c) | 0.5 A – | 15 A DC | |
| insulating resistance (Riso) | 0.05 MΩ – 199 MΩ (250/500/1000 V) | | |
| insulating resistance (2-pin) | - | 0.05 MΩ – 300 MΩ | |
| AUTO measurement 1 | +/-, Uo/s, Is/c, Riso +/-, Uo/s, Is/c | | |
| AUTO measurement 2 | - characteristic (I-V, | | |
| AUTO measurement 3 | - | measurement 1 + 2 | |
| DC string current/AC current | 0.2 A - 40 A DC/AC (by r | means of BENNING CC 3) | |
| insolation | $100 \text{ W/m}^2 - 1250 \text{ W/m}^2 \text{ by}$ | (means of BENNING SUN 2) | |
| PV module/ambient temperature | -30 °C - +125 °C (by m | eans of BENNING SUN 2) | |
| voltage (2-pin) | 30 V – 44 | 0 V AC/DC | |
| measured value memory | 200 999 | | |
| interfaces | USB/Funk USB/Funk/NFC | | |
| dimensions/weight | 270 x 115 x 55 | mm/ca. 2.6 kg | |
| item no. | 050421 | 050422 | |

Scope of delivery

| | BENNING PV 1-1 | BENNING PV 2 |
|----------|--|--|
| scope of | carrying case, measuring/MC4/Sunclix software (CD), micro USB | leads, batteries, alligator clips, download cable, calibration certificate |
| delivery | - | demo version of PC software BENNING SOLAR Manager (CD) |

Optional accessories

| | item no. |
|--|----------|
| PC software BENNING SOLAR Manager license key for a single-user license | 050423 |
| Bag with neck strap for PV suitable for BENNING PV 1-1/PV 2 | 050426 |

See page 34 for further accessories

Insolation and Temperature Measuring Instrument BENNING SUN 2

professional accessories, PC software and free app

BENNING SUN 2

insolation and temperature measuring instrument

- insolation measurement (W/m²) via PV reference cell
- PV module temperature and ambient temperature (°C)
- · digital compass and inclinometer
- with wireless transmission (433 MHz) to the BENNING PV 1-1/ PV 2, the current insolation and temperature values of the measuring result are stored
- data logger (5000 data records), including insolation and module/ ambient temperature
- integrated real-time clock with date/time stamp
- USB interface and download software for the preparation of test certificates in MS Excel®

BENNING SOLAR Manager PC-Software

- · documentation of the I-V and P-V characteristics measured by the **BENNING PV 2**
- STC conversion/ comparison with characteristic via integrated PV module database
- demo version available for download can be used free of charge for 14 days


App BENNING PV Link

- · displaying of curves via Android device with NFC interface
- STC comparison with characteristic via integrated PV module database
- available free of charge for the BENNING PV 2 in the Android Playstore

BENNING SOLAR Datalogger download software

- download of measured values from the BENNING PV 1-1/PV 2 in CSV format
- further processing of measured values possible in MS Excel® möglich



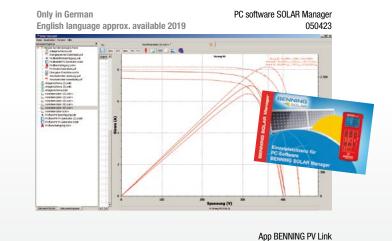

GET IT ON

Google Play

Only in German English language approx. available 2019

Recommended accessories

| | Item No. | BENNING PV 1-1 | BENNING PV 2 | | | | |
|---|--|----------------|---|--|--|--|--|
| BENNING SUN 2 | 050420 | recommended | necessary for curve measurement | | | | |
| PC software BENNING SOLAR Manager | 050423 | - | necessary for documentation | | | | |
| Temperature sensor (suction cup) (SUN 2) (see page 34) | 050424 | recommended | recommended | | | | |
| PV module holder (SUN 2) (see page 34) | 050425 | recommended | recommended | | | | |
| AC/DC current clamp adapter BENNING CC 3 (see page 34) | 044038 | recommended | recommended | | | | |
| 40 m measuring lead BENNING TA 5 (see page 34) | 044039 | recommended | recommended | | | | |
| Download software BENNING SOLAR Datalogger | download of free measured values in m CSV format | | download of measured values in CSV format | | | | |
| App BENNING PV Link for presentation of characteristic | free | - | requires Android devices with NFC interface | | | | |

Insolation and temperature measuring instrument

| | _ |
|---|--|
| | BENNING SUN 2 |
| insolation | $100 \text{ W/m}^2 - 1250 \text{ W/m}^2$ |
| PV module/ambient temperature | -30 °C − +125 °C |
| compass bearing | 0° – 360° |
| inclinometer (module/roof pitch) | 0° – 80° |
| real-time clock | date/time stamp |
| measured value memory for W/m ² and °C | 5000 data records |
| interface/radio range | 1 x USB/approx. 30 m for unobstructed view conditions |
| dimensions/weight | 150 x 80 x 33 mm/350 g |
| scope of delivery | case, protective rubber holster, module/ambient temperature sensor, batteries, USB cable, download software (CD), calibration certificate |
| item no. | 050420 |
| San name 24 for further apparenties | |

See page 34 for further accessories

Measuring range indications refer to ranges from highest resolution to the final measuring range value

Insolation.

Accessories for Testers for Photovoltaic Systems BENNING PV 1-1, PV 2, SUN 2

professional accessories

V 2 SET PV 1-1 Description **Product data** Item no. SUN 2 ۷2 ۷2 PC software License key for a single-user license. Documentation of the PV system as well as of I-V and P-V characteristic curves STC calculation and comparison **BENNING SOLAR Manager** 050423 of characteristic curves via integrated PV module database. Only in German. English language approx. available 2019. **Current Clamp Adapter BENNING CC 3** For DC operating currents and AC currents up to 40 A. 044038 AC/DC current clamp adapter Basic accuracy : 1 % - 2 % Stand-by cases Stand-by case size S with belt loop on the back, made of hard-wearing nylon fabric 010912 dimensions: 220 x 110 x 50 mm Bag with neck strap for PV Allows hands-free working on measuring points that are dangerous or difficult dimensions: 280 x 135 x 50 mm to access With shoulder strap and large viewing window for easy operation of 050426 (without device) the keys and viewing the display. Made of hard-wearing nylon fabric. Measuring accessories **BENNING TA 1** Ø 4 mm plug-in technology, red/black, professional equipment, 044124 crocodile clips, two pieces CAT III 1000 V Ø 4 mm plug-in technology, red/black, professional equipment, consisting of: **BENNING TA 2** measuring leads (silicone) CAT III 1000 V, test probes (Ø 4 mm measuring tip) 044125 set of measuring leads, six pieces CAT II 1000 V, crocodile clips CAT III 1000 V Ø 4 mm plug-in technology, red/black, professional equipment, **BENNING TA 3** CAT III 1000 V, consting of: 044126 set of measuring leads, eight pieces measuring leads (silicone), test probes (slender measuring tip), claw clamps, crocodile clips **BENNING TA 5** With practical winder and strap, for the measurement of protective and 044039

Temperature sensor

40 m measuring cable

| AT | Temperature sensor with suction cup | For attachment of the module temperature sensor to the module back Contact sensor version. Cable length 2 m | 050424 | | • | |
|-----------------|--|--|--------|--|---|--|
| PV module holde | r | | | | | |
| Ň, | PV module holder | For safe attachment of the SUN 2 to the PV module | 050425 | | • | |

bonding conductors, connection Ø 4 mm test socket/plugs

Ceramic fuse

| without figure | without figure500 mA fuses packaging unit 10 piecesfast-acting, breaking capacity 1 kA, rated voltage 1000 V, dimensions 6.3 x 32 mm | | 749771 | • | • | | • | |
|----------------|--|--|--------|---|---|---------|-----------|--|
| | | | | | | * figur | e similar | |

Seminars, demonstration cases for practice-oriented application

recommendation of the workshop equipment

Seminars

For further information on our seminars, visit our website at www.benning.de/seminare-de.html.

- We offer seminars with regard to the following topics:
- Training on the appliance testers BENNING ST 710/ST 725/ST 750 A/ST 755 or ST 760 (appliance tests)
- Training on the installation testers BENNING IT 115/IT 130 (installation tests)
- Training on the PV measuring instruments BENNING PV 1-1/PV 2/SUN 2 (PV system tests)

For registration/date arrangements regarding training courses on BENNING testers and measuring instruments, please contact: Training management · Tel. +49/ (0) 2871 / 93 557 · E-Mail: trainingcenter@benning.de

BENNING DB 1 demonstration case for testing and measuring of primary quantities of electrical engineering

 suited for teaching and education purposes, training courses and product presentations

BENNING DB 2 demonstration case for practice-oriented training concerning installation testers

• portable case for simulation of electrical systems confirming to standards according to IEC 60364



| Required test and measurement | Tester/meter complying with standard | Single unit version I | Single unit/device combination version II | Single unit/device combination version III | | | |
|---|---|---|---|--|--|--|--|
| For enterprises of electrical engineer-craft according to Electricity Association | | | | | | | |
| two-pole voltage tester | IEC/EN 61243-2 | DUSPOL [®] analog item no. 050261 | DUSPOL [®] expert item no. 050262 | DUSPOL [®] digital item no. 050263 | | | |
| voltage (min. 600 V) and current meter (min. 15 A) | IEC/EN 61010-1 IEC/EN 61010-2-033 | MM 2 item no. 044028 | MM 6-2 + CC 1 item no. 044087 + 044037 | MM 12 + CC 1 item no. 044088 + 044037 | | | |
| current clamp meter | IEC/EN 61010-1 IEC/EN 61010-2-032 | CM P2 item no. 044679 | CM 2 item no. 044035 | CM 12 item no. 044680 | | | |
| insulation tester | IEC/EN 61557-2 | IT 101 item no. 044033 | | IT 130 item no. 044103 | | | |
| loop ohmmeter | IEC/EN 61557-3 | | IT 115 item no. 044104 | | | | |
| resistance measuring device | IEC/EN 61557-4 | IT 101 item no. 044033 | 1011 110. 044 104 | | | | |
| grounding gauge | IEC/EN 61557-5 | | earthing set for IT 115 item no. 044113 | earthing set for IT 130 item no. 044113 | | | |
| RCD meter | IEC/EN 61557-6 | | IT 115 item no. 044104 | IT 130 item no. 044103 | | | |
| phase sequence indicator | IEC/EN 61557-7 | TRITEST [®] pro item no. 020052 | | | | | |
| instrument for testing electrical equipment (DIN VDE 0701-0702, DIN EN 62353) | IEC/EN 61557-16 | ST 725 item no. 050316 | ST 755 SET item no. 050323 | ST 760 SET | | | |
| measuring device for testing arc welding equipment (DIN EN 60974-4) | IEC/EN 61557-16 | | | item no. 050325 | | | |

Additional recommendation of BENNING

| differential current clamp for error current determination in electric equipment and systems | IEC/EN 61557-13 IEC/EN 61010-1 IEC/EN 61010-2-032 | CM 9 item no. 044065 | CM 9 item no. 044065 | CM 9 item no. 044065 |
|--|---|--|--|---|
| mA current clamp for measuring signal currents (4 to 20 mA DC), troubleshooting in electrical installations | IEC/EN 61010-1 IEC/EN 61010-2-032 | CM 11 item no. 044067 | CM 11 item no. 044067 | CM 11 item no. 044067 |
| continuity tester | IEC/EN 61010-1 | DUTEST [®] pro item no. 050156 | DUTEST [®] pro item no. 050156 | DUTEST [®] pro item no. 050156 |
| illumination sensor | | | | Luxmeter type B for IT 130 item no. 044111 |

BENNING

BENNING Elektrotechnik und Elektronik GmbH & Co.KG factory I (administration): Münsterstraße 135-137 · D-46397 Bocholt factory II (production/repairs): Robert-Bosch-Straße 20 · D-46397 Bocholt Tel.: +49 / (0) 28 71/93-111 · Fax +49 / (0) 28 71/93-429 www.benning.de · E-Mail: duspol@benning.de



.....

DUSPOL